



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AIRWELL RC4 900087. You'll find the answers to all your questions on the AIRWELL RC4 900087 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AIRWELL RC4 900087
User guide AIRWELL RC4 900087
Operating instructions AIRWELL RC4 900087
Instructions for use AIRWELL RC4 900087
Instruction manual AIRWELL RC4 900087

REMOTE CONTROL



PROGRAMMING AND OPERATING MANUAL



[You're reading an excerpt. Click here to read official AIRWELL RC4 900087 user guide](http://mypdfmanuals.com/dref/757915)
<http://mypdfmanuals.com/dref/757915>

Manual abstract:

The temperature setting is shown in degrees centigrade. **I FEEL/ROOM TEMP FUNCTION OPERATION** Press button (3) to activate the I FEEL function. Thermometer sign will appear on the LCD operation display (13). Select suitable temperature setting. Make sure that the remote control unit is aimed at the air conditioner, with the I FEEL sensor (14) in front. Prevent the I FEEL sensor from being affected by heat sources such as lamps, heaters, direct sun, etc. or from being directly affected by the air conditioner air flow. These may cause the sensor to transmit the Wrong temperature data, thereby disturbing the performance of the I FEEL function. By pressing on ROOM temperature, the measured room temperature and the room temperature sign will be displayed.

To cancel the ROOM Temperature display press on one of the following: Press again on ROOM temperature button (3).

Change of MODE button (2) Note: Room temperature range is between 6 and 36 in 1 increments. Display should show "HI" or "LO" to represent temperature that is above 36 or below 6. **SLEEP FUNCTION** Press the SLEEP button (6) to select the SLEEP function. The sleep icon light while the sleep OFF time icon and the time which is 7 hours after current time blink as default. The default setting can be changed from 3 hr.

to 12 hr. by pressing up and down buttons HOUR+(11) and HOUR-(12) respectively. (The sleep timer will display the default time or the setting time plus the current time initially in the display). For example: current time is 23:00 and the sleep mode is set, the sleep mode OFF time will be 6:00. If the sleep off time is set to 10 hr, the sleep mode OFF time will be 9:00.

All other timers will temporarily be suspended during the activation of the sleep timer. The other timers will resume operation at the end of the SLEEP time.

To cancel the SLEEP function press one of the following: START/STOP button (1) SLEEP button (6) **NOTE:** In some models the SLEEP icon lights only and the OFF time is set for seven hours as default. **3 TIMER OPERATION** There are four timers that can be selected on the remote control. Two daily timers (designated as T1,T2),and two optional weekend timers (designated as WKT1,WKT2).Each timer can be selected by pressing TIMER button (11).To set each timer use time adjust up and down buttons Hour+(18) and Hour-(19) respectively. SET button (10) to enable the timer and/or CLEAR button (12) to disable the timer. Indicator (E)on the air conditioner will light up during timer operation. **NOTE:** After a power, failure the timer operation is cancelled, timer indicator (E)on the air conditioner will blink, the unit will be automatically turned to stand-by mode and indicator (A) lights.

To resume the timer operation, follow the instructions below. **A. DAILY TIMER** The daily timers T1 and T2 can be set for ON and OFF separately for two different time periods. Once the timer is set it will resume operation when initiated. **B. WEEKEND TIMER (OPTIONAL)** The weekend timers WKT1 and WKT2 can be set for ON and OFF separately for two different time periods for two days only. It will be effective on the day of setting and on the day after only. At 24:00 on the second day, the WK timer will not be effective anymore and the daily timer will resume its effectiveness. WKT1-effective on the setting day WKT2-effective one day after the setting day. **NOTE:** 1.

During the weekend timer operation, the daily timers will be disabled. 2.The WK timers must be reactivated before every weekend. **C. SELECTING A TIMER** Press the TIMER button (11) to select a timer.

Each time the TIMER button (11) is pressed, one of the four following timer icons will appear on the LCD display. Press TIMER button to select daily timer T1. Press TIMER button to select daily timer T2. Press TIMER button to select weekend timer WKT1 Press TIMER button to select weekend timer WKT2 Icon 1 of Timer T1 will blink Icon 2 of Timer T2 will blink Icons 1 and WK will blink Icons 2 and WK will blink 4 **TIMER OPERATING MODES SETTING THE ON TIMER** Undertake the following steps after selecting a timer-T1,T2 or WKT1,WKT2,to set a timer for the start time of operation.



You're reading an excerpt. Click here to read official AIRWELL RC4 900087 user guide
<http://mypdfmanuals.com/dref/757915>