

**Fujitsu Air Conditioner Hardwired Remote Controller System Error Codes**

When EE:EE is displayed on remote control , press “Energy Save” & “Zone Control” buttons simultaneously for longer than 3 secs. The error code will then be displayed on the LCD.

Code	Fault
E0:00	Coms error - indoor to remote
E1:00	Coms error - indoor to outdoor
E2:00	Return air thermistor open circuit
E3:00	Return air thermistor short circuit
E4:00	Indoor coil thermistor open
E5:00	Indoor coil thermistor shorted
E6:00	Outdoor coil thermistor open
E7:00	Outdoor coil thermistor shorted
EA:00	Outdoor ambient thermistor open
Eb:00	Outdoor ambient thermistor shorted
Ec:00	Discharge pipe themistor open
Ed:00	Discharge pipe thermistor shorted
EE:00	High Pressure problem
EF:00	Discharge pipe temp. Problem - too high = short of gas

Press “Energy Save” & “Zone Control” buttons simultaneously for longer than 3 secs to return to normal operating mode.