

For Australian market only

Manual No. '14 · PAC-T-205

HYPER INVERTER PACKAGED AIR-CONDITIONERS

(Split system, air to air heat pump type)

CEILING CASSETTE-4 WAY TYPE

FDT60ZMXAVF

CEILING CASSETTE-4 WAY COMPACT TYPE FDTC50ZMXAVF

DUCT CONNECTED-LOW/MIDDLE STATIC PRESSURE TYPE FDUM50ZMXAVF 60ZMXAVF




CONTENTS

1. SPECIFICATIONS		4
(1) Ceiling cassette-4way type (FDT)		4
(2) Ceiling cassette-4way compact type (FDTC)		5
(3) Duct connected-Low/Middle static pressure type (F		6
2. EXTERIOR DIMENSIONS		8
(1) Indoor units		8
(2) Outdoor units	1:	2
(3) Wired remote control (Option parts)		3
3. ELECTRICAL WIRING		5
(1) Indoor units		5
(2) Outdoor units		9
4. NOISE LEVEL		0
5. CHARACTERISTICS OF FAN		
6. TEMPERATURE AND VELOCITY DISTRIBUTION		3
7. PIPING SYSTEM		
8. RANGE OF USAGE & LIMITATIONS		6
9. SELECTION CHART		9
9.1 Capacity tables		
(1) Ceiling cassette-4way type (FDT)		
(2) Ceiling cassette-4way compact type (FDTC)		
(3) Duct connected-Low/Middle static pressure type (F	[:] DUM) 30	0
9.2 Correction of cooling and heating capacity in relation to air flow rat	e control (fan speed) 32	2
9.3 Correction of cooling and heating capacity in relation to one way le	ngth of refrigerant piping 32	2
9.4 Height difference between the indoor unit and o	outdoor unit 32	2
10. APPLICATION DATA		
10.1 Installation of indoor unit		
(1) Ceiling cassette-4way type (FDT)		
(2) Ceiling cassette-4way compact type (FDTC)		
(3) Duct connected-Low/Middle static pressure type (F	-	
10.2 Electric wiring work installation		
10.3 Installation of wired remote control (option)		
10.4 Installation of outdoor unit		
11. OUTLINE OF OPERATION CONTROL BY MICROC		
11.1 Wired remote control		
11.2 Operation control function by the wired remote		
11.3 Operation control function by the indoor contro(1) Auto operation		
(2) Operations of functional items during cooling/heatir	וg84	4

(3)	Dehumidifying operation	84
(4)	Timer operation	85
(5)	Remote control display during the operation stop	86
(6)	Hot start (Cold draft prevention at heating)	86
(7)	Hot keep	86
(8)	Auto swing control	87
(9)	Thermostat operation	88
(10)	Filter sign	89
(11)	Compressor inching prevention control	89
(12)	Drain pump control	90
(13)	Drain motor (DM) control	90
(14)	Operation check/drain pump test run operation mode	90
(15)	Cooling, dehumidifying frost protection	
(16)	Heating overload protection	
(17)	Anomalous fan motor	92
(18)	Plural unit control - Control of 16 units group by one remote control	92
(19)	High ceiling control	92
(20)	Abnormal temperature thermistor (return air/indoor heat exchanger) wire/short-circuit detection	93
(21)	External input/output control (CnT or CnTA)	
(22)	Operation permission/prohibition	
(23)	Selection of cooling/heating external input function	96
(24)	Fan control at heating startup	
(25)	Room temperature detection temperature compensation during heating	97
(26)	Return air temperature compensation	
(27)	High power operation (RC-EX1A only)	97
(28)	Energy-saving operation (RC-EX1A only)	
(29)	Warm-up control (RC-EX1A only)	98
(30)	Home leave mode (RC-EX1A only)	98
(31)	Auto temp. setting (RC-EX1A only)	
(32)	Fan circulator operation (RC-EX1A only)	
(33)	The operation judgment is executed every 5 minutes (RC-EX1A only)	98
(34)	Auto fan speed control (RC-EX1A only)	
(35)	Indoor unit overload alarm (RC-EX1A only)	98
11.4	Operation control function by the outdoor control	99
(1)	Defrosting operation	99
(2)	Cooling overload protective control	
(3)	Cooling high pressure control	00
(4)	Cooling low outdoor temperature protective control	
(5)	Heating high pressure control	01
(6)	Heating overload protective control	
(7)	Heating low outdoor temperature protective control	01

(8)	Compressor overheat protection	
(9)	Current safe	102
(10)	Current cut	102
(11)	Outdoor unit failure	102
(12)	Serial signal transmission error protection	102
(13)	Rotor lock	
(14)	Outdoor fan motor protection	102
(15)	Outdoor fan control at low outdoor temperature	103
(16)	Refrigeration cycle system protection	103
(17)	DRED	104
12. MA	AINTENANCE DATA	105
12.1	Diagnosing of microcomputer circuit	105
(1)	Selfdiagnosis function	105
(2)	Troubleshooting procedure	108
(3)	Troubleshooting at the indoor unit	
(4)	Check of anomalous operation data with the remote control	
(5)	Inverter checker for diagnosis of inverter output	
(6)	Outdoor unit control failure diagnosis circuit diagram	
12.2	Troubleshooting flow	119
(1)	List of troubles	119
(2)	Troubleshooting	120
13. OF	PTION PARTS	164
	Wireless kit	
(1) I	FDT series (RCN-T-36W-E)	164
(2) I	FDTC series (RCN-TC-24W-ER)	
(3) I	FDUM series (RCN-KIT3-E)	168
13.2	Simple wired remote conrol (RCH-E3)	170
13.3	OA spacer (FDTC series)	176
13.4	Duct joint (FDTC series)	180
13.5	Filter kit (FDUM series)	

How to read the model name



1. SPECIFICATION

(1) Ceiling cassette-4way type (FDT)

tem Power sourc	Nominal coolir	ng capacity			I	ndoor unit FDT			tdoor unit SRC60ZMXA-S
20wer sourd	Nominal coolir	ng capacity	· · · · ·	l i					
		IU CADACITV		1.0.0.1			1 Phase 220-240V		
		<u> </u>	<u> </u>	kW			5.6 [1.1(Min.		
	Nominal heati	ig capacity	1 0 /	kW			6.7 [0.6(Min.		.)]
	Power		Cooling	1.3.47				52	
	consumption		Heating	kW	ļ			70	
	Max power co	nsumption						90	
	Running		Cooling					/ 7.2	
	current		Heating	A				/ 8.3	
Operation	Inrush current	max currer	1					15	
data	Power factor		Cooling	%	ļ			/ 96	
			Heating					/ 93	
	EER		Cooling	1				68	
	COP		Heating				3.	94	
	Sound power	evel	Cooling	1		60			64
	eeuna perrei		Heating						
	Sound pressu	e level	Cooling	dB(A)	P-Hi ·	46 Hi:33 Me	· 31 o · 30		54
	Sound pressu	elevei	Heating		F-III.•	+0 111.35 1016	. 31 L0.30		54
	Silent mode so	ound pressu	re level			_		C	ooling : 45 / Heating : 45
Sytorian -!!		+ v \\/:	Donth)		l	Jnit 246 × 840	× 840		640,200(+71)-000
:xterior aim	ensions (Heigh	i x vviatn x l	Jepth)	mm	F	Panel 35 × 950	× 950		640×800(+71)×290
Exterior app	bearance					Plaster Whi	te		Stucco White
Munsell co					(68)	Y8.9/0.2) near		(4	2Y7.5/1.1) near equivalent
Net weight	/			kg		UNIT 24 PANE		(1.	45
	r type & Q'ty			- ing		<u> </u>	9.0	RMT51	13MCE2 (Twin rotary type)× ⁻
	r motor (Startin	n method)		kW				1 10/131	Direct line start
	oil (Amount, typ			l					0.45 MA68
	(Type, amount		longth)		-		outdoor unit (incl. i	ho amount f	
		pre-charge	; iengtn)	kg					for the piping of : 15m)
Heat exchar Refrigerant o					Louver	fin & inner gro	oved tubing oillary tubes + Elec		ape fin & inner grooved tubing
					ļ			tronic expan	
an type & C		0				Turbo fan ×			Propeller fan ×1
an motor (Starting metho	a)		W	5	0 < Direct line	start >		34 < Direct line start >
Air flow			Cooling	m³/min	P-Hi · '	28 Hi:18 Me	:16 Lo:14		41.5
			Heating						39
	ternal static pro	essure		Pa		0			_
Outside air i	intake					Possible			—
Air filter, Qu	ality / Quantity				Pocke	t plastic net ×1	(Washable)		_
Shock & vib	ration absorbe				Rub	ber sleeve(for f	an motor)	Rub	ber sleeve(for compressor)
Electric heat	ter			W		_	,		_
	Remote contro	bl			(o	ption) wired :	RC-EX1A, RC-E5	, RCH-E3 v	vireless : RCN-T-36W-E
Operation	Room tempera	ature contro				, ,	Thermostat k		
control	Operation disp							_	-
							Overload protect	ion for fan m	notor
							Frost protecti		
Safety equip	oments						Internal thermos		
						Abr	normal discharge te		
									«0.8 O.U. φ 6.35 (1/4")
	Refrigerant pip	oing size (O	.D.)	mm		Gas line:			$\frac{0.8 \phi 12.7 (1/2")}{0.8 \qquad \phi 12.7 (1/2")}$
	Connecting m	othod		┝───┦				, 12.1 (1/2)X	
notallat!	Attached leng					Flare pipin	9		Flare piping
nstallation	0	110		m		_	Nooccom //	iquid 9 Or	
data	Insulation for p		1				Necessary (both I		lines)
	Refrigerant lin			m				.30m	
	Vertical height di	n. between O.	U. and I.U.	m		0m (Outdoor ur	0 /		.20m (Outdoor unit is lower)
	Drain hose					connectable VF			Holes size ϕ 20 x 5pcs
	, max lift height			mm	Bu	iilt-in Drain pun	ıp , 700		—
	ded breaker siz			A	<u> </u>		-		
	ed rotor ampe	,		A				.5	
nterconnec	ting wires Si	ze x Core ni	umber		1.5m	· · ·	cluding earth cable	e) / Termaina	al block (Screw fixing type)
P number						IPX0			IPX4
Standard ac	cessories				M	ounting kit, Dra	in hose	Drair	n elbow, Drain hole grommet
Option parts	S							-	
<u> </u>) The data are	neasured at	t the follov	ving con	ditions.		The pipe length is	7.5m.	
, T	, 					tomporatura			1
.	Item		r temperat		Outdoor air		Standar	ds	
Ľ	Operation	DB	W		DB	WB			4
	Cooling	27°C	19	Ϋ́C	35°C	24°C	AS/NZS 382	3.2011	
Γ	Heating	20°C	-	-	7°C	6°C	AU/INZO 302	0.2011	
		itioner is m	nufactura	d and to	sted in confer	mity with the IS	20		-
	2) This air-cond				oic chamber.				

(5) When wireless remote control is used, fan is 3 speed setting (Hi-Me-Lo) only.
(6) The operation data indicate when the air-conditioner is operated at 230V50Hz or 220V60Hz.

PJF000Z364

(2) Ceiling cassette-4way compact type (FDTC)

Item				Model	lr	ndoor unit FDT		ZMXAVF	tdoor unit SRC50ZMXA-S
Power sour					11		1 Phase 220-240V		
Fower Sour	Nominal coolin	a conocity (rango)	kW			5.0 [1.1(Min.		
								, <u>,</u>	/*
	Nominal heatin	<u> </u>	<u> </u>	kW			5.4 [0.6(Min.	·	.)]
	Power	F	Cooling					56	
	consumption		Heating	kW				45	
	Max power cor	<u> </u>						90	
	Running	F	Cooling					/ 7.5	
	current		Heating	A				/ 7.0	
Operation	Inrush current,	max current	t				,	15	
data	Power factor		Cooling	%			94	/ 95	
Jala	Fower lactor		Heating	70			94	/ 94	
	EER		Cooling				3.	21	
	COP		Heating	1 1			3.	72	
			Cooling						
	Sound power I	avel F	Heating			60			63
			Cooling	dB(A)	р Ці -	47 Hi:42 Me	· 36 Lo · 30		54
	Sound pressur								50
	Ciloret		Heating	┥╴┝	P-HI:4	47 Hi:42 Me	. 30 LU: 32	<u> </u>	
	Silent mode so	una pressur	e ievel					C	ooling : 45 / Heating : 45
-xterior dim	nensions (Height	х Width v Г)enth)	mm		Jnit 248 × 570			640×800(+71)×290
					F	Panel 35 × 700	× 700		
Exterior app	bearance					Plaster Whi	te		Stucco White
Munsell co					(6.8	Y8.9/0.2) near		(4.)	2Y7.5/1.1) near equivalent
Net weight	,			kg		UNIT 15 PANE		(45
	r type & Q'ty							RMT51	13MCE2 (Twin rotary type)×
	r motor (Starting	mothod)		kW					Direct line start
						—			
	oil (Amount, typ	,		l					0.45 MA68
	(Type, amount,	pre-charge	length)	kg					or the piping of : 15m)
Heat excha					Louver	r fin & inner gro			pe fin & inner grooved tubing
Refrigerant control						Ca	pillary tubes + Elec	tronic expan	ision valve
Fan type &	Q'ty					Turbo fan ×	:1		Propeller fan ×1
Fan motor (Starting method)		W	3	3 < Direct line	start >		34 < Direct line start >
	<u> </u>	,	Cooling			3.5 Hi : 11.5 I		1	40
Air flow			Heating	m³/min		3.5 Hi : 11.5 I		1	33
	ternal static pre		. iouniy	Pa	1 10.1	0			
	· · · · ·	Soure		га		-			
Outside air						Not possib			
	ality / Quantity					et plastic net ×1	, ,		
	oration absorber				Rub	ber sleeve(for f	an motor)	Rub	ber sleeve(for compressor)
Electric hea	iter			W		0			
)	Remote contro				(op	tion) wired : R	C-EX1A, RC-E5,	RCH-E3 wi	reless : RCN-TC-24W-ER
Operation	Room tempera	ture control					Thermostat b	oy electronic	s
control	Operation disp							_	
		,					Overload protect	ion for fan m	notor
							Frost protecti		
Safety equi	pments						Internal thermos		
						٨.	normal discharge to		
	Refrigerant pip	ing size (O.I	D.)	mm					< 0.8 O/U φ 6.35 (1/4")
			,					12.7(1/2") ×	0.8 φ 12.7 (1/2")
	Connecting me					Flare pipin	g		Flare piping
nstallation	Attached lengt	h of piping		m		-			_
data	Insulation for p						Necessary (both I	Liquid & Gas	lines)
	Refrigerant lin	e (one way)	length	m			Max	.30m	
	Vertical height dif			m	Max.2	0m (Outdoor u			.20m (Outdoor unit is lower)
	Drain hose					connectable VF			Holes size $\phi 20 \times 5pcs$
Drain numn	, max lift height			mm		Built-in Drain p			
	ded breaker size	<u></u>		A					
	ked rotor amper			A				.2	
		,	mbar			2 · 1 · · · ·			nal block (Caray fining to)
nterconnec	ung wires Siz	e x Core nu	niber		φ1.5r		including earth cal	ue) / Termall	nal block (Screw fixing type)
P number						IPX0			IPX4
Standard ad					M	ounting kit, Dra			elbow, Drain hole grommet
Option part	S						TC-OAS-E	, TC-OAD-E	
Note (1) The data are	neasured at	the follo	wing con	ditions.		The pipe length is	7.5m.	
(to you ough			1
	Item	Indoor air				temperature	Standar	ds	
	Operation	DB	W	В	DB	WB	5.0.100	-	1
	Cooling	27°C	19	°C T	35°C	24°C	AO /NIZO 0000	2.0011	
L L	Heating	20°C	-	- 1	7℃	6°C	AS/NZS 382	3.2011	
	i leaunu i								

(a) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
(4) Select the breaker size according to the own national standard.
(5) When wireless remote control is used, fan is 3 speed setting (Hi-Me-Lo) only.
(6) The operation data indicate when the air-conditioner is operated at 230V50Hz or 220V60Hz.

PJA003Z405

(3) Duct connected-Low / Middle static pressure type (FDUM)


				Model			FDUM	150ZMXAVF	
ltem					In	door unit FDU			door unit SRC50ZMXA-S
Power sour	се						1 Phase 220-24	0V 50Hz / 220V	60Hz
	Nominal coolin	ng capacity	(range)	kW				lin.)~ 5.6(Max.)	
	Nominal heatin	ng capacity	(range)	kW			5.4 [0.6(N	lin.)~ 6.3(Max.)	
	Power		Cooling					1.56	
	consumption		Heating	kW				1.70	
	Max power cor	nsumption						2.90	
	Running		Cooling					7.0	
	current		Heating	A				7.6	
Operation	Inrush current,	max currer	1				Ę	,	
data	Power factor		Cooling	%				95	
			Heating					96	
	EER		Cooling					3.62	
	COP		Heating					3.72	
	Sound power l	evel	Cooling			60			63
			Heating						E 4
	Sound pressur	e level	Cooling	dB(A)	P-Hi :	37 Hi: 32 Me:	29 Lo:26		54
			Heating						50
	Silent mode so	ouna pressu	ire ievei			_			ooling : 45 / Heating : 45
Exterior dim	nensions (Height	t x Width x	Depth)	mm		280 × 750 × 6	635		640×800(+71)×290
Exterior app	bearance								Stucco White
(Munsell co	olor)					_		(4.2	Y7.5/1.1) near equivalent
Net weight				kg		29		<u> </u>	45
Compresso	r type & Q'ty					_		RMT511	3MCE2 (Twin rotary type)×1
Compresso	r motor (Starting	g method)		kW		_			Direct line start
Refrigerant	oil (Amount, typ	e)		l		_			0.45 MA68
Refrigerant	(Type, amount,	pre-charge	e length)	kg	F	410A 1.5kg in	outdoor unit (in	cl. the amount fo	or the piping of : 15m)
Heat excha	nger				Louver	fin & inner gro			be fin & inner grooved tubing
Refrigerant	control					Ca	oillary tubes + E	lectronic expans	sion valve
Fan type &	Q'ty					Centrifugal fai	1 ×1		Propeller fan ×1
Fan motor (Starting method	(k		W	10	0 < Direct line	start >		34 < Direct line start >
Air flow			Cooling	m³/min	P-Hi ·	13 Hi:10 Me	· 9 1 0 · 8		40
-			Heating						33
	ternal static pre	essure		Pa	St	andard : 35 Ma	ax : 100		_
Outside air						Possible			_
	ality / Quantity					Procure loca			
	pration absorber				Rub	ber sleeve(for f	an motor)	Rubb	per sleeve(for compressor)
Electric hea	1			W					-
Operation	Remote contro				(1	option) wired :			vireless : RCN-KIT3-E
control	Room tempera						Thermost	at by electronics	
	Operation disp	olay							
								ection for fan me ction thermosta	
Safety equi	pments							lostat for fan mo	
						Abr		e temperature p	
									0.8 O.U. φ 6.35 (1/4")
	Refrigerant pip	oing size (O	.D.)	mm					$0.8 \phi \ 12.7 \ (1/2")$
	Connecting me	ethod				Flare piping			Flare piping
Installation	Attached lengt			m			3		
data	Insulation for p						Necessarv (ho	th Liquid & Gas	lines)
	Refrigerant lin	1 0	lenath	m				lax.30m	
	Vertical height dif			m	Max 2	0m (Outdoor ur			20m (Outdoor unit is lower)
	Drain hose					nnectable with			Holes size $\phi 20 \times 5 \text{pcs}$
Drain pump	, max lift height			mm		ilt-in Drain pun	. ,		-
I I	ded breaker size			A				_	
	ked rotor amper			A				6.2	
Interconnec	i	ze x Core n	umber		1.5m	m ² x 4 cores (li	ncluding earth c	able) / Termaina	l block (Screw fixing type)
P number						IPX0			IPX4
Standard ad	ccessories				M	ounting kit, Dra	in hose	Drain	elbow, Drain hole grommet
Option parts	s							Л-FL1EF	
Note (1) The data are	measured a	at the follo	wing con	ditions.				The pipe length is 7
Ì	ltem	Indoor ai	ir temperat	ure	Outdoor air	emperature	External sta		
	Operation	DB	W		DB	WB		or unit	Standards
ŀ	·								
ŀ	Cooling	27°C	19	0	35°C	24°C	35	Pa	AS/NZS 3823:2011
	Heating	20°C		-	7°C	6°C			
(i (i	 2) This air-condi 3) Sound level ir higher due to 4) Select the bree 5) When wireles 	ndicates the c ambient c eaker size a	e value in a onditions. according t	an anech o the ow	oic chamber. n national sta	During operation	on these values	are somewhat	

(6) The operation data indicate when the air-conditioner is operated at 230V50Hz or 220V60Hz.
(7) Static pressure of optional air filter "UM-FL1EF" is 5Pa initially.
(8) The external static pressure setting can be changed to 10-100Pa. (For RC-EX1A and RC-E5 only)

				Model			FDUM60	ZMXAVF	
ltem					Ir	ndoor unit FDU		1	door unit SRC60ZMXA-S
Power sour	се						1 Phase 220-240\	/ 50Hz / 220V	60Hz
	Nominal cooling ca			kW				.)~ 6.3(Max.)	
	Nominal heating ca	i î î	0,	kW				.)~ 7.1(Max.)]
	Power	_	Cooling					.75	
	consumption		Heating	kW				.00	
	Max power consum	· · · ·	0 "					.90	
	Running		Cooling					<u>.8</u>	
	current		Heating	А				15	
Operation	Inrush current, max							, 15 /99	
data	Power factor		Cooling Heating	%				/ 99	
	EER		Cooling					.64	
	COP		Heating					.83	
			Cooling				0.	.00	
	Sound power level		Heating			60			64
		(Cooling	dB(A)	_				
	Sound pressure lev	A F	Heating	~~~ 9	P-Hi : :	36 Hi:31 Me	:28 Lo:25		54
	Silent mode sound					_		C	ooling : 45 / Heating : 45
xterior dim	nensions (Height x W	/idth x D	epth)	mm		280 × 950 × 6	635		640×800(+71)×290
Exterior app	pearance								Stucco White
Munsell co	olor)							(4.2	Y7.5/1.1) near equivalent
Net weight				kg		34			45
	r type & Q'ty					_		RMT51	13MCE2 (Twin rotary type)×1
	r motor (Starting me	thod)		kW		-			Direct line start
	oil (Amount, type)			l		_			0.45 MA68
	(Type, amount, pre-	-charge I	length)	kg					or the piping of : 15m)
Heat excha	0				Louve	r fin & inner gro			pe fin & inner grooved tubing
Refrigerant							oillary tubes + Elec	tronic expan	
an type &						Centrifugal fai			Propeller fan ×1
an motor (Starting method)			W	13	30 < Direct line	start >		34 < Direct line start >
Air flow		(Cooling	m³/min	P_Hi · ·	20 Hi:15 Me	· 13 1 o · 10		41.5
		I	Heating	111 /11 111					39
Available ex	ternal static pressur	e		Pa	St	andard : 35 Ma	ax : 100		—
Outside air	intake					Possible			
Air filter, Qu	ality / Quantity					Procure loca	ally		_
	pration absorber				Rub	ber sleeve(for f	an motor)	Rubl	per sleeve(for compressor)
Electric hea	iter			W		_			_
Operation	Remote control				(option) wired :	RC-EX1A, RC-E	5, RCH-E3	wireless : RCN-KIT3-E
control	Room temperature	control					Thermostat I	by electronics	\$
	Operation display							_	
							Overload protect	tion for fan m	otor.
Safety equi	nments						Frost protecti		
oulory equi	phients						Internal thermos		
	1						normal discharge t		
	Refrigerant piping s		ור	mm					0.8 O.U. φ 6.35 (1/4")
			,					<u>∲ 12.7 (1/2")x</u>	D.8 φ 12.7 (1/2")
	Connecting method					Flare pipin	g		Flare piping
nstallation	Attached length of			m		_			_
data	Insulation for piping						Necessary (both		lines)
	Refrigerant line (on			m				.30m	
	Vertical height diff. bet	ween O.U	J. and I.U.	m		0m (Outdoor ur			20m (Outdoor unit is lower)
	Drain hose					nnectable with			Holes size ϕ 20 x 5pcs
	, max lift height			mm	Βι	uilt-in Drain pun	np , 600		_
	ded breaker size			A					
	ked rotor ampere)			A		<u> </u>		3.5	
	ting wires Size x (Core nur	nber		1.5m		ncluding earth cab	le) / Termaina	I block (Screw fixing type)
nterconnec						IPX0			IPX4
nterconnec P number					M	ounting kit, Dra			elbow, Drain hole grommet
nterconnec P number Standard ac							UM-	FL2EF	
nterconnec P number Standard ac Option part	S								
Interconnec IP number Standard ac Option part		sured at	the follow	ving con	ditions.				The pipe length is 7.8
Interconnec IP number Standard ac Option part	s 1) The data are meas		the follow			temperature	External static	pressure	
Interconnec IP number Standard ac Option part	s 1) The data are meas Item In			ure		temperature WB	External static of indoor		The pipe length is 7.9 Standards
Interconnec IP number Standard ac Option part	s 1) The data are meas Item In Operation	door air	temperat	ure B	Outdoor air	· · · · · · · · · · · · · · · · · · ·	of indoor	unit	Standards
Interconnec P number Standard ac Option part	s 1) The data are meas Item In Operation Cooling 2	door air DB	temperat W	ure B C	Outdoor air DB	WB		unit	


higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.
(5) When wireless remote control is used, fan is 3 speed setting (Hi-Me-Lo) only.
(6) The operation data indicate when the air-conditioner is operated at 230V50Hz or 220V60Hz.
(7) Static pressure of optional air filter "UM-FL2EF" is 5Pa initially.
(8) The external static pressure setting can be changed to 10-100Pa. (For RC-EX1A and RC-E5 only)

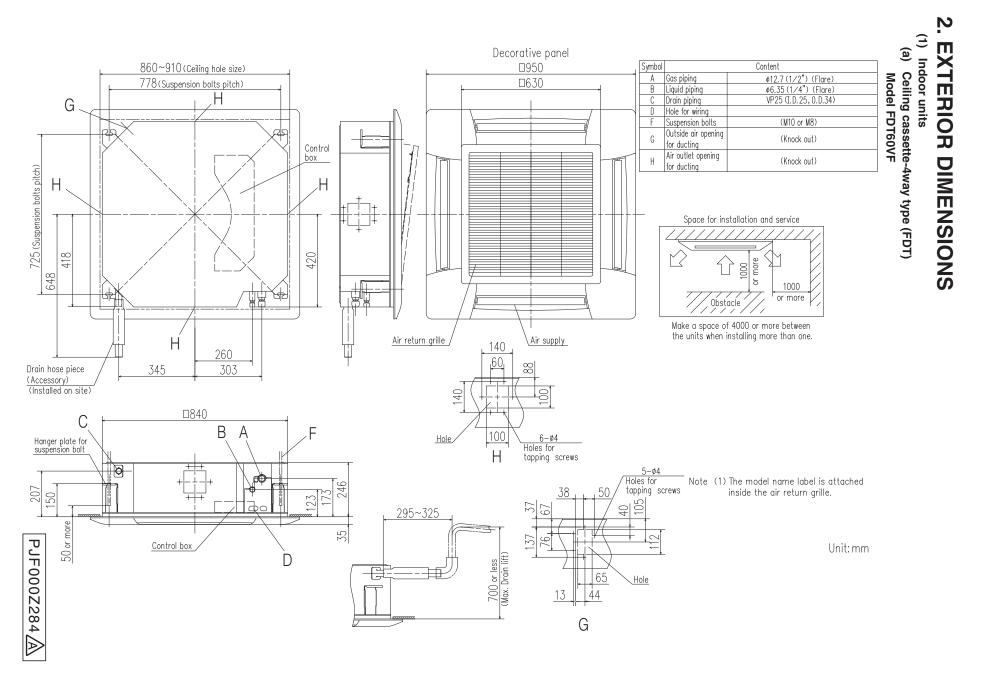


- 8 -

'14 • PAC-T-205

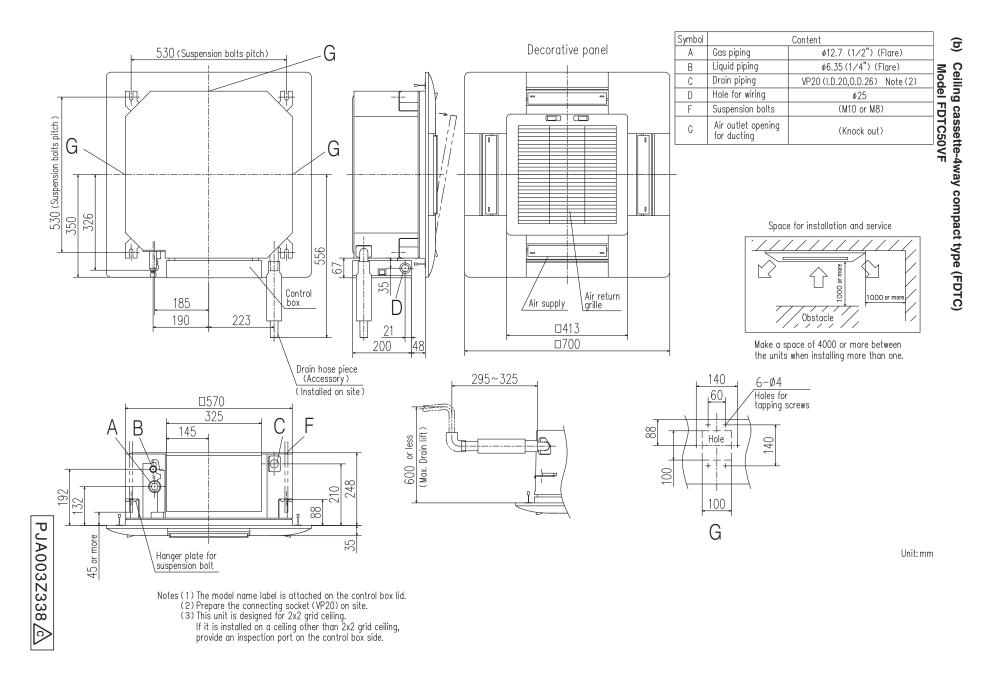


'14 • PAC-T-205

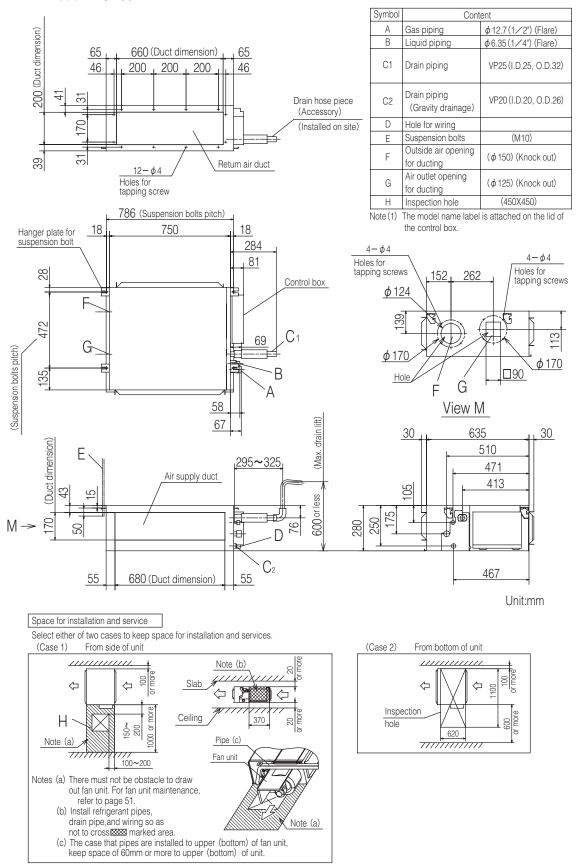

(c) Duct connected-Low / Middle static pressure type (FDUM) Model FDUM50VF

PJG000Z002 🛕

Model FDUM60VF

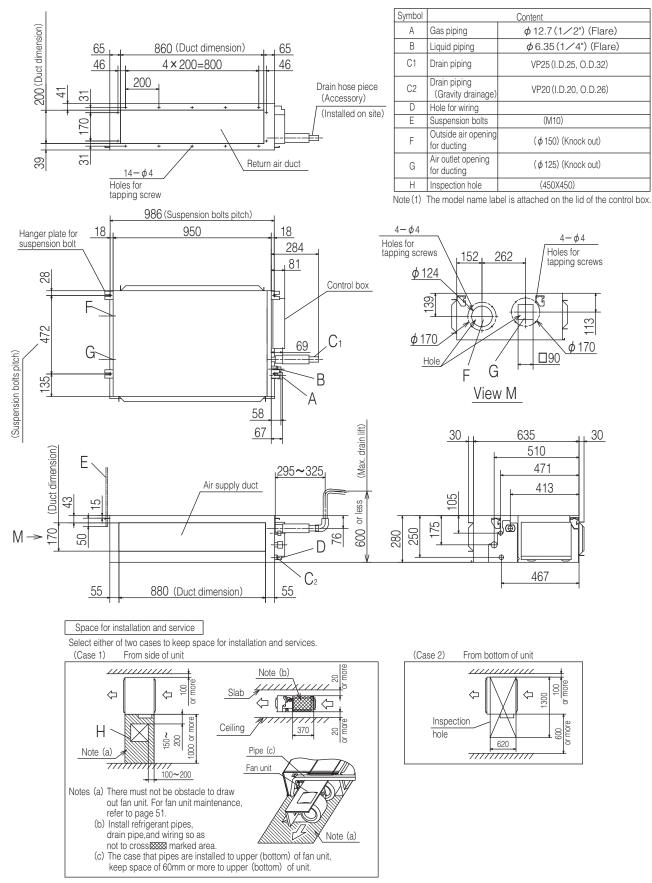



PJG000Z003 🛕

Symbol	Content		
А	Service valve connection (gas side)	¢12.7 (1∕2") (Fla	re)
В	Service valve connection (liquid side)	φ6.35 (1∕4") (Flar	e)
С	Pipe / cable draw-out hole		
D	Drain discharge hole	ϕ 20 × 5places	
Е	Anchor bolt hole	M10 × 4places	



- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the units height.
- (6) The model name label is attached on the right side of the unit.

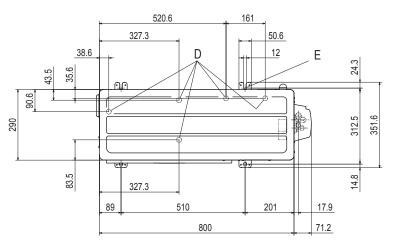


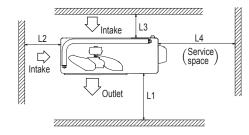


Minimum installation space

Examples of installation Dimensions	Ι	П	Ш	IV
L1	Open	280	280	180
L2	100	75	Open	Open
L3	100	80	80	80
L4	250	Open	250	Open



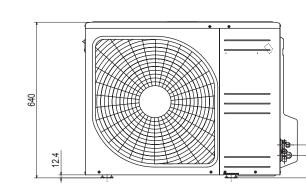

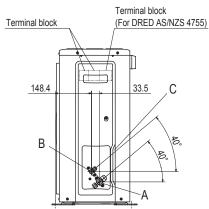


42.5

63

RCT000Z008

(3) Wired remote control (Option parts) Model RC-EX1A

Dimensions (Viewed from front)

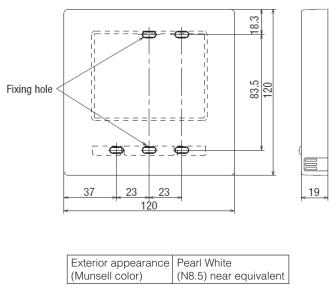


Cautions for selecting installation place

- (1) Installation surface must be flat and sufficiently strong. R/C case must not be deformed.
- (2) Where the R/C can detect room temperatures accurately This is a must when detecting room temperatures with the temperature sensor of R/C.
 - · Install the R/C where it can detect the average temperature in the room.
 - \cdot Install the R/C sufficiently separated from a heat source.
 - \cdot Install the R/C where it will not be influenced by the turbulence of air when the door is opened or closed.

Select a place where the R/C is not exposed to direct sunlight or blown by winds from the air conditioner or temperatures on the wall surface will not deviate largely from indoor air temperatures.

Installation space

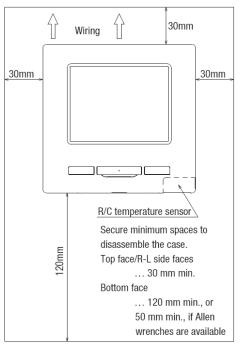



R/C cable: 0.3 mm² × 2-core

When the cable length is longer than 100 m, the max size for wires used in the R/C case is 0.5 mm^2 . Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

< 200 m	0.5 mm ² x 2-core
< 300 m	0.75 mm ² x 2-core
< 400 m	1.25 mm ² x 2-core
< 600 m	2.0 mm ² x 2-core

Adapted to RoHS directive




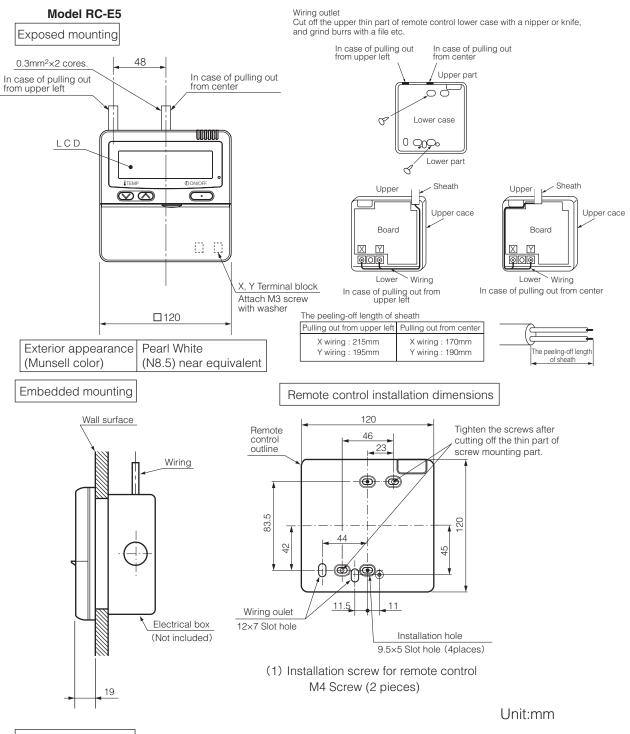

Wiring specifications

(1) If the prolongation is over 100m, change to the size below. But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.


Length	Wiring thickness
100 to 200m	0.5mm ² ×2 cores
Under 300m	0.75mm ² ×2 cores
Under 400m	1.25mm ² ×2 cores
Under 600m	2.0mm ² ×2 cores





(a) Indoor units

Ceiling cassette-4way type (FDT) Model FDT60

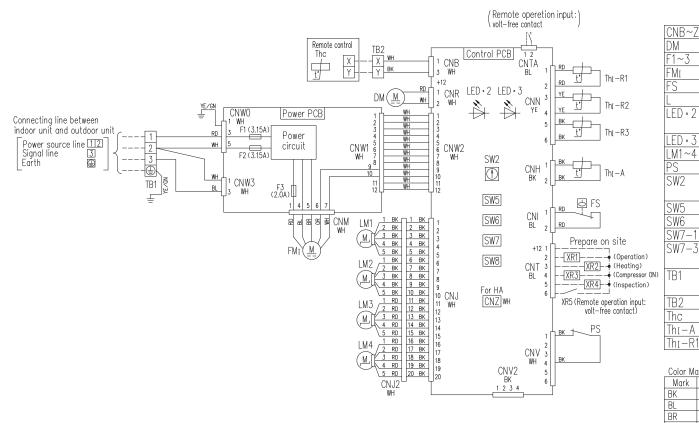

FS	Float switch	၂ ရ ရ
L	Reactor	60VF
LED • 2	Indication lamp (Green—Normal operation)	.
LED•3	Indication lamp (Red-Inspection)	
LM1~4	Louver motor	7
PS	Panel switch	
SW2	Remote control communication address	
SW5	Plural units Master/Slave setting	
SW6	Model capacity setting	
SW7-1	Operation check, Drain motor test run	
SW7-3	Powerful mode Valid∕Invalid	
TB1	Terminal block (Power source) (Omark)	
TB2	Terminal block (Signal line) (□mark)	
Thc	Thermistor (Remote control)	
Thi-A	Thermistor (Return air)	
Thi – R1, 2, 3	Thermistor (Heat exchanger)	

Color Mo	arks		
Mark	Color	Mark	Color
BK	Black	RD	Red
BL	Blue	WH	White
BR	Brown	YE	Yellow
OR	Orange	YE/GN	Yellow/Green

Connector

Fan motor


Fuse

Drain motor


Notes 1. ----indicates wiring on site.

- 2. See the wiring diagram of outside unit about the line between inside unit and outside unit.
- 3. Use twin core cord (0.3mm² x 2) at remote control line.
- 4. Do not put remote control line alongside power source line.

						Color N	Narks
CNB~Z	Connector	LED•3	Indication lamp (Red-Inspection)	TB1	Terminal block (Power source)	Mark	Color
DM	Drain motor	LM1~4	Louver motor		(🗌 mark)	BK	Black
F200~203	Fuse	SW2	Remote control communication	TB2	Terminal block (Signal line) (mark)	BL	Blue
FM	Fan motor		address	Thc	Thermistor (Remote control)	BR	Brown
FS	Float switch	SW5	Plural units Master / Slave setting	Thi-A	Thermistor(Return air)	OR	Orang
LED·2	Indication lamp	SW6	Model capacity setting	Thi-R1,2,3	Thermistor (Heat exchanger)	RD	Red
	(Green-Normal operation)	SW7-1	Operation check, Drain motor test run	X4	Relay for DM	WH	White
				mark	Closed-end connector	Y	Yellow

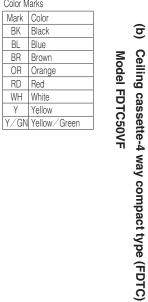

Brown Orange Red White Yellow

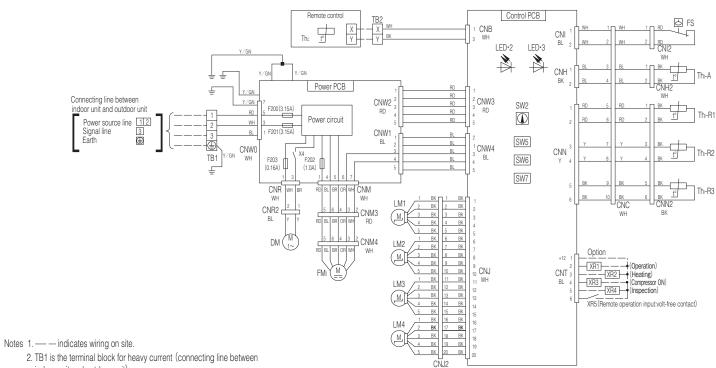

WH


1


16

1

- indoor unit and outdoor unit),
- and TB2 is the terminal block for weak current (remote control).
- 3. See the wiring diagram of outside unit about the line between inside unit and outside unit.
- 4. Use twin core cable (0.3mm²X2) at remote control line.
- 5. Do not put remote control line alongside power source line.

B∼Z		Connector							
		Drain motor							
~3		Fuse							
1		Fan motor (with thern	nostat)					
		Float switch							
		Reactor							
) • 2		Indication la	mp (Gree	n-Normal operation)					
. 3		Indication la	mp (Red-	Inspection)					
2		Remote cont	trol communication address						
/5		Plural units N	Master / Slave setting						
/6		Model capac	ity setting						
7-1		Operation ch	neck, Drai	n motor test run					
7-3		Powerful mo	de Valid∠	Invalid					
1		Terminal blo	ck (Powe	er source) (□mark)					
2		Terminal blo	ck (Signa	al line) (□mark)					
>		Thermistor (Remote o	control)					
-A		Thermistor ((Return air)						
-R1,2	,3	Thermistor (Heat exc	hanger)					
nark		Closed-end	connector						
or Ma	rks								
ark	Co	blor	Mark	Color					

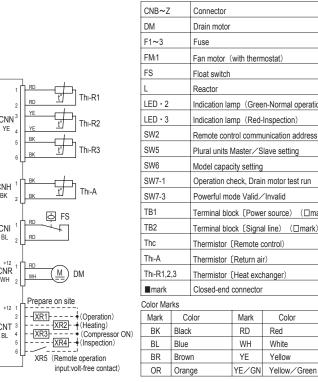

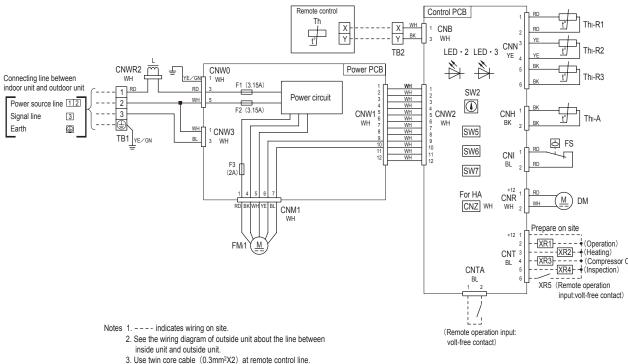

4. Do not put remote control line alongside power source line.



<u></u>

PJG000Z005 \triangleright

				CNE	3~Z	Connector		
				DM		Drain motor		
				F1,4	Ļ	Fuse		
				FMI	2	Fan motor (w	ith thermos	stat)
				FS		Float switch		
	Control PCB	1 [LED	• 2	Indication lan	np (Green-I	Normal operation)
X WH	1 CNB	2	RD ThI-R1	LED	• 3	Indication lan	np (Red-Ins	spection)
<u> ү</u> <u>-вк</u> - ТВ2]₃ WH LED・2 LED・3	CNN 3 3 YE	ThI-R2	SW2	2	Remote cont	rol commu	nication address
	N. N.	4		SW5	5	Plural units N	laster∕Sla	ve setting
wer PCB		5	вк <u>t</u> Thl-R3	SW6	6	Model capaci	ity setting	
1 WH 2 WH 3 WH	1 SW2	۰L		SW7	7-1	Operation ch	eck, Drain	motor test run
2NW1 5 WH	3 4 5 CNW2	CNH ¹		SW7	7-3	Powerful mod	de Valid∕I	nvalid
WH 7 WH 8 WH	6 WH 7 SW5	BK 2	BK Ľ	TB1		Terminal bloc	ck (Power s	ource) (□mark)
9 WH 10 WH	9		邑 FS	TB2		Terminal bloc	k (Signal li	ne) (□mark)
11 WH 12 WH	10 11 12 SW6	CNI ¹		Thc		Thermistor (F	Remote con	trol)
μ ι Ι	SW7	BL 2	RD	Thl-	A	Thermistor (F	Return air)	
	E	+12 ,		Thl-	R1,2,3	Thermistor (H	leat exchar	nger)
CNM2	For HA	CNR WH 2	WH M DM	∎m	ark	Closed-end c	connector	
BK								
		+12 1	Prepare on site		Color Ma	arks		
		2 CNT 3	XR1 + (Operation)		Mark	Color	Mark	Color
		BL ⁴	XR3 • (Compressor ON)		BK	Black	RD	Red
	CNTA	5			BL	Blue	WH	White
	1 BL 2		XR5 (Remote operation		BR	Brown	YE	Yellow
			input:volt froe contact)					

input:volt-free contact)

Notes 1. ---- indicates wiring on site.

2. See the wiring diagram of outside unit about the line between inside unit and outside unit.

CNW0 ¹ WH

¹ CNW3

WH

F1 (5A)

Ê

Ē

YE/GN

RD

WH

WH

BL

Remote control Thc t

Power circuit

F4 (2A)

FMI2

1 4 5 RD BKN

X Y

Power PCB

CNW1

CNM2 BK

- 3. Use twin core card (0.3mm²) at remote control line.
- 4. Do not put remote control line alongside power source line.

(Remote operation input: volt-free contact)

Color Marks											
Mark	Color	Mark	Color								
BK	Black	RD	Red								
BL	Blue	WH	White								
BR	Brown	YE	Yellow								
OR	Orange	YE∕GN	Yellow / Green								



Connecting line between indoor unit and outdoor unit


Signal line

Earth

Power source line 12

3

1

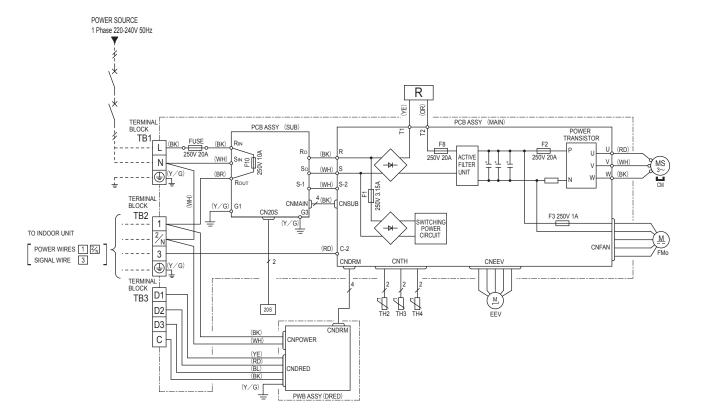

Power cable, indoor-outdoor connecting wires

Model	MAX running current (A)	Power cable size (mm ²)	Power cable length (m)	indoor-outdoor wire size x number	Earth wire size (mm ²)
50	15	2.0	18	1.5mm ² x 3	15
60	15	2.0	10	1.5000-2.5	1.5

 The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.

 Switchgear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.

 The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Item	Description	Mark	Color
CM	Compressor motor	BK	Black
CNEEV~CN20S	Connector	BR	Brown
EEV	Electric expansion valve (coil)	OR	Orange
FMo	Fan motor	RD	Red
R	Reactor	WH	White
TB1,2,3	Terminal block	YE	Yellow
TH2	Heat exchanger sensor (outdoor unit)	BL	Blue
TH3	Outdoor air temp.sensor	Y∕G	Yellow/Green
TH4	Discharge pipe temp.sensor		
20S	Solenoid valve for 4 way valve		


4. NOISE LEVEL

Notes (1) The data are based on the following conditions.

- Ambient air temperature: Indoor unit 27°CWB. Outdoor unit 35°CDB.
- (2) The data in the chart are measured in an anechoic room.
- (3) The noise levels measured in the field are usually higher than the data because of reflection.

(1) Indoor units

- (a) Ceiling cassette-4way compact type (FDT)
 - Model FDT60VF

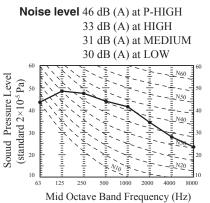


Measured based on JIS B 8616 Mike position



(b) Ceiling cassette-4way type (FDTC)


Model FDTC50VF

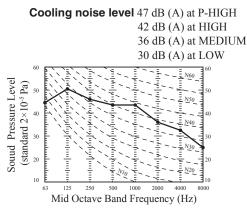


Measured based on JIS B 8616 Mike position



(c) Duct connected-Low / Middle static pressure type (FDUM)

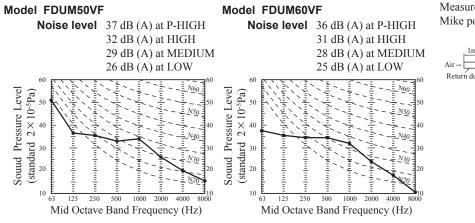



Measured based on JIS B 8616 Mike position




(2) Outdoor units

Measured based or JIS B 8616 or JIS C 9612 Mike position: at highest noise level in position as mentined below. Distance from front side 1m

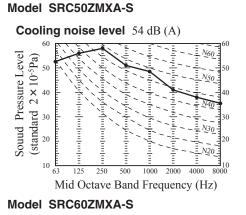

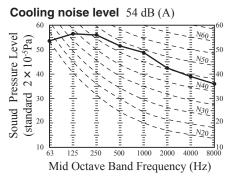


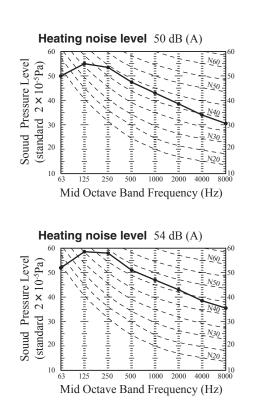


5. CHARACTERISTICS OF FAN


- Characteristic FAN (1) shows air flow vs. External Static Pressure (E.S.P.) range where settings of E.S.P. are maximum E.S.P. (100Pa), rated E.S.P., and minimum E.S.P. (10Pa)
- · Characteristic FAN (2) shows air flow vs E.S.P. curve when set fan tap is set P-Hi with each setting of E.S.P by remote control.
- External Static Pressure (E.S.P.) can be set by wired remote control.
- You can set required E.S.P. by wired remote control which calculate it with the set air flow rate and pressure loss of the duct connected. **Model FDUM50VF**


Characteristic FAN(1)

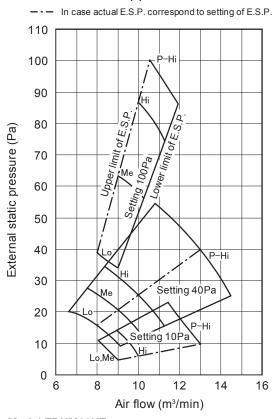

Model FDUM60VF

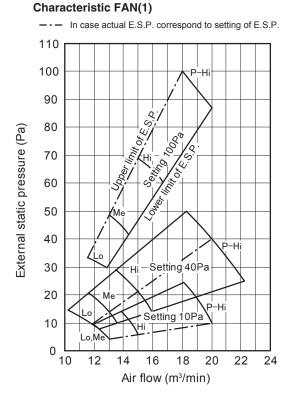

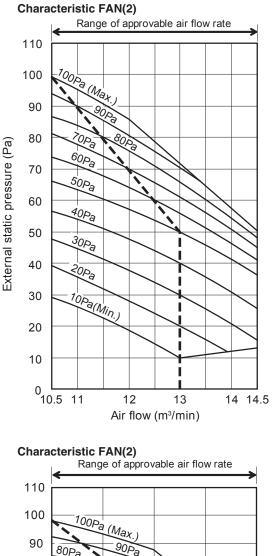

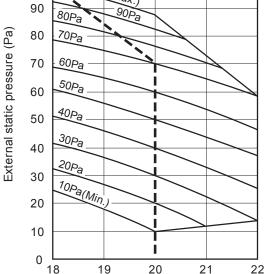

Air flow (m³/min)

6. TEMPERATURE AND VELOCITY DISTRIBUTION

Indoor temperature

Cooling 27°CDB / 19°CWB

Heating 20°CDB

Note: These figures represent the typical main range of temperature and velocity distribution at the center of air outlet within the published conditions.

In the actual installation, they may differ from the typical figures under the influence of air temperature conditions, ceiling height, operation conditions and obstacles.


(1) Ceiling cassett-4way type (FDT)

Model FDT60VF

Cooling air flow : P-Hi

Louver position



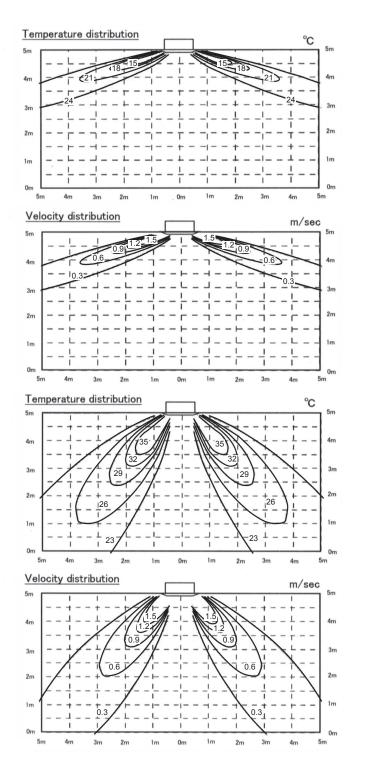

Heating air flow : P-Hi Louver position







(2) Ceiling cassett-4way compact type (FDTC)


Model FDTC50VF


Cooling air flow : P-Hi

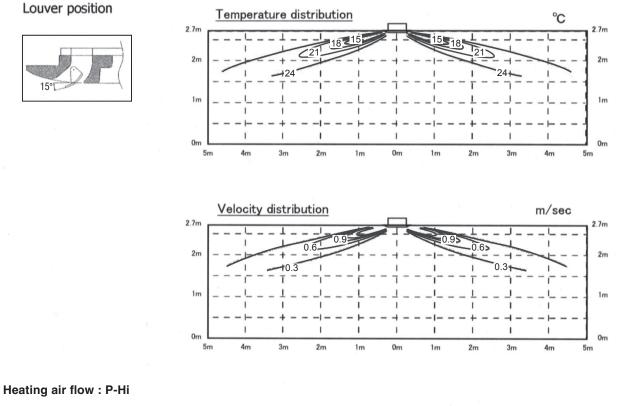

Louver position



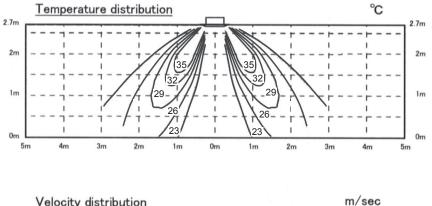


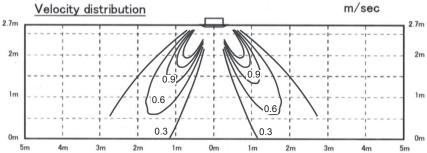

ISD09407

7. PIPING SYSTEM

All models

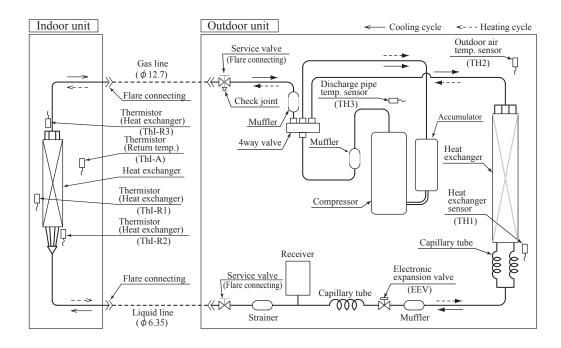

Preset point of the protective devices

Parts name	Mark	Equipped unit	All models
Thermistor (for protection overloading in heating)	Thl-R	Indoor unit	ON 63℃ OFF 56℃
Thermistor (for frost prevention)	Thl-R		ON 1.0°C OFF 10°C
Thermistor (for protection high pressure in cooling.)	(TH1)	Outdoor unit	ON 63℃ OFF 53℃
Thermistor (for detecting discharge pipe temp.)	(TH3)	Outdoor unit	ON 115℃ OFF 95℃

8. RANGE OF USAGE & LIMITATIONS

Operating temperature ra	ange	See the next page.
Recommendable area to	install	Considering to get sufficient heating capacity, the area where the averaged lowest ambient air temperature in day time during winter is above 0°C, and it has no accumulation of snow.
Installation site		The limitations of installation space are shown in the page for outline drawing. Install the indoor unit at least 2.5m higher than the floor surface.
Temperature and humidit indoor unit in the ceiling (y conditions surrounding the Note 2)	Dew point temperature : 28° C or less, relative hummdity : 80% or less
Limitations on unit and pi	ping installation	See page 28
Compressor	Cycle Time	7 minutes or more (from OFF to OFF) or (from ON to ON)
ON-OFF cycling	Stop Time	3 minutes or more
	Voltage range	Rating ±10%
Power source	Voltage drop at start-up	Min.85% of rating
	Phase-to-phase imbalance	3% or less

Note 1. Do not install the unit in places which :

1) Flammable gas may leak.

2) Carbon fiber, metal particles, powder, etc. are floating.

3) Cosmetic or special sprays are used frequently.

4) Exposed to oil splashes or steam (e.g. kitchen and machine plant).

5) Exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent).

6) Exposed to ammonia substance (e.g. organic fertilizer).

7) Matters affecting devices, such as sulfuric gas, chlorine gas, acid, alkali, etc. may generate or accumulate.

8) Chimney smoke is hanging.

9) Sucking the exhaust gas from heat exchanger.

10) Adjacent to equipment generating electromagnetic waves or high frequency waves.

11) There is light beams that affect the receiving device of indoor unit in case of the wireless specification.

12) Snow falls heavily.

13) At an elevation of 1000 meters or higher.


14) On mobile machine (e.g. vehicle, ship, etc.)

15) Splashed with water to indoor unit (e.g. laundry room).


16) Indoor units of twin and triple specifications separately in a room with partition.

Note 2. If ambient temperature and humidity exceed the above conditions, add polyurethane foam insulation on the outer plate (10mm or thicker) of indoor unit.

Both gas and liquid pipes need to be cover with 20mm or thicker heat insulation materials at the place where humidity exceeds 70%.



Operating temperature range

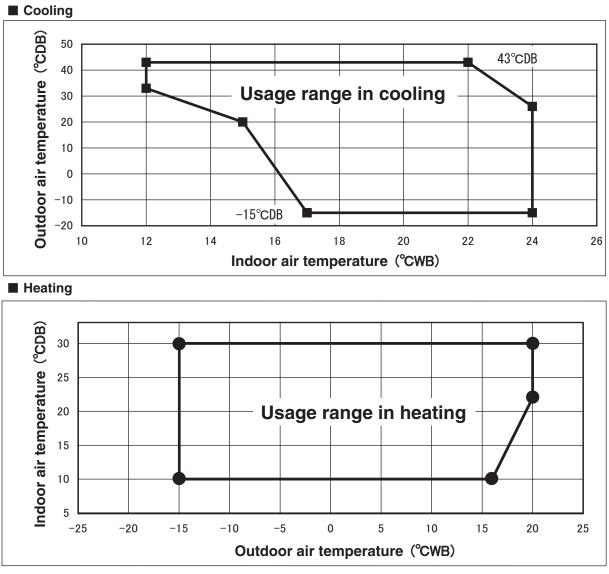

Decline in cooling and heating capacity or operation stop may occur when the outdoor unit is installed in places where natural wind can increase or decrease its design airflow rate.

PJG000Z014

"CAUTION" Cooling operation under low outdoor air temperature conditions

PAC models can be operated in cooling mode at low outdoor air temperature condition within above temperature range. However in case of severely low temperature conditions if the following precaution is not observed, it may not be operated in spite of operable temperature range mentioned above and cooling capacity may not be established under certain conditions.

[Precaution]

In case of severely low temperature condition

- 1) Install the outdoor unit at the place where strong wind cannot blow directly into the outdoor unit.
- 2) If there is no installation place where can prevent strong wind from directly blowing into the outdoor unit, mount the flex flow adapter (prepared as option part) or like such devices onto the outdoor unit in order to divert the strong wind.

[Reason]

Under the low outdoor air temperature conditions of -5° C or lower, the outdoor fan is controlled at lower or lowest speed by outdoor fan control, but if strong wind directly blow into the outdoor unit, the outdoor heat exchanger temperature will drop more. This makes high and low pressures to drop as well. This low pressure drop makes the indoor heat exchanger temperature to drop and will activate anti-frost control at indoor heat exchanger at frequent intervals, that cooling operation may not be established for any given time.

Descriptions	Models for outdoor	unit	Dimensional limitations
One-way pipe length	SRC50 · 60		≦ 30m
	When outdoor unit is positioned higher	SRC50 · 60	≦ 20m
Elevation difference between indoor and outdoor unit	When outdoor unit is positioned lower	SRC50 · 60	≦ 20m
	Outdoor unit		

PJG000Z014 🕭

16.5 16 8.53 8.44 8.35 8.16 8.09

°CWB 16 18 20

-20 -18 -16 -14 3.20 3.15 3.11 3.05 3.00

-12 3.40 3.35 3.31 3.26 3.20

-10 3.60 3.55 3.51 3.46 3.41

-6 3.88 3.83 3.79 3.75 3.71

-4 3.95 3.92 3.88 3.84 3.80

-2 4.03 4.00 3.97 3.93 3.90

4 4.94 4.91 4.88 4.85 4.82

14

15.5

16.5

3.80 3.75

4.10 4.08

6.02 5.98

4 38 4 36 4 33 4 30

6.70 6.64 6.57

16 6.87 6.80 6.73 6.58

5.43 5.40

4.14 4.12 4.10

5.74 5.70 5.67 5.63 5.59

Indoor air temperature

°CDB

3.71 3.66 3.61

4 0 5 4 03 4 00

5.94 5.89 5.85

6.31 6.25 6.17

4.07 4.05

5.37 5.33

6.44

6.12

6.39

6.52

(kW)

24 22

9. SELECTION CHART

Correct the cooling and heating capacity in accordance with the operating conditions. The net cooling and heating capacity can be obtained in the following way.

Net capacity = Capacity shown in the capacity tables (9.1) × Correction factors shown in the table (9.2) (9.3) (9.4).

Caution: In case that the cooling operation during low outdoor air temperature below -5°C is expected, install the outdoor unit where it is not influenced by natural wind. Otherwise protection control by low pressure will be activated much more frequently and it will cause insufficient capacity or breakdown of the compressor in worst case.

9.1 **Capacity tables**

(1) Ceiling cassette-4way type (FDT)

Model FDT60ZMXAVF Indoor unit FDT60VF Outdoor unit SRC60ZMXA-S

Cooling) SUZIVIZ	AVF	Indo	or unit	FDI	60VF	0	utdooi	unit	SHU		A-5			(kW)	ŀ	leatir	ng Moo	de:HC	;			(kW
							Indo	or air t	emper	ature							ſ	Outo	door	In	door a	ir temp	peratur	e
Outdoor air temp.	18°	CDB	21°	CDB	23°	23°CDB		26°CDB 27°CDB		CDB	28°CDB 31°CDB		33°CDB			air temp.		°CDB						
an temp.	12°(CWB	14°(CWB	16°(CWB	18°(CWB	19°(CWB	20°0	CWB	22°(CWB	24°(CWB	4	CDB	°CWB	16	18	20	22	24
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC		-19.8	-20					
11					4.73	4.64	4.98	4.88	5.11	5.01	5.25	5.15	5.53	5.42	5.81	5.39		-17.7	-18					
13					4.84	4.74	5.11	5.01	5.24	5.14	5.39	5.22	5.67	5.56	5.96	5.40		-15.7	-16					
15					4.95	4.85	5.24	5.14	5.38	5.27	5.52	5.24	5.82	5.61	6.11	5.42		-13.5	-14	3.97	3.91	3.85	3.79	3.73
17					5.07	4.92	5.37	5.26	5.51	5.35	5.66	5.26	5.96	5.63	6.25	5.43		-11.5	-12	4.22	4.16	4.10	4.04	3.98
19					5.17	4.95	5.48	5.37	5.63	5.37	5.81	5.29	6.17	5.65	6.54	5.47		-9.5	-10	4.47	4.41	4.35	4.29	4.23
21					5.33	4.99	5.59	5.48	5.74	5.39	5.96	5.31	6.39	5.69	6.82	5.50		-7.5	-8	4.72	4.66	4.60	4.54	4.48
23					5.39	5.01	5.65	5.49	5.81	5.41	6.01	5.32	6.42	5.69	6.83	5.50		-5.5	-6	4.81	4.76	4.70	4.65	4.60
25			5.22	5.12	5.44	5.02	5.71	5.50	5.88	5.42	6.07	5.33	6.45	5.69	6.84	5.50		-3.0	-4	4.90	4.86	4.81	4.77	4.72
27			5.27	5.16	5.50	5.03	5.78	5.52	5.94	5.43	6.11	5.34	6.44	5.69				-1.0	-2	5.00	4.96	4.92	4.88	4.84
29			5.18	5.08	5.41	5.01	5.69	5.50	5.86	5.42	6.02	5.33	6.36	5.68				1.0	0	5.09	5.06	5.03	4.99	4.96
31			5.09	4.99	5.32	4.99	5.60	5.48	5.77	5.40	5.94	5.31	6.27	5.67				2.0	1	5.14	5.11	5.08	5.05	5.02
33	4.53	4.44	4.82	4.72	5.23	4.96	5.52	5.41	5.69	5.38	5.85	5.30	6.19	5.66				3.0	2	5.47	5.44	5.41	5.37	5.34
35	4.60	4.51	4.81	4.71	5.15	4.94	5.43	5.32	5.60	5.36	5.77	5.28	6.10	5.64				5.0	4	6.12	6.09	6.05	6.01	5.98
37	4.52	4.43	4.73	4.64	5.06	4.92	5.35	5.24	5.51	5.35	5.68	5.27	6.01	5.63				7.0	6	6.78	6.74	6.70	6.66	6.61
39	4.44	4.35	4.65	4.56	4.98	4.88	5.26	5.15	5.43	5.32	5.59	5.25	5.92	5.62				9.0	8	7.12	7.08	7.03	6.98	6.94
41	4.37	4.28	4.58	4.49	4.90	4.80	5.18	5.08	5.34	5.23	5.51	5.24	5.83	5.61				11.5	10	7.47	7.41	7.36	7.31	7.26
43	4.29	4.20	4.50	4.41	4.82	4.72	5.10	5.00	5.26	5.15	5.42	5.22	5.74	5.60				13.5	12	7.89	7.82	7.76	7.65	7.59
																		15.5	14	8.31	8.23	8.15	7.99	7.93

(2) Ceiling cassette-4way compact type (FDTC)

Model FDTC50ZMXAVF Indoor unit FDTC50VF Cooling Mode Outdoor unit SRC50ZMXA-S

Cooling							51050		Out	1001 UI	111 31	10502		5		(kW)	Hea	ting Mo	ode:H0	С
							Indo	or air t	emper	ature							Ou	utdoor	Ir	ndo
Outdoor air temp.	18°	CDB	21°	CDB	23°	CDB	26°	CDB	27°	CDB	28°	CDB	31°	CDB	33°CDB		air	temp.		
an temp.	12°(CWB	14°	CWB	16°	CWB	18°	CWB	19°(CWB	20°	CWB	22°CWB		24°(CWB	°CD	B°CW	3 16	Τ
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	тс	SHC	TC	SHC	-19.	8 -20		T
11					4.22	3.31	4.45	3.54	4.56	3.51	4.69	3.48	4.94	3.66	5.19	3.59	-17.	7 -18		T
13					4.32	3.35	4.56	3.59	4.68	3.56	4.81	3.53	5.07	3.70	5.32	3.63	-15.	7 -16		T
15					4.42	3.40	4.68	3.64	4.80	3.61	4.93	3.58	5.19	3.75	5.45	3.67	-13.	5 -14	3.20	1
17					4.53	3.45	4.79	3.68	4.92	3.65	5.06	3.63	5.32	3.79	5.58	3.72	-11.	5 -12	3.40	
19					4.62	3.49	4.89	3.73	5.02	3.70	5.19	3.68	5.51	3.86	5.84	3.80	-9.5	-10	3.60	1
21					4.76	3.55	4.99	3.77	5.13	3.74	5.32	3.73	5.70	3.93	6.09	3.89	-7.5	-8	3.80	1
23					4.81	3.58	5.04	3.79	5.19	3.77	5.37	3.75	5.73	3.94	6.10	3.89	-5.5	-6	3.88	1
25			4.66	3.72	4.86	3.60	5.10	3.81	5.25	3.79	5.42	3.77	5.76	3.95	6.11	3.89	-3.0	-4	3.95	1
27			4.70	3.74	4.91	3.62	5.16	3.84	5.31	3.81	5.46	3.79	5.75	3.95			-1.0	-2	4.03	4
29			4.62	3.70	4.83	3.59	5.08	3.81	5.23	3.78	5.38	3.75	5.68	3.92			1.0	0	4.10	1
31			4.54	3.66	4.75	3.55	5.00	3.77	5.15	3.75	5.30	3.72	5.60	3.89			2.0	1	4.14	1
33	4.04	3.32	4.31	3.55	4.67	3.51	4.93	3.74	5.08	3.72	5.23	3.69	5.53	3.87			3.0	2	4.41	1
35	4.11	3.36	4.30	3.54	4.59	3.48	4.85	3.71	5.00	3.69	5.15	3.66	5.45	3.84			5.0	4	4.94	1
37	4.04	3.32	4.23	3.51	4.52	3.44	4.77	3.67	4.92	3.65	5.07	3.63	5.37	3.81			7.0	6	5.46	1
39	3.97	3.29	4.16	3.48	4.45	3.41	4.70	3.64	4.85	3.63	4.99	3.60	5.29	3.78			9.0	8	5.74	1
41	3.90	3.25	4.09	3.44	4.38	3.38	4.62	3.61	4.77	3.59	4.92	3.57	5.21	3.75			11.5	5 10	6.02	1
43	3.83	3.22	4.01	3.40	4.30	3.34	4.55	3.58	4.69	3.56	4.84	3.54	5.13	3.72			13.5	5 12	6.36	6
													•						+	+

Note(1) These data show average statuses

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed

(2) Capacities are based on the following conditions. Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW) SHC : Sensible heat capacity (kW) HC : Heating capacity (kW)

(3) Duct connected-Low / Middle static pressure type (FDUM)

Model FDUM50ZMXAVF Indoor unit FDUM50VF Outdoor unit SRC50ZMXA-S Cooling Mode

		Indoor air temperature														
Outdoor air temp.	18°	CDB	21°	CDB	23°	CDB	26°	CDB	27°	CDB	28°	CDB	31°	CDB	33°	CDB
an tomp.	12°	CWB	14°(CWB	16°(CWB	18°	CWB	19°(CWB	20°0	CWB	22°(CWB	24°0	CWB
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					4.22	3.43	4.45	3.69	4.56	3.66	4.69	3.63	4.94	3.82	5.19	3.76
13					4.32	3.48	4.56	3.73	4.68	3.71	4.81	3.68	5.07	3.87	5.32	3.80
15					4.42	3.52	4.68	3.78	4.80	3.75	4.93	3.72	5.19	3.91	5.45	3.84
17					4.53	3.57	4.79	3.83	4.92	3.80	5.06	3.77	5.32	3.96	5.58	3.88
19					4.62	3.61	4.89	3.87	5.02	3.84	5.19	3.82	5.51	4.02	5.84	3.97
21					4.76	3.67	4.99	3.91	5.13	3.88	5.32	3.87	5.70	4.09	6.09	4.05
23					4.81	3.70	5.04	3.93	5.19	3.91	5.37	3.89	5.73	4.10	6.10	4.05
25			4.66	3.84	4.86	3.72	5.10	3.96	5.25	3.93	5.42	3.91	5.76	4.11	6.11	4.05
27			4.70	3.86	4.91	3.74	5.16	3.98	5.31	3.96	5.46	3.93	5.75	4.11		
29			4.62	3.82	4.83	3.71	5.08	3.95	5.23	3.92	5.38	3.90	5.68	4.09		
31			4.54	3.79	4.75	3.67	5.00	3.92	5.15	3.89	5.30	3.87	5.60	4.06		
33	4.04	3.43	4.31	3.68	4.67	3.63	4.93	3.89	5.08	3.86	5.23	3.84	5.53	4.03		
35	4.11	3.47	4.30	3.67	4.59	3.60	4.85	3.85	5.00	3.83	5.15	3.81	5.45	4.00		
37	4.04	3.43	4.23	3.64	4.52	3.57	4.77	3.82	4.92	3.80	5.07	3.78	5.37	3.97		
39	3.97	3.40	4.16	3.60	4.45	3.54	4.70	3.79	4.85	3.77	4.99	3.75	5.29	3.95		
41	3.90	3.36	4.09	3.57	4.38	3.50	4.62	3.76	4.77	3.74	4.92	3.72	5.21	3.92		
43	3.83	3.33	4.01	3.53	4.30	3.47	4.55	3.73	4.69	3.71	4.84	3.69	5.13	3.89		

	Out	door	In	door a	ir tomr	peratur	·0
DB		emp.			°CDB	Jeratui	C
WB		°CWB	16	18	20	22	24
SHC	-19.8	-20					
3.76	-17.7	-18					
3.80	-15.7	-16					
3.84	-13.5	-14	3.20	3.15	3.11	3.05	3.00
3.88	-11.5	-12	3.40	3.35	3.31	3.26	3.20
3.97	-9.5	-10	3.60	3.55	3.51	3.46	3.41
4.05	-7.5	-8	3.80	3.75	3.71	3.66	3.61
4.05	-5.5	-6	3.88	3.83	3.79	3.75	3.71
4.05	-3.0	-4	3.95	3.92	3.88	3.84	3.80
	-1.0	-2	4.03	4.00	3.97	3.93	3.90
	1.0	0	4.10	4.08	4.05	4.03	4.00
	2.0	1	4.14	4.12	4.10	4.07	4.05
	3.0	2	4.41	4.38	4.36	4.33	4.30
	5.0	4	4.94	4.91	4.88	4.85	4.82
	7.0	6	5.46	5.43	5.40	5.37	5.33
	9.0	8	5.74	5.70	5.67	5.63	5.59
	11.5	10	6.02	5.98	5.94	5.89	5.85
	13.5	12	6.36	6.31	6.25	6.17	6.12
	15.5	14	6.70	6.64	6.57	6.44	6.39
	16.5	16	6.87	6.80	6.73	6.58	6.52

Model FDUM60ZMXAVF Indoor unit FDUM60VF Cooling Mode

Outdoor unit SRC60ZMXA-S

Cooling		9		• • • • •			000000		out	1001 01				0		(kW)
Quality							Indo	or air t	emper	ature						
Outdoor air temp.	18°	CDB	21°	CDB	23°	CDB	26°	CDB	27°CDB 28°		CDB 31°CE		CDB	33°CDB		
an temp.	12°	CWB	14°(CWB	16°(CWB	18°	CWB	19°(CWB	20°	CWB	22°(CWB	24°(CWB
°CDB	TC	SHC	TC	SHC	тс	SHC	тс	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					4.73	4.33	4.98	4.71	5.11	4.67	5.25	4.62	5.53	4.91	5.81	4.80
13					4.84	4.37	5.11	4.76	5.24	4.71	5.39	4.66	5.67	4.95	5.96	4.84
15					4.95	4.41	5.24	4.80	5.38	4.75	5.52	4.70	5.82	4.99	6.11	4.88
17					5.07	4.45	5.37	4.84	5.51	4.80	5.66	4.75	5.96	5.03	6.25	4.91
19					5.17	4.49	5.48	4.88	5.63	4.83	5.81	4.79	6.17	5.09	6.54	4.99
21					5.33	4.55	5.59	4.92	5.74	4.87	5.96	4.84	6.39	5.15	6.82	5.06
23					5.39	4.58	5.65	4.94	5.81	4.89	6.01	4.86	6.42	5.16	6.83	5.06
25			5.22	4.78	5.44	4.59	5.71	4.96	5.88	4.92	6.07	4.88	6.45	5.17	6.84	5.06
27			5.27	4.80	5.50	4.62	5.78	4.99	5.94	4.94	6.11	4.89	6.44	5.17		
29			5.18	4.77	5.41	4.58	5.69	4.95	5.86	4.91	6.02	4.86	6.36	5.14		
31			5.09	4.73	5.32	4.55	5.60	4.92	5.77	4.88	5.94	4.83	6.27	5.12		
33	4.53	4.27	4.82	4.62	5.23	4.51	5.52	4.90	5.69	4.85	5.85	4.81	6.19	5.09		
35	4.60	4.30	4.81	4.61	5.15	4.48	5.43	4.86	5.60	4.82	5.77	4.78	6.10	5.07		
37	4.52	4.27	4.73	4.58	5.06	4.45	5.35	4.84	5.51	4.80	5.68	4.75	6.01	5.04		
39	4.44	4.23	4.65	4.55	4.98	4.42	5.26	4.81	5.43	4.77	5.59	4.73	5.92	5.02		
41	4.37	4.20	4.58	4.49	4.90	4.39	5.18	4.78	5.34	4.74	5.51	4.70	5.83	4.99		
43	4.29	4.17	4.50	4.41	4.82	4.36	5.10	4.75	5.26	4.71	5.42	4.67	5.74	4.97		

Heatir	ng Mo	de:HC	;	Heating Mode:HC (kW)													
Out	door	In	door a	ir temp	peratur	e											
air te	emp.			°CDB													
°CDB	°CWB	16	18	20	22	24											
-19.8	-20																
-17.7	-18																
-15.7	-16																
-13.5	-14	3.97	3.91	3.85	3.79	3.73											
-11.5	-12	4.22	4.16	4.10	4.04	3.98											
-9.5	-10	4.47	4.41	4.35	4.29	4.23											
-7.5	-8	4.72	4.66	4.60	4.54	4.48											
-5.5	-6	4.81	4.76	4.70	4.65	4.60											
-3.0	-4	4.90	4.86	4.81	4.77	4.72											
-1.0	-2	5.00	4.96	4.92	4.88	4.84											
1.0	0	5.09	5.06	5.03	4.99	4.96											
2.0	1	5.14	5.11	5.08	5.05	5.02											
3.0	2	5.47	5.44	5.41	5.37	5.34											
5.0	4	6.12	6.09	6.05	6.01	5.98											
7.0	6	6.78	6.74	6.70	6.66	6.61											
9.0	8	7.12	7.08	7.03	6.98	6.94											
11.5	10	7.47	7.41	7.36	7.31	7.26											
13.5	12	7.89	7.82	7.76	7.65	7.59											
15.5	14	8.31	8.23	8.15	7.99	7.93											
16.5	16	8.53	8.44	8.35	8.16	8.09											

Note(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously. These data show the case where the operation frequency of a compressor is fixed.
(2) Capacities are based on the following conditions.


(2) Capacities are based on the tollowing condition Corresponding refrigerant piping length :7.5m Level difference of Zero.
 (3) Symbols are as follows. TC: Trotal cooling capacity (kW) SHC : Sensible heat capacity (kW) HC : Heating capacity (kW)

[References data]

Capacity variation against outdoor and indoor temperature at rated capacity condition.


(I) Models SRC50, 60ZMXA-S

1 Cooling

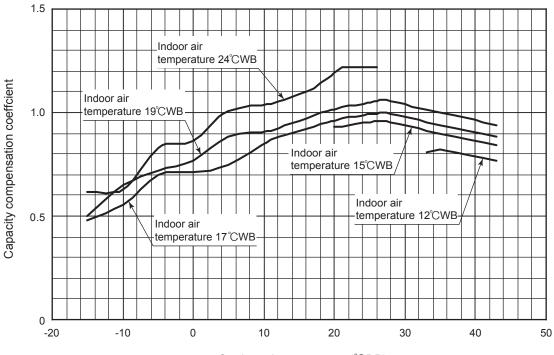

Outdoor air temperature (°CDB)

2 Heating

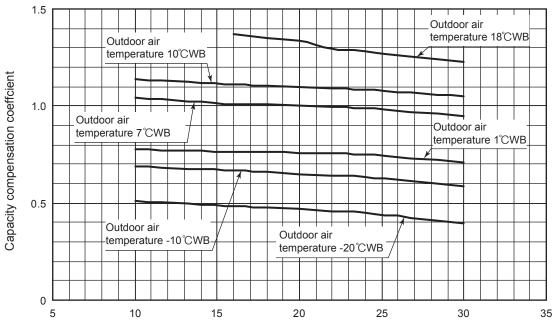

Indoor air temperature (°CDB)

9.2 Correction of cooling and heating capacity in relation to air flow rate control (fan speed)

Fan speed	P-Hi or Hi	Me	Lo
Coefficient	1.00	0.97	0.95

9.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping

It is necessary to correct the cooling and heating capacity in relation to the one way equivalent piping length between the indoor and outdoor units.

Piping length (m)	7	10	15	20	25	30
Cooling	1	0.99	0.975	0.965	0.95	0.935
Heating	1	1	1	1	1	1

9.4 Height difference between the indoor unit and outdoor unit

When the outdoor unit is located below indoor units in cooling mode, or when the outdoor unit is located above indoor units in heating mode, the correction coefficient mentioned in the below table should be subtracted from the value in the above table.

Height difference between the indoor unit and outdoor unit in the vertical height difference	5m	10m	15m	20m
Adjustment coefficient	0.99	0.98	0.97	0.96


Piping length limitations

Item	Model	SRC50, 60
Max. one way piping length		30m
Max. vertical height difference		Outdoor unit is higher 20m Outdoor unit is lower 20m

Note (1) Values in the table indicate the one way piping length between the indoor and outdoor units.

How to obtain the cooling and heating capacity

Example : The net cooling capacity of the model FDT60ZMXAVF with the air flow "P-High", the piping length of 15m, the outdoor unit located 5m lower than the indoor unit, indoor wet-bulb temperature at 19.0°C and outdoor dry-bulb temperature 35°C is

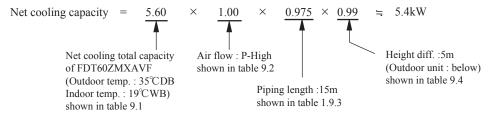

PJF012D016C

10. APPLICATION DATA

10.1 Installation of indoor unit

(1) Ceiling cassette-4way type (FDT)

This manual is for the installation of an indoor unit. For electrical wiring work (Indoor), refer to page 52. For remote control installation, refer to page 56. For wireless kit installation, refer to page 164. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to page 70. This unit always be used with the panel.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precuring of the second seco CAUTION : Wrong installation might cause serious consequences depending on circumstances.
- Work in the important items to protect your health and safety so strictly follow them by any means.
 The meanings of "Marks" used here are as shown on the right:
 Never do it under any circumstances.
 Aways do it according to the instruction.
 After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the
- customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit. Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

installation should be performed by the specialist.
If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn
of the unit.
Install the system correctly according to these installation manuals.
Improper installation may cause explosion, injury, water leakage, electric shock, and fire.
Check the density refered by the foumula (accordance with ISO5149).
If the density exceeds the limit density, please consult the dealer and installate the ventilation system.
Use the genuine accessories and the specified parts for installation.
If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.
Ventilate the working area well in case the refrigerant leaks during installation.
If the refrigerant contacts the fire, toxic gas is produced.
Install the unit in a location that can hold heavy weight.
Install the unit in a location that can note neavy weight. Improper installation may cause the unit to fall leading to accidents.
notell the unit wavery in ender to be able to withetend atrany winds such as humberne, and earthquakes
Improper installation may cause the unit to fall leading to accidents.
Do not mix air in to the cooling cycle on installation or removal of the air conditioner. If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries.
Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.
Power source with insufficient capacity and improper work can cause electric shock and fire.
Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in
order not to apply unexpected stress on the terminal.
Loose connections or hold could result in abnormal heat generation or fire.
Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services
panel property.
Improper fitting may cause abnormal heat and fire.
Check for refrigerant gas leakage after installation is completed.
If the refrigerant gas leaking the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced.
Use the specified pipe, flare nut, and tools for R410A.
Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle.
Tighten the flare nut according to the specified method by with torque wrench.
If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period.
Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can
оссиг.
Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.
Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.
If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due
to abnormal high pressure in the system.
Stop the compressor before removing the pipe after shutting the service valve on pump down work.
If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.
Only use prescribed option parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
Do not repair by yourself. And consult with the dealer about repair.
Improper repair may cause water leakage, electric shock or fire.
Consult the dealer or a specialist about removal of the air conditioner.
Improper installation may cause water leakage, electric shock or fire.
Turn off the power source during servicing or inspection work. If the nower is sumfield during servicing or inspection work, it could cause electric shock and injury by the operation fan
If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
Do not run the unit when the panel or protection guard are taken off.
Do not run the unit when the panel or protection guard are taken off. Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get (
Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get

∆ CAUTION	 	
Perform earth wiring surely.		
Do not connect the earth wiring to the gas pipe, water pipe, lightning rod a cause unit failure and electric shock due to a short circuit.	and telephone earth wiring. Improper earth could	9
Earth leakage breaker must be installed.		0
If the earth leakage breaker is not installed, it can cause electric shocks. Use the circuit breaker of correct capacity. Circuit breaker si		
poles under over current.		
Using the incorrect one could cause the system failure and fire. Do not use any materials other than a fuse of correct capacit	ty where a fuse should be used.	
Connecting the circuit by wire or copper wire could cause unit failure an		\bigcirc
Do not install the indoor unit near the location where there is If the gas leaks and gathers around the unit, it could cause fire.	s possibility of flammable gas leakages.	\bigcirc
Do not install and use the unit where corrosive gas (such as sulfu		
as thinner, petroleum etc.) may be generated or accumulated, or It could cause the corrosion of heat exchanger, breakage of plastic parts		
Secure a space for installation, inspection and maintenance		
Insufficient space can result in accident such as personal injury due to fa		
Do not use the indoor unit at the place where water splashes Indoor unit is not waterproof. It could cause electric shock and fire.	s such as laundry.	\otimes
Do not use the indoor unit for a special purpose such as food		$\overline{\frown}$
instrument, preservation of animals, plants, and a work of ar It could cause the damage of the items.	T.	\odot
Do not install nor use the system near equipments which generate		
Equipments like inverter equipment, private power generator, high-frequ equipment might influence the air conditioner and cause a malfunction a	and breakdown. Or the air conditioner might	\otimes
 Influence medical equipments or telecommunication equipments, and of Do not install the remote control at the direct sunlight. 	ostruct their medical activity or cause jamming.	
It could cause breakdown or deformation of the remote control.		\odot
Do not install the indoor unit at the place listed below. Places where flammable gas could leak. 	Places where cosmetics or special sprays are	
Places where carbon fiber, metal powder or any powder is floated.	frequently used.	\odot
 Place where the substances which affect the air conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammonic atmospheres. 	Highly salted area such as beach. Heavy snow area	
Places exposed to oil mist or steam directly. On vehicles and ships	 Places where the system is affected by smoke from a chimney. 	
Places where machinery which generates high harmonics is used.	· Altitude over 1000m	
Do not install the indoor unit in the locations listed below (Be according to the installation manual for each model because		
 Locations with any obstacles which can prevent inlet and outlet air of i Locations where vibration can be amplified due to insufficient strength 		
 Locations where the infrared receiver is exposed to the direct sunlight infrared specification unit) 		
· Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)	
 Locations where drainage cannot run off safely. It can affect performance or function and etc 		
Do not put any valuables which will break down by getting w Condensation could drop when the relative humidity is higher than 80% or drain		\bigcirc
 Do not use the base frame for the outdoor unit which is corrodo 		X
It could cause the unit falling down and injury.		\square
Pay attention not to damage the drain pan by weld sputter w If sputter entered into the unit during brazing work, it could cause dama		
To avoid damaging, keep the indoor unit packed or cover the indoor unit		-
Install the drain pipe to drain the water surely according to t Improper connection of the drain pipe may cause dropping water into ro		
Do not share the drain pipe for indoor unit and GHP (Gas Heat	t Pump system) outdoor unit.	_
Toxic exhaust gas would flow into room and it might cause serious dama user's health and safety.	age (some poisoning or deficiency of oxygen) to	\otimes
Be sure to perform air tightness test by pressurizing with nitrogen		
If the density of refrigerant exceeds the limit in the event of refrigerant le occur, which can cause serious accidents.	eakage in the small room, lack of oxygen can	U
For drain pipe installation, be sure to make descending slope	of greater than 1/100, not to make traps,	
and not to make air-bleeding. Check if the drainage is correctly done during commissioning and ensur	e the space for inspection and maintenance.	U
Ensure the insulation on the pipes for refrigeration circuit so		0
Incomplete insulation could cause condensation and it would wet ceiling Do not install the outdoor unit where is likely to be a nest for		
Insects and small animals could come into the electronic components an		\bigcirc
 keep the surroundings clean. Pay extra attention, carrying the unit by hand. 		_
Carry the unit with 2 people if it is heavier than 20kg. Do not use the plast		
by hand. Use protective gloves in order to avoid injury by the aluminum fin	l.	-
Make sure to dispose of the packaging material. Leaving the materials may cause injury as metals like nail and woods ar	e used in the package.	Ð
Do not operate the system without the air filter.		$\overline{\bigcirc}$
It may cause the breakdown of the system due to clogging of the heat et Do not touch any button with wet hands.	xchanger.	X
It could cause electric shock.		\bigcirc
Do not touch the refrigerant piping with bare hands when in		$\overline{}$
		()
The pipe during operation would become very hot or cold according to the opera		\bigotimes
The pipe during operation would become very hot or cold according to the opera Do not clean up the air conditioner with water. It could cause electric shock.	ting condition, and it could cause a burn or frostbite.	\bigcirc
The pipe during operation would become very hot or cold according to the opera Do not clean up the air conditioner with water. It could cause electric shock. Do not turn off the power source immediately after stopping the op	ting condition, and it could cause a burn or frostbite. eration.	\otimes
The pipe during operation would become very hot or cold according to the opera Do not clean up the air conditioner with water. It could cause electric shock.	ting condition, and it could cause a burn or frostbite. eration.	$\otimes \otimes \otimes$

1Before installation

- Install correctly according to the installation manual.
- Confirm the following points:

OUnit type/Power supply specification OPipes/Wires/Small parts OAccessory items

For un	it hanging		For refrigerant pig	90	For drain pipe					
Flat washer (M10)	Level gauge	Pipe cover(big)	Pipe cover (small)	Strap	Pipe cover(big)	Pipe cover(small)	Drain hose	Hose clamp		
\bigcirc		0	6	П	\bigcirc	0	Ĵ	()		
8	1	1	1	4	1	1	1	1		
For unit hanging	For unit hanging and adjustment	For heat insulation of gas pipe	For heat insulation of liquid tube	For pipe cover fixing	For heat insulation of drain socket	For heat insulation of drain socket	For drain pipe connecting	For drain hose mounting		


②Selection of installation location for the indoor unit


① Select the suitable areas to install the unit under approval of the user

- Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceilina.
- · Areas where there is enough space to install and service.
- · Areas where it can be drained properly. Areas where drain pipe descending slope can be taken
- Areas where there is no obstruction of airflow on both air return grille and air supply port.
- · Areas where fire alarm will not be accidentally activated by the air conditioner.
- Areas where the supply air does not short-circuit.
 Areas where it is not influenced by draft air.
- · Areas not exposed to direct sunlight. Areas where dew point is lower than around 28°C and relative humidity is lower than 80%.
- This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above.
- If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.
- Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.) · Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
- Areas where there is no influence by the heat which cookware generates.
- · Areas where not exposed to oil mist, powder and/or steam directly such as above fryer. · Areas where lighting device such as fluorescent light or incandescent light doesn't affect the
- operation. (A beam from lighting device sometimes affects the infrared receiver for the wireless remote
- control and the air conditioner might not work properly.) (2)Check if the place where the air conditioner is installed can hold the weight of the unit. If it is
- not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.
- (3)If there are 2 units of wireless type, keep them away for more than 6m to avoid malfunction due to cross communication.
- (4) When plural indoor units are installed nearby, keep them away for more than 4 to 5m

Space for installation and service

When it is not possible to keep enough space between indoor unit and wall or between indoor units, close the air supply port where it is not possible to keep space and confirm there is no short circuit of airflow



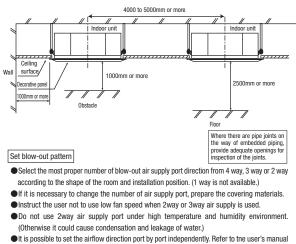


for details

③Preparation before installation

- If suspension bolt becomes longer, do reinforcement of earthquake resistant OFor grid ceiling
 - When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.
- OIn case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength
- When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt. Prepare four (4) sets of suspension bolt, nut and spring washer (M10 or M8) on site.


Ceiling opening, Suspension bolts pitch, Pipe position

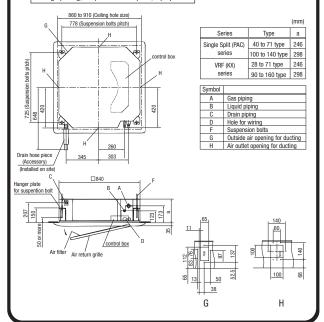

④Installation of indoor unit

Work procedure

- Prepare a ceiling hole with the size of from 860 mm \times 860 mm to 910 mm \times 910 mm 1 referring to the template attached in the package.
- 2 Arrange the suspension bolt at the right position (725mm×778mm).
- Make sure to use four suspension bolts and fix them so as to be able to hold 500N load. Ensure that the lower end of the suspension bolt should be 50mm above the ceiling plane. Temporarily put the four lower nuts 150mm above the ceiling plane and the upper 4 nuts on distant place from the lower nuts in order not to obstruct hanging the indoor unit or adjust the indoor unit position, and then hang the indoor unit.
- 5. Adjust the indoor unit position after hanging it by inserting the level gauge attached on the package into the air supply port and checking if the gap between the ceiling plane and the indoor unit is appropriate. In order to adjust the indoor unit position, adjust the lower nuts while the upper nuts are put on distant place. Confirm there is no backlash between the hanger plate for suspension bolt and the lower nut and washer

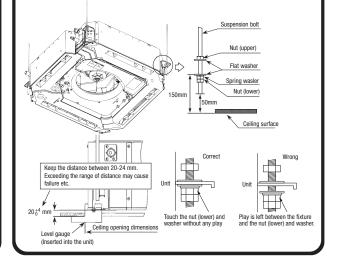

(4)Installation of indoor unit (continued)

- Make sure to install the indoor unit horizontally. Confirm the levelness of the indoor unit with a level gauge or transparent hose filled with water. Keep the height difference at both ends of the indoor unit within 3mm.
- 7. Tighten four upper nuts and fix the unit after height and levelness adjustment.

Indoor unit 7 hose

Caution

- Do not adjust the height by adjusting upper nuts. It will cause unexpected stress on the indoor unit and it will lead to deformation of the unit, failure of attaching a panel, and generating noise from the fan.
- Make sure to install the indoor unit horizontally and set the gap between the unit underside and the ceiling plane properly. Improper installation may cause air leakage, dew condensation, water leakage and noise.
- Even after decorative panel attached, still the unit height can be adjusted finely. Refer to the installation manual for decorative panel for details.
- Make sure there is no gap between decoration panel and ceiling surface, and between decoration panel and the indoor unit. The gap may cause air leakage, dew condensation and water . leakage
- In case decorative panel is not installed at the same time, or ceiling material is installed after the unit installed, put the cardboard template for installation attached on the package (packing material of cardboard box) on the bottom of the unit in order to avoid dust coming into the indoor unit.

5Refrigerant pipe

Caution

- Be sure to use new pipes for the refrigerant pipes. Use the flare nut attached to the product or a nut compatible with JIS B 8607, Class 2.
- Regarding whether existing pipes can be reused or not, and the washing method, refer to the instruction manual of the

under unit with the instant of the instant of the instant of the maximum memory, then to the instant of the outdoor unit, called unit of the outdoor unit of the outdoor unit, called unit of the outdoor unit of the outdoor unit, called unit of the outdoor unit

	Protruding	D	Pipe dia.	Min. pipe	Protruding dimer	ision for flare, mm	Flare O.D.	Flare nut	
T	dimension	d wall thickness	Rigid (Clutch type)		U	tightening torque			
	1000		mm	For R410A	Conventional tool	mm	N∙m		
Flare die			6.35	0.8			$8.9 \simeq 9.1$	$14 \sim 18$	
vinit i la		(TTT)	9.52	0.8			$12.8 \simeq 13.2$	2 32~42	
~			12.7	0.8	$0 \sim 0.5$	$0.7 \sim 1.3$	$16.2 \simeq 16.6$	$49 \sim 61$	
0	-		15.88	1			$19.3 \simeq 19.7$	$68 \sim 72$	
			19.05	1.2			$23.6 \simeq 24.0$	$100 \sim 120$	

- ●Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for refrigeration pipe installation.
- In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes. Do not use any refrigerant other than R410A.
- Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting,
- •Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.

Use special tools for R410A refrigerant.

Work procedure

- 1. Remove the flare nut and blind flanges on the pipe of the indoor unit.
 - X Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them
 - (Gas may come out at this time, but it is not abnormal.)
- Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.) 2. Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit. *Bend radius of pipe must be 4D or larger. Once a pipe is bent, do not readjust the bending Do not twist a pipe or collapse to 2/3D or smaller.
 - *Do a flare connection as follows:
 - Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the coppe pipe, and then remove them
- When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table below. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
- 3. Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
 - Make sure to insulate both gas pipes and liquid pipes completely % Incomplete insulation may cause dew condensation or water dropping.
- Refrigerant is charged in the outdoor unit. As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

5Refrigerant pipe (continued)

Refrigerating machine oil should not be applied to the threads of union or external surface of flare. It is because, even if the same tightening torque is applied, the oil is likely to decrease the slide friction force on the threads and increase, in turn, the axial component force so that it could crack the flare by the stress corrosion. Refrigerating machine oil may be applied to the internal surface of flare only.

Strap (Accessory) Pipe cover (Accessory) 71117 11111 777 11117. /The thickness of insulation should be 20mm or more


6Drain pipe

Caution


- Install the drain pipe according to the installation manual in order to drain properly.
- Imperfection in draining may cause flood indoors and wetting the household goods, etc. Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and
 inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.

Work procedure

- 1. Make sure to insert the drain hose (the end mode of soft PVC) to the end of the step part of drain socket.
- Attach the hose clamp to the drain hose around 10mm from the end, and fasten the screw within 5mm left to the nut

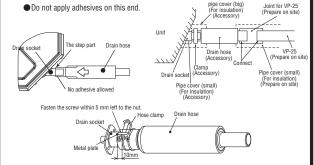


- 2. Prepare a joint for connecting VP-25 pipe, adhere and connect the joint to the drain hose (the end made of rigid PVC), and adhere and connect VP-25 pipe (prepare on site). %As for drain pipe, apply VP-25 made of rigid PVC which is on the market.
 - Make sure that the adhesive will not get into the supplied drain hose.
 - It may cause the flexible part broken after the adhesive is dried up and gets rigid. The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes. Intentional bending, expanding may cause the flexible hose broken and water leakage.



- 3. Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway.
 - Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe

Do nt set up air vent.

4. Insulate the drain pipe.




below the drain outlet of the unit. In addition, select VP-30 or bigger size for main drain pipe.



۳Ì


- Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.
 - *After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless

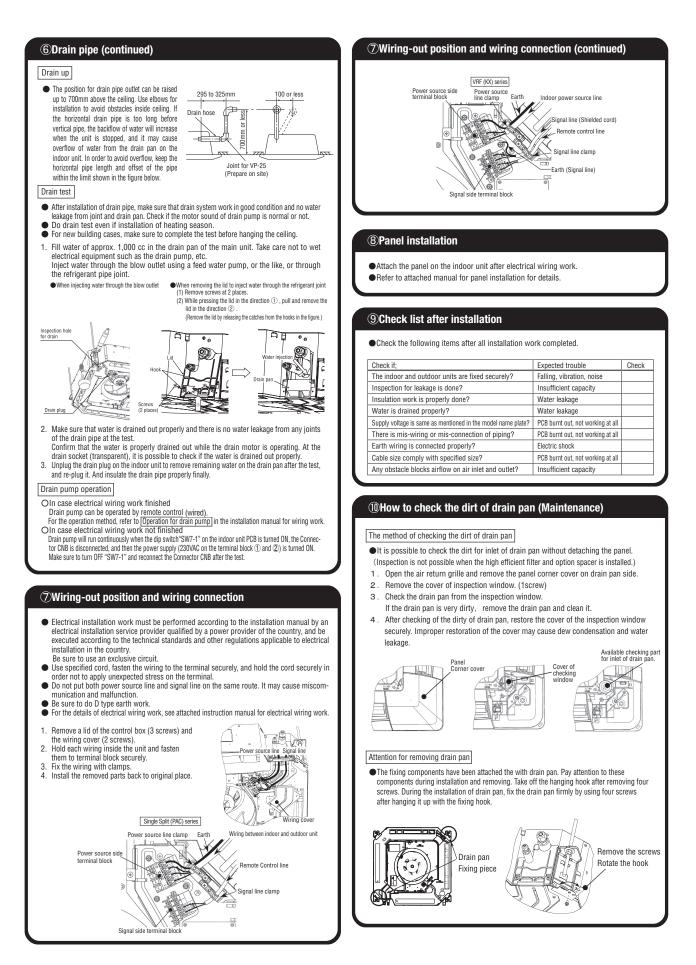


PJF012D003C

PANEL INSTALLATION MANUAL

Read this manual together with the indoor unit's installation manual

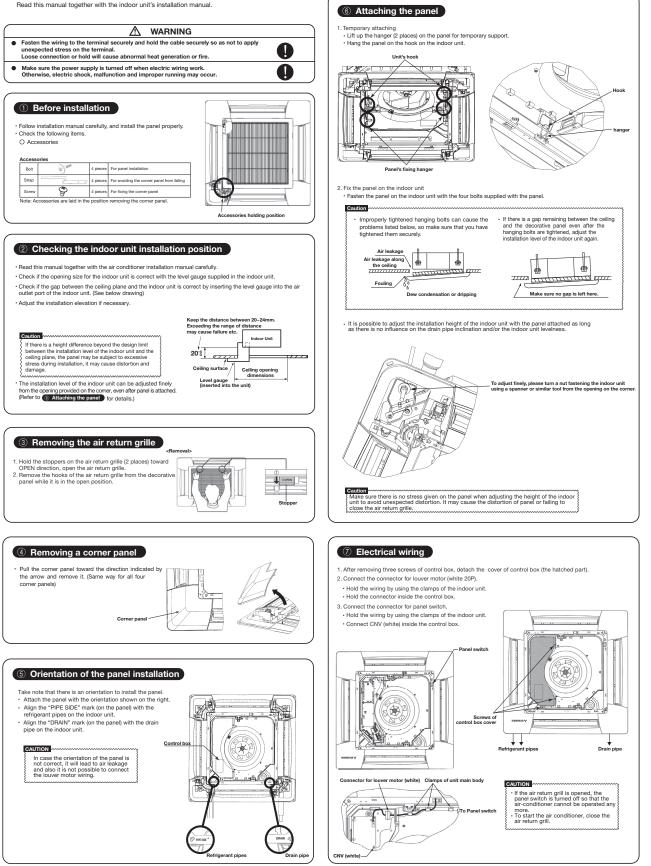

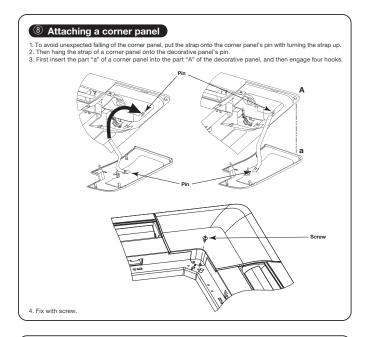


9 How to set the airflow direction

It is possible to change the movable range of the louver on the air outlet from the wired remote control. Once the top and bottom position is set, the louver will swing within the range between the top and the bottom when swing operation is chosen. It is also possible to apply different setting to each louver.


For the setting method of the louver's operating range, refer to the instruction manual of the wired remote

- If it is necessary to fix the louver position manually, follow the procedure mentioned below. 1. Shut off the main power switch. 2. Unplug the connector of the louver motor which you want to fix the position. Make sure to insulate unplugged connectors electrically with a viny tape.
- 3. Adjust the louver position slowly by hand so as to be within the applicable range mentioned below table.

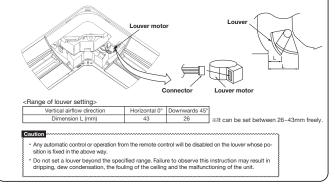

10 Attaching the air return grille

- To attach the air return grille, follow the procedure described in (3) Removing the air return grille) in the reverse order. 1. Hang the hooks of the air return grille in the hole of the panel. (The hooks of the grille can be hanged in three side
- A fair of the panel as following).
 After the grille is hanged, close the grille while the stoppers on the grille (2 places) are kept pressed to "OPEN" direction. When the grille comes to the original position, release the stoppers to hold the grille. Make sure to hear the sound of "CLICK" in both stoppers.

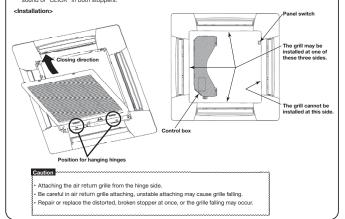

OUTDOOR AIR (OA) INTAKE FOR FDT

If it is required to intake OA through FDT unit, make sure to check following points carefully in order to conform to the requirement of customer.


If the OA intake volume through FDT unit is not satisfied with the required ventilation air volume, consider to install an independent ventilation system.

- 1) Be sure to calculate cooling/heating load considering the ventilation heat load and to decide the air-conditioning system.
- Be sure the OA intake volume to FDT unit should not exceed 20% of the Supply Air (SA) volume of FDT unit and it should be less than 2m³/min.
- 3) Be sure to decide the OA intake volume considering the mixed air temperature will be within the usage temperature range of FDT unit.

Especially in following case, please consider to intake OA after processing OA or reducing the OA intake volume.

- Be sure to equip a suitable filter for OA intaken in order to protect the dust. (Because OA does not pass through the filter equipped on FDT unit)
- 5) Be sure to insulate OA duct. (If not, it may have dew condensation.)
- 6) Be sure to interlock the booster fan for OA with the fan of FDT unit by using CNT connector.
- (If not, the dust trapped on the filter of FDT unit may be blown out to the room by the OA being intaken during the fan of FDT unit stopping)
- Be sure to select a suitable booster fan for OA considering the pressure loss in the OA duct and the pressure loss at the inlet port of FDT with following diagram.

(Please take into consideration the noise level as well)

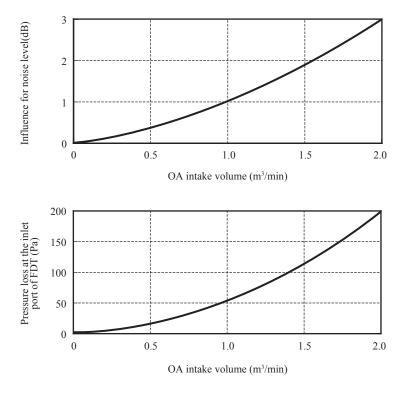

<Selection of booster fan>

Booster fan should have a static pressure calculated with following formula

Static pressure of booster fan

= the pressure loss at the inlet port of FDT (from above diagram)

+ Pressure loss in the OA duct (In case of ϕ 100 duct, 5Pa/m is required)

Select the booster fan from the fan characteristic diagram

PJA012D786

(2) Ceiling cassette-4way compact type (FDTC)

This manual is for the installation of an indoor unit.

For electrical wiring work (Indoor), refer to page 52.

For remote control installation, refer to page 56. For wireless kit installation, refer to page 166. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to page 70.

This unit must always be used with the panel.

SAFETY PRECAUTIONS

• Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself. The precautionary items mentioned below are distinguished into two levels. [AWARNING] and [ACAUTION] AWARNING: Wrong installation would cause serious consequences such as injuries or death. ACAUTION : Wrong installation might cause serious consequences depending on circumstances. Both mentions the important items to protect your health and safety so strictly follow them by any means. The meanings of "Marks" used here are as shown as follows: Never do it under any circumstances. After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit. Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed. Installation should be performed by the specialist. 0 If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit. Install the system correctly according to these installation manuals. 0 Improper installation may cause explosion, injury, water leakage, electric shock, and fire • When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149). If the density of refrigerant exceeds the limit, please consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accidents. Ouse the genuine accessories and the specified parts for installation. 0 If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit. Ventilate the working area well in case the refrigerant leaks during installation. Ø If the refrigerant contacts the fire, toxic gas is produced Install the unit in a location that can hold heavy weight. 0 Improper installation may cause the unit to fall leading to accidents Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes. Ø Improper installation may cause the unit to fall leading to accidents Do not mix air in to the cooling cycle on installation or removal of the air conditioner. \bigcirc If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit. 0 Power source with insufficient capacity and improper work can cause electric shock and fire. Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal. Ø Loose connections or hold could result in abnormal heat generation or fire. Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services 0 panel property. Improper fitting may cause abnormal heat and fire Check for refrigerant gas leakage after installation is completed. Ø If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced •Use the specified pipe, flare nut, and tools for R410A. 0 Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle. Tighten the flare nut according to the specified method by with torque wrench. If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period. • Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur \bigcirc Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak • Connect the pipes for refrigeration circuit securely in installation work before compressor is operated. or is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due 미 to abnormal high pressure in the system. Stop the compressor before removing the pipe after shutting the service valve on pump down work. If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit ! and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle Only use prescribed option parts. The installation must be carried out by the qualified installer. Ø you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire Do not repair by yourself. And consult with the dealer about repair. \land Improper repair may cause water leakage, electric shock or fire Consult the dealer or a specialist about removal of the air conditioner. Ø Improper installation may cause water leakage, electric shock or fire. • Turn off the power source during servicing or inspection work. If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan. • Do not run the unit when the panel or protection guard are taken off. (Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock. Shut off the power before electrical wiring work. Ø It could cause electric shock, unit failure and improper running

 Perform earth wiring surely. Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could will ease unit failure and leaker school due to a short circuit. Earth leakage breaker must be installed. Using the incorrect capacity. Circuit breaker schoold be the one that disconnect all poles under over current. Using the incorrect one could cause the system failure and fire. Do not use any materials other than a fuse of correct capacity. Where a fuse should be used. Connecting the circuit by wire or coper wire could cause in flatue and fire. Do not install and use the unit where corresive gas (such as suffurous acid gas etc.) on flammable gas leakages. The gas leaks and gathers around the unit, to could cause fire. Do not install and use the unit where corresive gas (such as suffurous acid gas etc.) on flammable gas leakages. Secure a space for installation, inspection and maintenance specified in the manual. Instituent space can result in acodent such as personal inpr due to failing from the installation gas. Do not use the indoor unit it as placei parties such as laundry. Indoor unit is not waterproof. It could cause electric shock and fire. Do not install nor use the system mare equipments which generate a lectomagnetic wave or high harmonics. Expense the indoor unit it as apocial purpose such as food storage, cooling for precision instrument, preservation of animals, and a work of art. Do not install the indoor unit is a place inprise to indical equipment of the incommunication equipments, and obuse a the indoor unit is a special purpose such as food storage, cooling for precision instrument, preservation of animals, and a work of art. Do not install the indoor unit is the place listel below. Prace where fammable gas could exage the individe or approver is fourt. Do not install the indoor un	▲ CAUTION
 case unit failure and electric block die is a short cricit. Exth leakage breaker must be installed. (can case electric shocks. Using the incorrect one could cause the system failure and free. On on tuse any materials other than a tuse of correct capacity where a fuse should be used. Correcting the eicorrect one could cause the system real could cause fine. On on tuse any materials other than a tuse of correct capacity where a fuse should be used. Correcting the eicorrect one could cause the system reaction where there is possibility of flammable gas teakages. If the gas teaks and gathers around the unit, a could cause fine. On on tinstall more the unit Neer corrects gas (cuch as suffrouss acid gas etc.) or flammable gas (such as finance, petroleum etc.), may be generated or accumulated, or volable flammable gas could cause fine. On on tuse the indoor unit at the place where water splashes such as talaundry. Indoor unit at the place where water splashes such as talaundry. Indoor unit at net velation of the asset of the flammable gas could cause fine. Do not tuse the indoor unit or a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art. It could cause fine should be used. Do not install the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art. It could cause here damage of the flams. Do not install the indoor unit at the place listed bot. Place where flammable gas could leak. <l< th=""><th>surely.</th></l<>	surely.
 If the earth teskage breaker is not installed, it can cause electric shocks. Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all ples under over current. Using the incorrect one could cause the system failure and fire. Do not use any materials other than a fuse of correct capacity where a fuse should be used. Cornecting the incorrect one could cause the system failure and fire. Do not install the indoor unit near the location where there is possibility of flammable gas leakages. If the gas leaks and gathers around the unit, it could cause fire. Do not install and use the unit where cornsvive gas (such as suffurous acid gas etc.) or flammable gas (such as the incorrect on the exchange, threadage) classic, and it can inframe. Secure a space for installation, inspection and maintenance specified in the manual. Institution the place where water splashes such as laundry. Indoor unit is not waterproof. It could cause electric shock and fire. Do not use the indoor unit or a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art. It could cause the damage of the items. Do not install the renduce control. Do not install the indoor unit at place listed betwo. Places where fammable gas could east. Places where fammable gas could east. Places where machinery which generate sletched by any show rare. Places where machinery which generates the advert of adverts or a special sprays are frequency which generates class the advert or cause granting in the location with and cause in adverts or a special sprays are frequency which generates the advert or cause granting in the stand in the location with a cause of the direct sunglytic. Do not install the indoor unit at the place listed below. Places where machinery which generates high harmo	
 Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current. Using the incorrect one could cause the system failure and fire. Do not use any materials other than a fuse of correct capacity where a fuse should be used. Correcting the circuit by wire or coper wire could cause unit failure and fire. Do not install the indoor unit are the location where there is possibility of flammable gas leakages. If the gas leaks and gathers around the unit, it could cause fire. Do not install and use the unit where correcive gas (such as suffrous acid gas etc.) or flammable gas could cause fire. Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in acident such as personal injury due to failing from the installation place. Do not use the indoor unit at the place where water splashes such as laundry. Indoor unit is not waterproof. It could cause leakith: shock and fire. Do not use the indoor unit of a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art. It could cause breadown or the discontinuer and the sum of a discust their medical acilyment, or telecommunication equipment, and obstruct their medical acilyment are upplicable. Do not install the indoor unit at the place listed below. Paces where carontify and a discust any power generate indoct and discust as shares. Paces where carontify and a share or any power is finated. Paces where carontify and a discust any power is finated. Paces where carontify and a discust any power is finated. Paces where carontify and a share or any power is finated. Paces where carontify must any easter as half-the and outlet or of the any outlet acid shares and half or any power is finated. Pacase where carontify and a share any power is finated.<td></td>	
 Using the incorrect one could causes the system failure and fire. On on tuse any materials other than a fuse of correct capacity where a fuse should be used. Correcting the incorrect one work of causes unit failure and fire. On on tinstall the indoor unit near the location where there is possibility of flammable gas leakages. If the gas leaks and gathers around the unit, it could cause fire. On on tinstall and use the unit vhere corrorsice gas (such as suffurous acid gas etc.) or flammable gas (such as suffure corrorsion of heat exchange, breakage of plastic parts etc. And inflammable gas could cause fire. On on tinstall no use the indoor unit at the place where water splashes such as laundy. Indoor units on twaterport. It could cause left: of could cause left: of the manual. On on tinstall nor use the indoor unit at the place where water splashes such as laundy. Indoor units not waterport. It could cause left: of could cause left: of the manual. On on tinstall nor use the system near equipments which generate dectromagnetic wave or high harmonies. Expirometh sile invertes equipment, high frequence indicate quinetting. On on tinstall the rendoc could as used in the installation and breakdown. Or the air conditioner might influence medial equipment inght filtuence the air conditioner and cause a malinuction and breakdown. Or the air conditioner might influence medial equipment and ident. Paces where carbon filter, metal powder or any powder is floated. Paces where carbon filter, metal powder or any powder is floated. Paces where carbon filter, metal powder or any powder is floated. Paces where carbon filter, metal powder or any powder is floated. Paces where carbon filter, metal powder or any powder is floated. Paces where carbon filter, metal powder or any powder is floated. Paces where carbon filter, metal powder or any powder is floated. Paces where carbon filter, met	er of correct capacity. Circuit breaker should be the one that disconnect all
Connecting the circuit by wire or copper wire could cause unit failure and fire. On on tinstall the indoor unit near the location where there is possibility of flammable gas leakages. For the gas leaks and gathers around the unit, it could cause fire. Secure a space for installation, inspection and maintenance specified in the manual. Instificient space can easily in accident such as presonal injury due to falling from the installation place. So not use the indoor unit at the place where water splasshes such as laudry. Indoor unit is not waterproof. It could cause the circ should cause there:	ould cause the system failure and fire.
If the gas leaks and gathers around the unit, it could cause fire. I on the install and use the unit where corresvice gas (such as suffurous acid gas etc.) or flammable gas (such as thiner, perfortement etc.), may be generated or accumulated, or volatile flammable substances are handle. I could cause the corression of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire. O not use the indoor unit at the place where water splashes such as laundy. Indoor unit is not waterproof. It could cause electric shock and fire. O not use the indoor unit at the place where water splashes such as laundy. Indoor unit is not waterproof. It could cause electric shock and fire. O not use the indoor unit or a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art. It could cause the damage of the items. O not install the remote control at the direct sunlight. It could cause the system mere quipments which generate electromagnetic wave or high harmonics. Equipment Bik inverts requipments for the communication equipment, and breakdown. Or the air conditioner might influence the air conditioner and cause a malfunction and breakdown. Or the air conditioner might influence the air conditioner and gase and allows? Places where fammable gas could leak. Places where fammable gas could leak. Places where fammable gas could leak. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is placed. (IV set or radio receiver is placed within 5m) Locations where when the inder doried air dorder air due out? Place subset the inder ouring is placed by ding harmonics is placed. (IV set or radio receiver is belonging). Place subset the inder ouring is placed whore managing user's belonging	wire or copper wire could cause unit failure and fire.
 a thinner, pertoleum etc.) may be generated of accimulated, or volatile fammable gas could cause free. It could cause the corrosion of heat exchange, breakage of plastic parts etc. And inflammable gas could cause free. Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in accident such as personal injury due to falling from the installation place. Do not use the indoor unit at the place where water splashes such as laundry. Indoor unit is not waterproof. It could cause electic shock and fire. Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art. It could cause the damage of the items. Do not install nor use the system ner equipments which generate electromagnetic wave or high harmonics. Equipments like inverter equipment, private power generator, high-frequency medical equipment or telecommunication equipments, and obstruct their medical activity or cause jamming. Do not install the renote control at the direct sunlight. It could cause the accondinger and cause a maintuccion and theradown, Or the air conditioner might influence medical govider or any powder is floated. Places where fammable gas could leak. Places where fammable gas could leak memories is used. Places where fammable gas could leak memories is used. Places where fammable gas could leak memories is used. Highly stalfar area such as baech. Highly stalfar area such as as affected by migh harmonics is placed. (IV set or rador receiver is placed within 5m) Locations whe	ers around the unit, it could cause fire.
Insufficient space can result in accident such as personal injury due to falling from the installation place. De not use the indoor unit at the place where water splashes such as laundy. Indoor unit is not waterproof. It could cause electric shock and fire. Do not use the indoor unit or a special purpose such as food storage, cooling for precision intrument, preservation of animals, plants, and a work of at. It could cause the damage of the items. Do not install nor use the system ear equipments which generate electromagnetic wave or high harmonics. Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the ai conditioner and cause a malfunction and breakdown. Or the air conditioner might influence medical equipment of the telecommunication equipment might influence the air conditioner and acuse a malfunction and breakdown. Or the air conditioner might influence medical equipment of the telecommunication equipment might influence the air conditioner are generate. Do not install the indoor unit at the place listed below. Places where cosmotifier, metal powder or any powder is findend. Places where cosmotifier, metal powder or any powder is findend. Places where cosmotifier, metal powder or any powder is listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation. Locations where what funct main the locations listed below (Be sure to install the indoor unit is coations where where limit and the cleach word because each indoor unit has each limitation. Locations where where function and eace. Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit is coations where where where the are equipment affected by high harmonics is placed. (IV set or radio receiver is placed within 5m) Locations where during can during the times are are angle gloinhole of drain pan and leakage of water. Do not install	tc.) may be generated or accumulated, or volatile flammable substances are handled. 🚫 📗
 Do not use the indoor unit at the place where water splashes such as laundry. Indoor unit is not waterproof. It could cause electric shock and free. Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plantas, and a work of art. It could cause the damage of the items. Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics. Equipments like inverts equipment, private power generator, high-requery medical equipment, or telecommunication equipment might influence the air conditioner and cause a maflunction and breakdown. Or the air conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming. Do not install the rendoc control at the direct sunlight. It could cause breakdown or deformation of the remote control. Do not install the indoor unit at the place listed below. Places where fammable gas could leak. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is placed. (IV set or radio receiver is placed within 5m) Locations where vitation can be amplified due to insufficient strength of structure. Locations where avoinding which will treak down by getting wet under the air conditioner. Condensation could dray when the relative humidity is higher than 80% or drain pipe is clogged, and it damage user's belongings. Do not just the tains pluce the drain pipe for indoor unit and Struct when brazing work is done near the unit. Locations where where any unito base buch indiver with close series damage (some plasming work. If on a madelakage of water. To avoid damaging, keep the indoor unit and GHP	
 Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art. It could cause the damage of the items. Do not install nor use the system mear equipments which generate electromagnetic wave or high harmonics. Equipment like invetre equipment, private power generator, high-frequency medical equipment or telecommunication equipment ling interpret energy and a could cause and mutch and brackwork. Places where canon fiber, metal powder is floated. Po not install the indoor unit at the place listed below. Places where canon fiber, metal powder or any powder is floated. Places where canon fiber, metal powder or any powder is floated. Places where canon fiber, metal powder or any powder is floated. Places where canon fiber, metal powder or any powder is floated. Places where canon fiber, metal powder or any powder is floated. Places where canon fiber, metal powder or any powder is floated. Places where canon fiber, metal powder or any powder is floated. Places where machinery which generates high harmonics is used. Places where achinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Veators where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit) Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit) Locations where damage cont un off stricty. Do not use the base frame for the outdor unit which is corroded or damaged after a long period of use. (It could cause the unit falling down and injury). Locations where damage could use whether harared receiver is placed within 5m) Locations where the infrared receiver is oplaced or the asset belongings	unit at the place where water splashes such as laundry.
 Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics. Equipment high influence meta exic conditioner and a case an antinuction and breadwork. Or the air conditioner and is a conditioner and a case an antinuction and breadwork. Or the air conditioner and constraints of the air conditioner and breadwork. Or the air conditioner and breadwork. It could cause breakdown or deformation of the remote control. Do not install the indoor unit at the place listed below. Places where flammable gas could leak. Places where carbon fiber, metal powder or any powder is floated. Places where cosmetics or special sprays are frequently used. Places where cosmetics or special sprays are installed gas, cald, alial or ammoric atmosphere. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is placed. (If year or ratio receiver is placed within 5m) Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit) is placed where harmonic the flag of the air scoredido or amaging user's belongings. Do not use the base frame for the outdoor unit which is correded or damaged after a long period of use. To avoid damaging, keep the indoor unit and BH (Gas Heat Pump system) outdoor unit. Pata tention not to damage the drain pan by weld sputter when brazing work is done near the unit. If sputter entered into the unit during prazing work, it	unit for a special purpose such as food storage, cooling for precision ion of animals, plants, and a work of art.
 influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamining. Do not install the remote control at the direct sunlight. It could cause breakdown or deformation of the remote control. Do not install the indoor unit at the place listed below. Places where flammable gas could leak. Places where cosmolities, metal powder or any powder is floated. Places where cosmolities, and ships Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Venes where is possible and into receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit) Locations where where durance receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit) Locations where durance or function and etc. Do not put any valuables which will break down by getting wet under the air conditioner. Condensation could droy when the relative the air bards of an ing is placed. (IV set or radio receiver is placed within 5m) Locations where drainage conduct nuil flag. Condensation could droy when the relative humidity is higher than 80% or drain pies is obgged, and it damages user's belongings. Do not put any valuables which will break down by getting wet under the air conditioner. Condensation could droy when the relative humidity is higher than 80% or drain pies is obgged, and it damages user's belongings. Do not set the base frame for the outdoor unit and GHP (Gas Heat Pump system) outdoor unit. It satifier entered in the twit the water surely according to the installation manual. Improper connection of the drain pipe may cause droping water infrared specing droping water inforem and analesage of vaser. Do not	ne system near equipments which generate electromagnetic wave or high harmonics. equipment, private power generator, high-frequency medical equipment, or telecommunication
 It could cause breakdown or deformation of the remote contol. Do not install the indoor unit at the place listed below. Places where carbon fiber, metal powder or any powder is floated. Places where carbon fiber, metal powder or any powder is floated. Places where carbon fiber, metal powder or any powder is floated. Places where carbon fiber, metal powder or any powder is floated. Places where administic as childing as, childing as,	ents or telecommunication equipments, and obstruct their medical activity or cause jamming.
 Places where flammable gas could leak. Places where flammable gas could leak. Places where cosmetics or special sprays are frequently used. Places where substances which facts the air conditioner are generated to the substance which facts the air conditioner are generated to the installation manual for each model because each indoor unit as each limitation. On entices and sings Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where machinery which generates high harmonics is used. Places where what an one bar oplified due to installed the indoor unit according to the installation manual for each model because each indoor unit as each limitation? Locations where the infrared specification unit) Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is blengings. Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use. (It could cause the unit falling down and injury. Pay attention not to damage the drain pap by weld sputter when brazing work is done near the unit. If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit and GHP (Gas Heat Pump system) outdoor unit. To accur, which can cause serious accidents. Do not use the aset phe indoor unit and GHP (Gas Heat Pump system) outdoor unit. To cause damaging user's belon	or deformation of the remote control.
 Places where carbon ther, metal powder or any powder is fixated. Places where the substances which affect the air conditioner are generated such as sulfile gas, chindrie gas, acid, alleil or ammonic atmospheres. Places exposed to all mist or steam directly. On whicks and ships Places where machinery which generates high harmonics is used. Highly salide are such as beach. Heavy snow area Places where machinery which generates high harmonics is used. Altitude over 1000m On on install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation) Locations where an explicit due to insufficient strength of structure. Locations where a near polied due to insufficient strength of structure. Locations where a near polied due to insufficient strength of structure. Locations where a near polied due to insufficient strength of structure. Locations where a near polied due to insufficient strength of structure. Locations where a near polied due to insufficient strength of structure. Locations where a near our fund of staley. It can affect performance or function and etc. On on tu tary valuables which will break down by getting wet under the air conditioner. Condensation could drop when the relative humidity is higher than 80% or drain pipe is cloged, and it damages user's belongings. Do not use the hase prime in due to any on work, it could cause damage (pinhole) of drain pan and leakage of water. Install the drain pipe to rindoor unit and GHP (Gas Heat Pump system) outdoor unit. The drain pipe to rindoor unit and GHP (Gas Heat Pump system) outdoor unit. Se sure to perform air tightness test by pressurizing with introgen gas after completed refrigerant tepside. Se sure to perform air tig	
 Places where machinery which generates high harmonics is used. Altitude over 1000m Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation) Locations where whaton can be amplified due to insufficient strength of structure. Locations where a enquinent affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where a drainage cannot run off safely. Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use. Locations not to damage the drain pan by weld sputter when brazing work is done near the unit. H sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. Do not share the drain pipe to rindoor unit and GHP (Gas Heat Pump system) outdoor unit. Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Se sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant tipping work. If the drains pipe for indoor unit and GHP (Gas Heat Pump system) nucleor on spare the drain pipe to rindoor unit and gales of greater than 1/100, not to make traps, and not to make accidentis. Go hor sha	er, metal powder or any powder is floated. frequently used. s which aftet the air conditioner are generated e gas, acid, alkali or ammonic atmospheres. Heavy snow area is or steam directly. Places where the system is affected by
 Locations with any obstacles which can prevent inlet and outlet air of the unit Locations where whathon can be amplified due to isufficient strengting of structure. Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit) Locations where a nequipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where a nequipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where an endition and the claim set or the outdoor unit which is corroded or damaged after a long period of use. It could cause the unit fulling down and injury. Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit. If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging user's helongings. Do not share	por unit in the locations listed below (Be sure to install the indoor unit
 intrared specification unit) Locations where an equipment affected by high harmonics is placed. (IV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (IV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (IV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (IV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (IV set or radio receiver is placed within 5m) Locations where an equipment affected by high harmonics is placed. (IV set or radio receiver is placed within 5m) Do not put any valuables which will break down by getting wet under the air conditioner. Condensation could drow when the relative humidity is higher than 80% or drain pipe is doged, and it damages user's belongings. Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit. If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging here the drain pipe to drain the water surely according to the installation manual. Improper connection of the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. To do exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to court, which can cause serious scudents. Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make arisylend commissioning and ensure the sp	acles which can prevent inlet and outlet air of the unit on can be amplified due to insufficient strength of structure.
It can affect performance or function and etc. Do not put any valuables which will break down by getting wet under the air conditioner. Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings. Do not sute the base frame for the outdoor unit which is corroded or damaged after a long period of use. It could cause the unit falling down and injury. Pay attention not to damage the drain pab yweld sputter when brazing work is done near the unit. If youter entered into the unit during brazing work, it could cause damage (pinhele) of drain pan and leakage of water. To avoid domaing , keep the indoor unit packed or over the indoor unit. Install the drain pipe to drain the water surely according to the installation manual. Improver connection of the drain pipe may cause dropping water into room and damaging user's belongings. Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Toxic exhause tags would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to which can cause serious active. Be sure to perform air lightness test by pressurizing with nitrogen gas after completed refrigerant piping work. For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make arbition. Check the drainage is correctly done during commissioning and ensure the space for inspection and maintenance. Charst the drainage is orrectly done during commissioning and ensure the space for inspection and maintenance. Incomplete insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.	it) ipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings. To not use the base frame for the outdoor unit which is corroded or damaged after a long period of use. It could cause the unit falling down and injury. Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit. If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit. Install the drain pipe to drain the water surely according to the installation manual. Improper connection of the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. To de exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safety. Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant tightness test by messurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance. Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.	or function and etc
 It could cause the unit falling down and injury. Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit. If sputter entered into the unit during brazing work it could cause damage (pinhele) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit. Install the drain pipe to drain the water surely according to the installation manual. Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings. Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Toric exchase tags would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safety. Be sure to perform air lightness test by pressurizing with nitrogen gas after completed retrigerant tpiping work. If the density of retrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding. Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance. Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables. 	en the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings.
If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit. Install the drain pipe to drain the water surely according to the installation manual. Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings. Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to wars' heating and safety. Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which causes serious accidents. For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding. Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance. Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.	ling down and injury.
 Install the drain pipe to drain the water surely according to the installation manual. Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings. Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safety. Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding. Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance. Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables. 	unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water.
Independent contraction on the train pipe may cause outpring match mixed much contrained used is deutrograps. Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safely. Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of driftigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding. Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance. Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.	to drain the water surely according to the installation manual.
 user's health and safety. Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make tarps, and not to make ari-bleeding. Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance. Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables. 	n pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit.
occur, which can cause serious accidents. For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding. Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance. Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.	
and not to make air-bleeding. Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance. • Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.	erious accidents.
Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.	leeding.
incomplete insulation could cause condensation and it would wer cening, nooi, and any other valuables.	on the pipes for refrigeration circuit so as not to condense water.
Do not install the outdoor unit where is likely to be a nest for insects and small animals.	door unit where is likely to be a nest for insects and small animals.
Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean. P ave extra attention, carrying the unit by hand.	an.
Carry the unit with 2 people if its heaver than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin.	le if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit 💶 📗
Make sure to dispose of the packaging material. Leaving the materials may cause injury as metals like nail and woods are used in the package.	
Do not operate the system without the air filter. It may cause the breakdown of the system due to clogging of the heat exchanger.	
Do not touch any button with wet hands. It could cause electric shock.	
Do not touch the refrigerant piping with bare hands when in operation. The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbile.	gerant piping with bare hands when in operation.
Do not clean up the air conditioner with water. It could cause electric shock.	conditioner with water.
Do not turn off the power source immediately after stopping the operation. Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.	er source immediately after stopping the operation.
Do not control the operation with the circuit breaker. It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.	ation with the circuit breaker.

1 Before installation

- Install correctly according to the installation manual.
- Confirm the following points:

O Unit type/Power supply specification O Pipes/Wires/Small parts O Accessory items

For unit	hanging		For refrigerant pipe			For dra	om pipe	
Flat washer (M10)	Level gauge (Insulation)	Pipe cover(big)	Pipe cover (small)	Strap	Pipe cover(big)	Pipe cover(small)	Drain hose	Hose clamp
\bigcirc		6	6	F	\bigcirc	Ø	¢ D	()
8	4	1	1	4	1	1	1	1
For unit hanging	in hoisting in the	For heat insulation of gas pipe	For heat insulation of liquid tube	For pipe cover	For heat insulation of drain socket	For heat insulation of drain socket		For drain hose mounting


2 Selection of installation location for the indoor unit

① Select the suitable areas to install the unit under approval of the user

- Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling
- Areas where there is enough space to install and service.
- Areas where it can be drained properly. Areas where drain pipe descending slope can be taken. Areas where there is no obstruction of airflow on both air return grille and air supply port.
- Areas where fire alarm will not be accidentally activated by the air conditioner.
- Areas where the supply air does not short-circuit.
- Areas where it is not influenced by draft air.
- Areas not exposed to direct sunlight.
- Areas where dew point is lower than around 28°C and relative humidity is lower than 80% This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above If there is a possibility to use it under such a condition, attach additional insulation of 10 to
- 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.
- Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.) Areas where any items which will be damaged by getting wet are not placed such as food, table
- wares, server, or medical equipment under the unit. Areas where there is no influence by the heat which cookware generates.
- Areas where not exposed to oil mist, powder and/or steam directly such as above fryer. Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.
- (A beam from lighting device sometimes affects the infrared receiver for the wireless remote control and the air conditioner might not work properly.)
- ⁽²⁾ Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.
- ③ If there are 2 units of wireless type, keep them away for more than 5m to avoid malfunction due to cross communication.
- When plural indoor units are installed nearby, keep them away for more than 4m.

Space for installation and service


- When it is not possible to keep enough space between indoor unit and wall or between indoor units, close the air supply port where it is not possible to keep space and confirm there is no short circuit of airflow
- Install the indoor unit at a height of more than 2.5m above the floor.

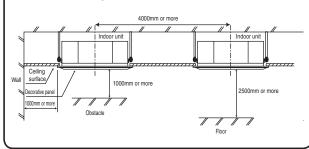

③ Preparation before installation

- If suspension bolt becomes longer, do reinforcement of earthquake resistant. O For grid ceiling
- When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt
- O In case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength. When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt.
- Prepare four (4) sets of suspension bolt, nut and spring washer (M10 or M8) on site.

Ceiling opening, Suspension bolts pitch, Pipe position

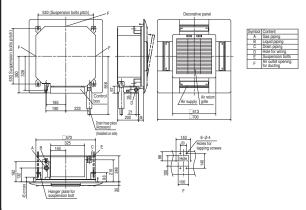


④ Installation of indoor unit

- Work procedure
 - This units is designed for 2 x 2 grid ceiling.
- If necessary, please detach the T bar temporarily before you install it. If it is installed on a ceiling other than 2 x 2 grid ceiling, provide an inspection port on the control box side.
- Arrange the suspension bolt at the right position (530mm×530mm).
- Make sure to use four suspension bolts and fix them so as to be able to hold 500N load.
- Ensure that the lower end of the suspension bolt should be 45mm above the ceiling plane. Temporarily put the four lower nuts 88mm above the ceiling plane and the upper nuts on distant place from the lower nuts in order not to obstruct hanging the indoor unit or adjust the indoor unit position, and then hang the indoor unit.



Adjust the indoor unit position after hanging it by inserting the level gauge attached on the package into the air supply port and checking if the gap between the ceiling plane and the indoor unit is appropriate. In order to adjust the indoor unit position, adjust the lower nuts while the upper nuts are put on distant place. Confirm there is no backlash between the hanger plate for suspension bolt and the lower nut and washer

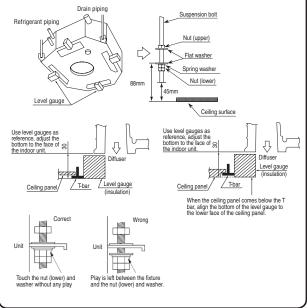

④ Installation of indoor unit (continued)

- 6. Make sure to install the indoor unit horizontally. Confirm the levelness of the indoor unit with a level gauge or transparent hose filled with water. Keep the height difference at both ends of
- the indoor unit within 3mm. Tighten four upper nuts and fix the unit after height and levelness adjustment.

Caution

- Do not adjust the height by adjusting upper nuts. It will cause unexpected stress on the indoor unit and it will lead to deformation of the unit, failure of attaching a panel, and generating noise from the
- Make sure to install the indoor unit horizontally and set the gap between the unit underside and the ceiling plane properly. Improper installation may cause air leakage, dew condensation, water
- leakage and noise. Even after decorative panel attached, still the unit height can be adjusted finely. Refer to the
- Installation manual for decorative panel for details.
 Make sure there is no gap between decoration panel and ceiling surface, and between decoration
- panel and the indoor unit. The gap may cause air leakage, dew condensation and water leakage. In case decorative panel is not installed at the same time, or ceiling material is installed after the unit installed, but the cardboard template for installation attached on the package (packing materia of cardboard box) on the bottom of the unit in order to avoid dust coming into the indoor unit.

5 Refrigerant pipe

Caution

- Use the new refrigerant pipe.
 When re-using the existing pipe system for R22 or R407C, pay attention to the following items.
 Change the flare nuts with the attached ones (JIS category 2), and reprocess the flare parts.
- Do not use thin-walled pipes.
 Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for refrigeration pipe installation.
- In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.
- Do not use any refrigerant other than R410A. Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.
- Store the copper pipes indoors and seal the both end of them until they result in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and
- compressor breakdown, etc.
 Use special tools for R410A refrigerant.

Work procedure

- 1. Remove the flare nut and blind flanges on the pipe of the indoor unit
- Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
- (Gas may come out at this time, but it is not abnormal.) Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.) 2. Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit. We lead the pipe with as big radius as possible and do not bend the pipe repeatedly. In addition, do not twist and crush the pipes.
 % Do a flare connection as follows:

- Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe. and then remove them.
- When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table below. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe. Cover the flare connection part of the indoor unit with attached insulation material after a gas
- 3. leakage inspection, and tighten both ends with attached modulus in a bakage use to insulate both gas pipes and liquid pipes completely. % Incomplete insulation may cause dew condensation or water dropping.

- Refrigerant is charged in the outdoor unit. As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

			Strap (Accessory) Pipe cover (Accessory)
L	Pipe diameter	Tightening torque N-m	
	? 6.35	14 to 18	
	? 9.52	34 to 42]
ſ	? 12.7	49 to 61	I ATTICK ATTICK
[? 15.88	68 to 82	
	? 19.05	100 to 120	The thickness of insulation should be 20mm or more.

6 Drain pipe

Caution

- Install the drain pipe according to the installation manual in order to drain properly. Imperfection in draining may cause flood indoors and wetting the household goods etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance

6 Drain pipe (continued)


Work procedure

Indoor unit

hose

Make sure to insert the drain hose (the end mode of soft PVC) to the end of the step part of drain socket.


- Attach the hose clamp to the drain hose around 10mm from the end, and fasten the screw within 5mm left to the nut.
- Do not apply adhesives on this end.

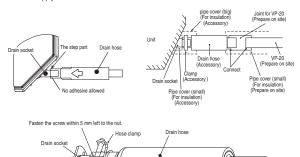

- 2. Prepare a joint for connecting VP-20 pipe, adhere and connect the joint to the drain hose (the end made of rigid PVC), and adhere and connect VP-20 pipe (prepare on site).
 - ※ As for drain pipe, apply VP-20 made of rigid PVC which is on the market
 - Make sure that the adhesive will not get into the supplied drain hose It may cause the flexible part broken after the adhesive is dried up and gets rigid.
 - Do not bend or make an excess offset on the drain hose as shown in the picture. Bend or excess offset will cause drain leakage.



- 3. Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway
- Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
- Do not set up air vent



4. Insulate the drain pipe.


ater than 1/100 ndina stop a Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.

VP-30 or bigge

※ After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

Drain up

 The position for drain pipe outlet can be raised up to 600mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below.



6 Drain pipe (continued)

Drain test

- After installation of drain pipe, make sure that drain system work in good condition and no water leakage from joint and drain pan. Check if the motor sound of drain pump is normal or not.
 Do drain test even if installation of heating season.
- For new building cases, make sure to complete the test before
- hanging the ceiling.
- 1. Pour water of about 1000cc into the drain pan in the indoor unit by pump so as not to get the electrical component wet. 2. Make sure that water is drained out properly and there is no water
- leakage from any joints of the drain pipe at the test. Confirm that the water is properly drained out while the drain motor is operating. At the drain socket (transparent), it is possible to check if the water is drained out properly.
- Unplug the drain plug on the indoor unit to remove remaining water on the drain pan after the test, and re-plug it. And insulate the drain pipe properly finally.

Drain pump operation

- O In case electrical wiring work finished
- Drain pump can be operated by remote control (wired). For the operation method, refer to Operation for drain pump in the installation manual for wiring
- work. ${\rm O}$ In case electrical wiring work not finished
- Drain pump will run continuously when the dip switch"SW7-1" on the indoor unit PCB is turned ON, the Connector CNB is disconnected, and then the power supply (220-240VAC on the terminal block [$(\hat{U} \text{ and } (\hat{\mathbb{R}}) \text{ or } [\hat{U} \text{ and } (\hat{\mathbb{R}})]$) is turned ON.


Drain plug

-<u>J</u>-

Make sure to turn OFF "SW7-1" and reconnect the Connector CNB after the test.

⑦ Wiring-out position and wiring connection

- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country. Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
- Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- Be sure to do D type earth work.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work.
- Remove a lid of the control box (1 screws).
 Hold each wiring inside the unit and fasten them to terminal block securely.
- 3. Fix the wiring with clamp.
- 4. Install a lid of the control box back to original place

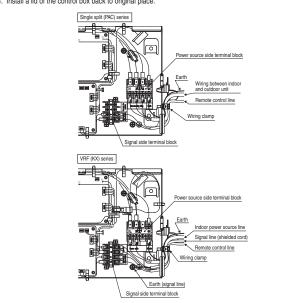

⑧ Panel installation

- After wiring work finished, install the panel on the indoor unit.
 Refer to attached panel installation manual for details. (see next page)

Accessory items

1	Hook	P	1 piece	For fixing temporarily
2	Chain	recorded	2 pieces	
3	Bolt	() Imma	4 pieces	For installing the panel
4	Screw	P	1 piece	For attaching a hook
5	Screw	(Jun	2 pieces	For attaching a chain

Attach the panel on the indoor unit after electrical wiring work.
Refer to attached manual for panel installation for details. (See next page)

(9) Check list after installation


Check the following items after all installation work completed.


Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	

PJA012D783 🛕

PANEL INSTALLATION MANUAL

Please read this manual together with the indoor unit's installation manual

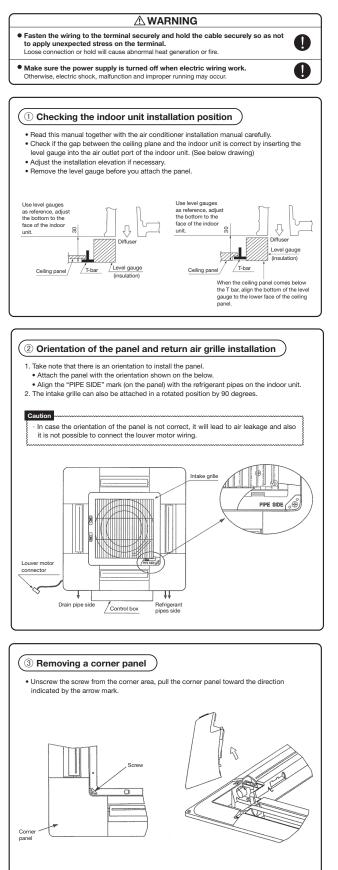

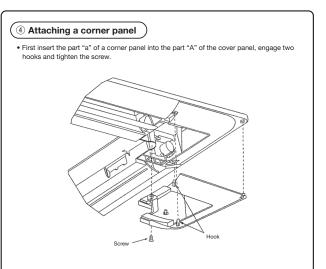

5 Panel installation

• Install the panel on the unit after completing the electrical wiring.

Accessories

1	Hook	79	1 piece	For fixing temporarily
2	Chain	respondent	2 pieces	
3	Screw	Dama	4 pieces	For hoisting the panel
4	Screw	() jun	1 piece	For attaching a hook
5	Screw	Ann	2 pieces	For attaching a chain

 Screw in two bolts out of the four supplied with the panel by about slightly less than 5mm.
 (• mark (AB) [Figure 1]


Attach the hook supplied with the panel to the main body with the hook fixing screw (1 screw).


4. Please remove the screw of a corner panel and

5. A panel is hooked on two bolts (
 mark (A)(B)).

remove a corner panel. (four places)

[Figure 2] 3. Open the intake grille. Figure 1)

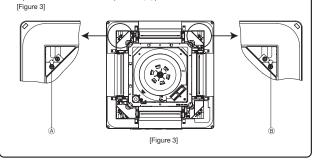

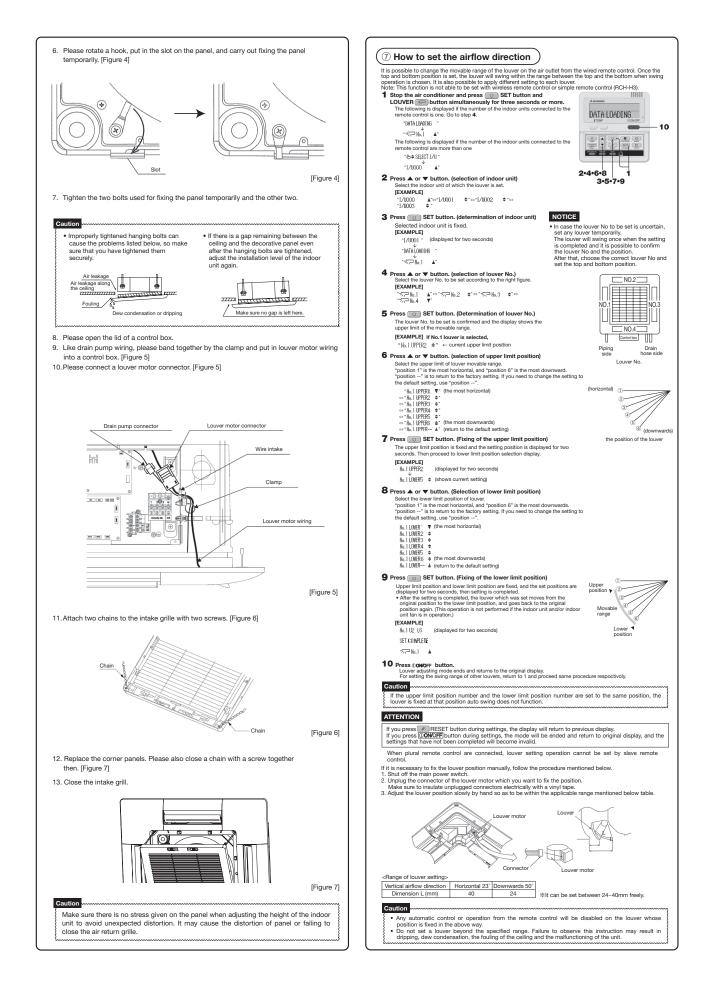

(3) Duct connected-Low / Middle static pressure type (FDUM)

(a) Indoor unit

PJG012D008B

This manual is for the installation of an indoor unit. For electrical wiring work (indoor), refer to page 52. For remote control installation, refer to page 56. For wireless kit installation, refer to page 168. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to page 70.

SAFETY PRECAUTIONS


- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, [<u>AWARNING</u>] and [<u>ACAUTION</u>]. [<u>AVARNING</u>]: Wrong installation would cause serious consequences such as injuries or death. [<u>ACAUTION</u>]: Wrong installation might cause serious consequences depending on circumstances.
- Interpret and the set of the Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

A WARNING

Installation should be performed by the specialist.	
If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.	0
Install the system correctly according to these installation manuals.	•
Improper installation may cause explosion, injury, water leakage, electric shock, and fire.	0
Check the density refered by the foumula (accordance with IS05149).	•
If the density exceeds the limit density, please consult the dealer and installate the ventilation system.	•
Use the genuine accessories and the specified parts for installation.	0
If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.	
Ventilate the working area well in case the refrigerant leaks during installation. If the refrigerant contacts the fire, taxic gas is produced.	0
Install the unit in a location that can hold heavy weight.	0
Improper installation may cause the unit to fall leading to accidents.	0
Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.	0
Improper installation may cause the unit to fall leading to accidents.	0
Do not mix air in to the cooling cycle on installation or removal of the air conditioner.	$\overline{\frown}$
If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries.	$\underline{\bigcirc}$
• Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit. Power source with insufficient capacity and improper work can cause electric shock and fire.	0
Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.	0
Loose connections or hold could result in abnormal heat generation or fire.	
Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services	
panel property. Improper fitting may cause abnormal heat and fire.	Ð
	-
Check for refrigerant gas leakage after installation is completed. If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced.	0
Use the specified pipe, flare nut, and tools for R410A.	-
Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle.	0
Tighten the flare nut according to the specified method by with torque wrench.	-
If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period.	0
•Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can	-
occur.	$ \wedge $
Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.	S
Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.	-
If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system.	0
• Stop the compressor before removing the pipe after shutting the service valve on pump down work.	-
If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.	0
Only use prescribed option parts. The installation must be carried out by the qualified installer.	
If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.	U
Do not repair by yourself. And consult with the dealer about repair. Improper repair may cause water leakage, electric shock or fire.	\bigcirc
Consult the dealer or a specialist about removal of the air conditioner.	
Improper installation may cause water leakage, electric shock or fire.	U
•Turn off the power source during servicing or inspection work.	
If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.	0
Do not run the unit when the panel or protection guard are taken off.	~
Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock.	\bigcirc
●Shut off the power before electrical wiring work.	-
It could cause electric shock, unit failure and improper running.	Ð

CAUTION	
Perform earth wiring surely.	
Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock or fire due to a short circuit.	Ð
Earth leakage breaker must be installed. If the earth leakage breaker is not installed, it could cause electric shocks or fire.	
Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all plan under over overant	
poles under over current. Using the incorrect one could cause the system failure and fire.	U
Do not use any materials other than a fuse of correct capacity where a fuse should be used. Connecting the circuit by wire or copper wire could cause unit failure and fire.	\bigcirc
Do not install the indoor unit near the location where there is possibility of flammable gas leakages if the gas leaks and gathers around the unit, it could cause fire.	$\overline{\mathbb{O}}$
Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (suc as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handlet it could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire.	
Secure a space for installation, inspection and maintenance specified in the manual.	0
Insufficient space can result in accident such as personal injury due to falling from the installation place. Do not use the indoor unit at the place where water splashes such as laundry.	
Indoor unit is not waterproof. It could cause electric shock and fire.	\square
 Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art. It could cause the damage of the items. 	\bigcirc
Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics. Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunicatio equipment might influence the air conditioner and cause an antifuction and breakdown. Or the air conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming	$ \bigcirc $
Do not install the remote control at the direct sunlight. It could cause breakdown or deformation of the remote control.	\bigcirc
Do not install the indoor unit at the place listed below. Places where fammable gas could leak. Places where carbon fiber, melal powder or any powder is floated. Place where the substances which affect the air conditioner are generated such as sulfide gas, childride gas, acid, alari or ammoit: atmospheres. Places where machinere values fiber values mere the system is affected by move from a chinney. Places where machinere which enerates high harmonics is used.	$^{\circ}$
Places where machinery which generates high harmonics is used. Altitude over 1000m Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit	
according to the installation manual for each model because each indoor unit has each limitation) - Locations with any obstacles which can prevent inlet and outlet air of the unit - Locations where vibration can be amplified due to insufficient strength of structure. - Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the - Infrared specification unit) - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) - Locations where drainage cannot run off safely.	\odot
Do not put any valuables which will break down by getting wet under the air conditioner. Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings.	\bigcirc
Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use it could cause the unit failing down and injury.	\odot
Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit.	
Install the drain pipe to drain the water surely according to the installation manual.	0
Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings. Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) b	
user's health and safety.	\Box
Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can eavie sension saccidents.	0
 For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps and not to make air-bleeding. 	
Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance.	
 Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables. 	
Do not install the outdoor unit where is likely to be a nest for insects and small animals. Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to	$\overline{\mathbf{O}}$
keep the surroundings clean. • Pay extra attention, carrying the unit by hand. Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the uni	
Carly the full with comparison of the second s	
Leaving the materials may cause injury as metals like nail and woods are used in the package. Do not operate the system without the air filter.	$ \ge $
It may cause the breakdown of the system due to clogging of the heat exchanger. Do not touch any button with wet hands.	씠
It could cause electric shock. Do not touch the refrigerant piping with bare hands when in operation.	$ \ge $
The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbite	\odot
Do not clean up the air conditioner with water. It could cause electric shock.	\bigcirc
Do not turn off the power source immediately after stopping the operation. Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.	\otimes
Do not control the operation with the circuit breaker. It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.	\bigcirc

OThis model is middle static ducted type air conditioning unit. Therefore, do not use this model for direct blow type air conditioning unit.

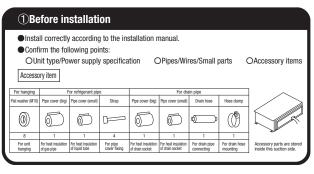

2 Selection of installation location for the indoor unit


- Select the suitable areas to install the unit under approval of the user.
 Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
 - Areas where there is enough space to install and service.
 - Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
 - Areas where there is no obstruction of airflow on both air return grille and air supply port.
 - · Areas where fire alarm will not be accidentally activated by the air conditioner.
 - Areas where the supply air does not short-circuit.
 - · Areas where it is not influenced by draft air.
 - Areas not exposed to direct sunlight.
 - Areas where dew point is lower than around 28°C and relative humidity is lower than 80%.
 This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above.
 If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm this function of a condition of a distribution of 10 to 20mm this function.
 - 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.
 Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
 Areas where any items which will be damaged by getting wet are not placed such as food,
 - table wares, server, or medical equipment under the unit.
 - Areas where there is no influence by the heat which cookware generates.
 - Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
 Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.
 - A beam from lighting device sometimes affects the infrared receiver for the wireless remote control and the air conditioner might not work properly.)
- ② Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.

Space for installation and service

Make installation altitude over 2.5m.


(Indoor Unit)


Select either of two cases to keep space for installation and services.

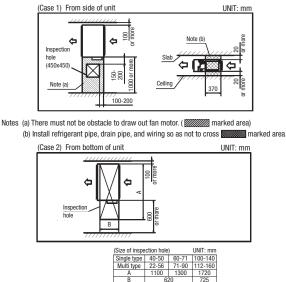


③Preparation before installation


- If suspension bolt becomes longer, do reinforcement of earthquake resistant. OFor grid ceiling
 - When the suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.
- Oln case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.
- When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt. • Prepare four (4) sets of suspension bolt, nut and spring washer (M10) on site.

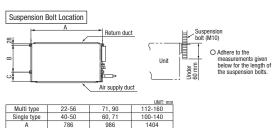


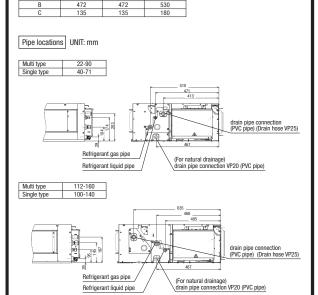

(4) Installation of indoor unit

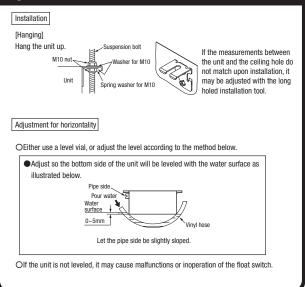


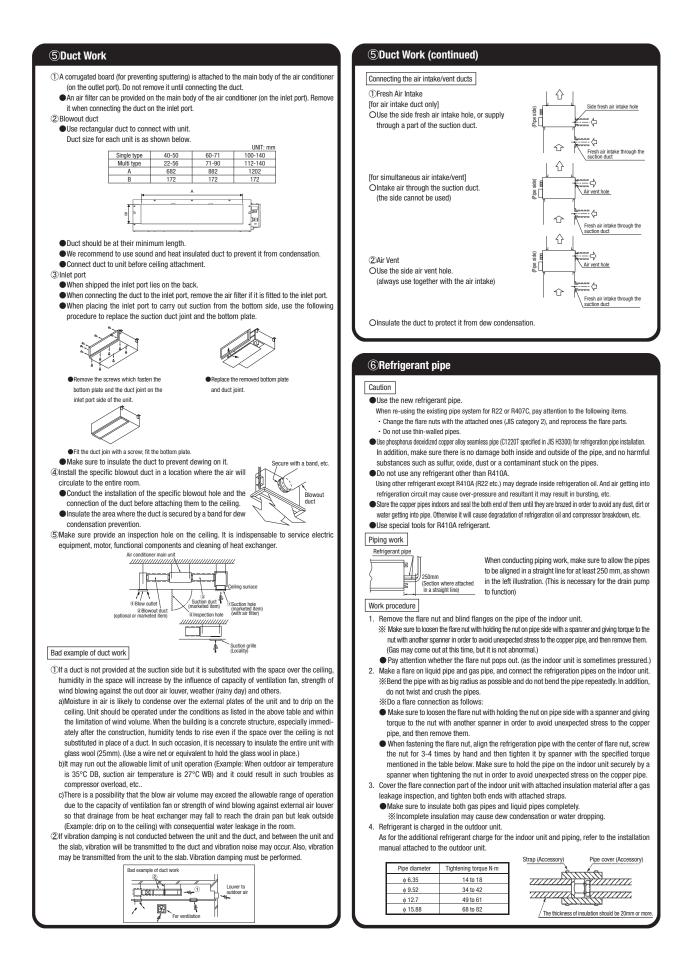

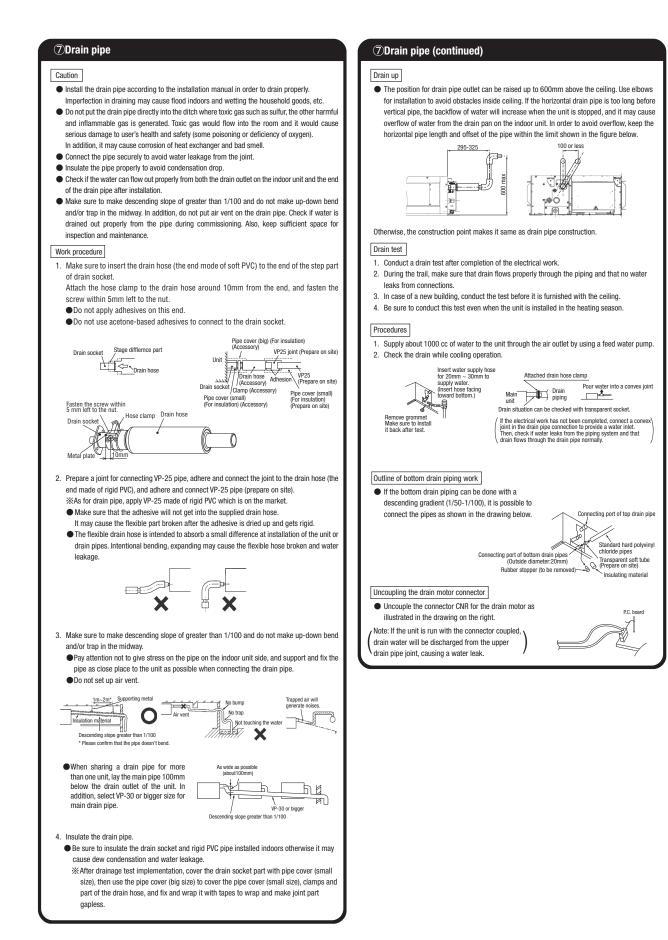

8 Wiring-out position and wiring connection

- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.
- Be sure to use an exclusive circuit. • Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in
- order not to apply unexpected stress on the terminal. • Do not put both power source line and signal line on the same route. It may cause miscom-
- munication and malfunction.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work
- WUIK.
- 1. Remove a lid of the control box (2 screws).
- 2. Hold each wiring inside the unit and fasten them to terminal block securely.
- 3. Fix the wiring with clamps.
- 4. Install the removed parts back to original place.

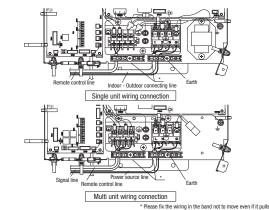

9 External static pressure setting

You can set External Static Pressure (E.S.P.) by either method of MANUAL SETTING or AUTO-MATIC SETTING by remote control.

Indoor unit will control fan-speed to keep rated air flow volume at each fan speed setting (Lo-Uhi)

1. MANUAL SETTING

You can set required E.S.P. by wired remote control that calculated with the set air flow rate and pressure loss of the duct connected.

Select No.1-10 (10Pa-100Pa) from following table according to calculation result.

Setting No.	1	2	3	4	5	6	7	8	9	10
External Static Pressure (Pa)	10	20	30	40	50	60	70	80	90	100
When you set No.11-19 by remote control, unit will control fan-speed with setting of										

When you set No.11-19 by remote control, unit will control fan-speed with setting of No.10 Factory default is at No.5.

How to set E.S.P by wired remote control

① Push "◆" marked button(E.S.P button).
 ② Select indoor unit No. by using ◆ button.

You can NOT set E.S.P. by wireless remote control.

 ③ Select industrial with we by using button.
 ③ Select setting No. by using button and set E.S.P. by button. See detailed procedure in technical manual.



Notice You car

Caution Be sure to set E.S.P. according to actual duct connected.

Wrong settings causes excessive air flow volume or water drop blown out.

2. AUTOMATIC SETTING

Indoor unit will recognize E.S.P. by itself automatically and select appropriate fan speed No.1-10.

How to start automatic setting

- 1, 2Same setting as MANUAL SETTING.
- 3 Select [AUT] by using \clubsuit button and press \bigcirc button .
- 2 After setting E.S.P. at "AUT", operate unit in FAN mode with certain fan speed (Lo-Uhi).

9 External static pressure setting (continued)

Indoor unit fan will run automatically and recognize E.S.P. by itself. The operation for automatic E.S.P. recognition will last about 6 minutes, and it will be stopped after recognition is completed.

Caution

- Be sure to execute AUTOMATIC SETTING by remote control AFTER ducting work is completed.
 When duct specification is changed after AUTOMATIC SETTING, be sure to execute AUTOMATIC SETTING again after power resetting and turning on again.
- · Be sure to execute AUTOMATIC SETTING before trial cooling operation.
- (See ELECTRICAL WIRING WORK INSTRUCTION about trial cooling operation)
- Before AUTOMATIC SETTING, be sure to check that return air filter in duct is installed and damper is opened.
- Wrong procedure causes excessive air flow or water drop blown out.

Notice

- During operation for automatic recognition (the Auto Operation), fan rotates with certain speeds regardless of set fan speed by remote control.
- When duct is set with low static pressure (around 10-50Pa), even if indoor unit operate with higher air flow volume than rated one, but it is not abnormal.
- When you changed operation mode or stop operation with ON/OFF button during Auto Operation, the Auto operation will be canceled.
- \cdot In such case, be sure to execute AUTOMATIC SETTING again according to above procedure.

(1) Check list after installation


Check the following items after all installation work completed.

Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
No mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	
Is setting of E.S.P finished?	Excessive air flow, water drop blow out	


(b) Replacement procedure of the fan unit Notes(1) The unit is a heavy item. It must be supported securely and handled with care not to drop when it is necessary to replace. (2) For the maintenance space, refer to page 47.

(i) Model FDUM50VF


1) Remove the control box and the side panel, and remove the screws marked in the circles (2 places) in the figure.

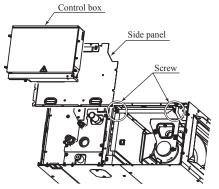


2) Take out the fan unit in the arrow direction.

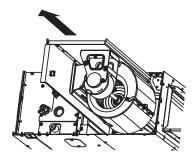

- (ii) Model FDUM60VF
 - 1) Remove the control box and the side panel, and remove the screws marked in the circles (2 places) in the figure.

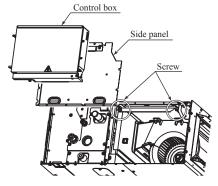

2) Take out the fan unit in the arrow direction.

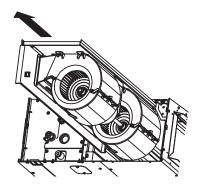

10.2 Electric wiring work installation

PSB012D999

Electrical wiring work must be performed by an electrician qualified by a local power provider according to the electrical installation technical standards and interior wiring regulations applicable to the installation site.

Security instructions

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels,
 <u>AWARNING</u> and ACAUTION .

[AWARNING] : Wrong installation would cause serious consequences such as injuries or death. ACAUTION : Wrong installation might cause serious consequences depending on circumstances. Both mentions the important items to protect your health and safety so strictly follow them by any means.

- The meanings of "Marks" used here are as shown on the right:
- Never do it under any circumstances.
- Accord with following items. Otherwise, there will be the risks of electric shock and fire caused by overheating or short circuit.

	Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.	0
	Power source with insufficient capacity and improper work can cause electric shock and fire.	
	Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal. Loose connections or hold could result in abnormal heat generation or fire.	0
	Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel property. Improper fitting may cause abnormal heat and fire.	
	Use the genuine option parts. And installation should be performed by a specialist. If you install the unit by yourself, it could cause water leakage, electric shock and fire.	0
	Do not repair by yourself. And consult with the dealer about repair. Improper repair may cause water leakage, electric shock or fire.	\bigcirc
	Consult the dealer or a specialist about removal of the air conditioner. Improper installation may cause water leakage, electric shock or fire.	0
	Turn off the power source during servicing or inspection work. If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.	0
	Othut off the power before electrical wiring work. It could cause electric shock, unit failure and improper running.	0
\square	A CAUTION	
	Perform earth wiring surely. Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit.	ļ
	Earth leakage breaker must be installed. If the earth leakage breaker is not installed, it can cause electric shocks.	
	Make sure to install earth leakage breaker on power source line. (countermeasure thing to high harmonics.) Absence of breaker could cause electric shock.	
	Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current. Using the incorrect one could cause the system failure and fire.	
	Do not use any materials other than a fuse of correct capacity where a fuse should be used. Connecting the circuit by wire or copper wire could cause unit failure and fire.	\bigcirc
	Use power source line of correct capacity. Using incorrect capacity one could cause electric leak, abnormal heat generation and fire	0
	Do not mingle solid cord and stranded cord on power source and signal side terminal block. In addition, do not mingle difference capacity solid or stranded cord. Inappropriate cord setting could cause loosing screw on terminal block, bad electrical contact, smoke and fire.	\bigcirc
	Do not turn off the power source immediately after stopping the operation. Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.	\bigcirc
	Do not control the operation with the circuit breaker. It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.	\bigcirc

Control mode switching

•	The control content of indoor units can be switched in following way. (is the default setting)							
	Switch No.	Contro	Control Content					
	SW2	Indoor	Indoor unit address (0-Fh)					
	SW5-1	Master/Slave Switching (plural /Slave unit Setting)						
	SW5-2	Master/blave ownening (plurar/blave unit betting)						
	SW6-1~4	Model capacity setting						
	SW7 — 1	ON Operation check, Drain motor test run						
	3w7 -1	OFF	Normal operation					

instruc	tions are observed:
Do not - braid - ordii - flat t - ordii (2) Conne (3) Pay ex	t use cords other than cooper ones. Use any supply limit pither than one specified in parentheses for each type below. ded cord (coide designation 60245 IEC 51), if allowed in the relevant part 2; harry bugh rubber sheathed cord (coide designation 60245 IEC 53); with times! cord (coide designation 60227 IEC 41); harry polyhying (chirole sheathed cord (coide designation 60227 IEC 53); et the power supply to the outdoor unit the power supply to the outdoor unitse signal line and power source line connection, because an error in their connection can be all the boards and to contexe signal line and power source line connection, because an error in their connection can be
Screw	the line to terminal block without any looseness, certainly.
Do not	turn on the switch of power source, before all of line work is done.
equipr	de a dedicated branching circuit and never share a branching circuit with other ment. If shared, disconnection at the circuit breaker may occur, which can cause lary damage.
	nree-core cable as wiring between indoor and outdoor unit. As for detail, refer to ALLATION MANUAL" of outdoor Unit.
Set ear	rth of D-type.
route o	t add cord in the middle of line (of indoor power source, remote control and signal) on outside of unit. If connecting point is flooded, it could cause problem as for electric or unication.
	the case that it is necessary to set connecting point on the signal line way, perform gh waterproof measurement.)
	e lines (power source, remote control and "between indoor and outdoor unit") upper

Electrical wiring work must be performed by an electlician an qualified by a local power provider. These wiring specifications are determined on the assumption that the following instructions are observed:

①Electrical Wiring Connection

- ceiling through iron pipe or other tube protection to avoid the damage by mouse and so on. •Keep "remote control line" and "power source line" away from each other on constructing of unit outside.
- Do not connect the power source line [220V/240V/380V/415V] to signal side terminal block. Otherwise, it could cause failure.
- Connection of the line ("Between indoor and outdoor unit", Earth and Remote control) Onnection of the line ("Between indoor and outdoor unit", Earth and Hemote control)
 (b) Renow lid control box before comect the above lines, and connect the lines to terminal block according to number pointed on
 lated of terminal block.
 In addition, pay enough attention to confirm the number to lines, because there is electrical polarly except earth line.
 Furthermore, connect earth line to earth position of terminal block of power source.
 (2) Instal earth leakage breaker on power source line. In addition, select the type of breaker for inveter circuit as earth leakage breaker.
 (3) In the function of selected earth leakage breaker is only for earth-fault protection, hand switch (switch itself and type "B" fue) or
 circuit breaker is required in series with the earth leakage breaker.
 (3) Instal leaded in o desconcet switch on the power supply wring in accordance with the local codes and regulations.
 The isolator should be set in the box with key to prevent touching by another person when servicing.


Cable connection for single unit installation


- ()As for connecting method of power source, select from following connecting patterns. In principle, do not directly connect power souce line to inside unit. ** As for exceptional connecting method of power souce, discuss with the power provider of the country with referring to technical documents, and follow its instruction.
- ②For cable size and circuit breaker selection, refer to the outdoor unit installation manual.

Power source Doner source [Earth leakage breaker] [Earth leakage breaker] [Circuit breaker] [Circuit breaker] [Power source line [Power source line]	Single-phase model	Three-phase model
Image: Second control line Image: Second control line Image: Second control line Image: Second control line	Earth leakage breaker Gircuit breaker Gircuit breaker 	Image: Control line Image: Control line

Cable connection for a V multi configuration installation

- (1)Connect the same pairs number of terminal block "(1), (2), and (3)" and "(X) and (Y)" between master and slave indoor units.
- ②Do the same address setting of all inside units belong to same refrigerant system by rotary switch SW2 on indoor unit's PCB (Printed circuit board). ③Set slave indoor unit as "slave 1" through "slave 3" by address switch SW5-1, 5-2 on PCB.
- When the <u>AIR CON NO.</u> button on the remote control unit is pressed after turning on the power, an indoor unit's address number will be displayed. Do not fail to confirm that the connected indoor unit's numbers are displayed on the remote control unit by pressing the 🔺 or 💌 button.

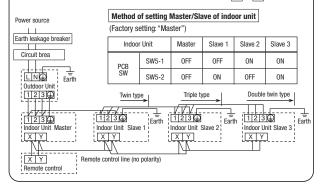

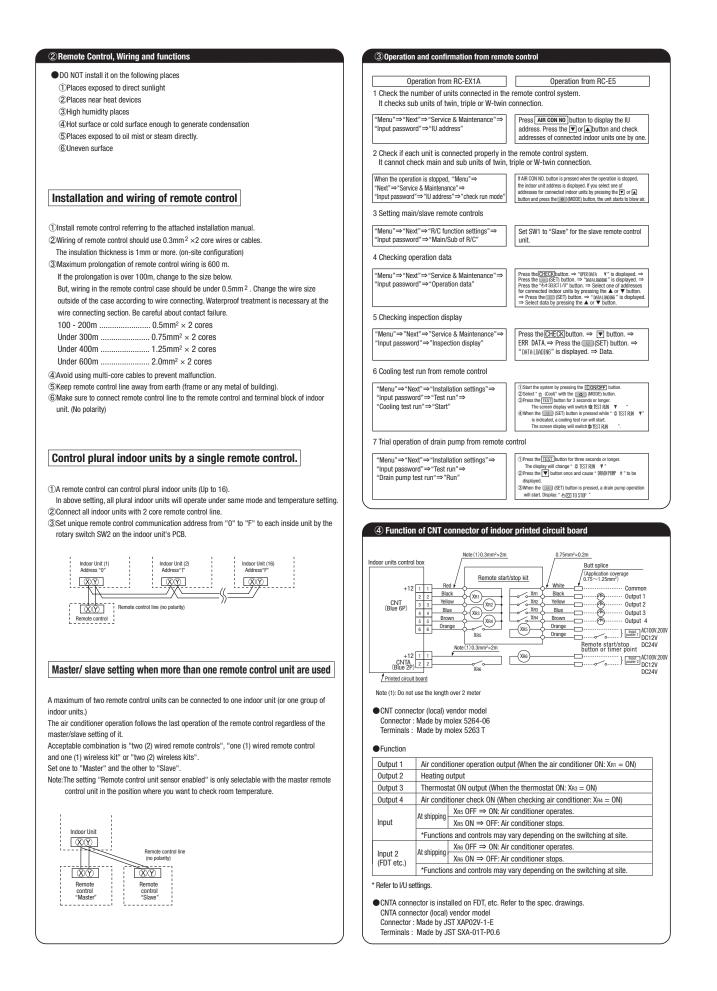

© Operation and setting from remote control

- A: Refer to the instruction manual for RC-EX series. B: Refer to the installation manual for RC-EX series. C: Loading a utility software vie Internet \bigcirc : Nearly same function setting and operations are possible. \bigtriangleup : Similar function setting and operations are possible.


	Setting & display item	Description	RC-EX series		
. Re	emote Control network		301103		
1	Control plural indoor units by a single remote control	A remote control can control plural indoor units up to 16 (in one group of remote control network). An address is set to each indoor unit.	0	0	
2	Master/slave setting of remote controls	A maximum of two remote controls (include option wireless) can be connected to one indoor unit. Set one to "Master" and the other to "Slave".	В	0	
	P screen, Switch manipulation		A	<u> </u>	
1 2	Menu Operation mode	"Control", "Settings", or "Details" can be selected. (319.) "Cooling", "Heating", "Fan", "Dry" or "Auto" can be set.	A	0	
2	Set temp.	"Set temperature" can be set by 0.5°C interval.	A	$\overline{}$	
4	Air flow direction	"Air flow direction". [Individual flap control setting] can be set.	A	1 O	
5	Fan speed	"Fan speed" can be set.	A	ŏ	
6	Timer setting	"Timer operation" can be set.	A	Ō	
7	ON/OFF	"On/Off operation of the system" can be done.	Α	0	
8	High power SW	"High power operation" or "Normal operation" can be selected.	Α		
9	Energy-saving SW	"Energy-saving operation" or "Normal operation" can be selected.	Α		
3. EI	nergy-saving settin		Α		
1	Auto OFF timer [Administrator password]	For preventing the timer from keeping ON, set hours to stop operation automatically with this timer. •The selectable range of setting time is from 30 to 240 minutes (10minutes interval) •When setting is "Valid", this timer will activate whenever the ON timer is set.	A		
2	Peak-cut timer [Administrator password]	Power consumption can be reduced by restricting the maximum capacity. Set the [Start time], the [End time] and the capacity limit % (Peak-cut %). -4-operation patterns per day can be set at maximum. -The setting time can be changed by 5-minutes interval. -The selectable range of capacity limit % (Peak-cut %) is from 0% to 40-80% (20% interval). -Holiday setting is available.	A		
3	Automatic temp. set back [Administrator password]	After the elapse of the set time period, the current set temp. will be set back to the [Set back temp.] •The setting can be done in cooling and heating mode respectively. •The selectable range of the set time is from 20 min. to 120 min. (10 min. interval). •Set the [Set back temp.] by 1°C interval.	A		
4. In	dividual flap control setting		Α		
	Individual flap control setting	The moving range (the positions of upper limit and lower limit) of the flap for individual air outlet port can be set.	Α	0	
5. Ve	ntilation				
1	External ventilation (In combination with ventilator)	On/Off operation of the external ventilator can be done. •The settings of [Interlock] with AC (air-conditioner), [Single operation] of ventilator or operation [invalid] of ventilation can be done through [Ventilation settings] in the [Remote control] menu.	A	0	
	er sign reset		Α	0	
	Filter sign reset	The filter sign can be reset.	В		
2	Setting next cleaning date	The next cleaning date can be set.	Α		
7.Init	tial settings				
1	Clock setting	The current date and time can be set or revised.	Α		
2	Date and time display	[Display] or [Hide] the date and/or time can be set, and the [12H] or [24H] display can be set.	Α	<u> </u>	
3	Summer time	When select [Valid], the +1hour adjustment of current time can be set. When select [Invalid], the [Summer time] adjustment can be reset.	A	<u> </u>	
4	Contrast	The contrast of LCD can be adjusted higher or lower.	A		
5	Backlight	Switching on/off a light can be set and the period of the lighting time can be set within the range of 5sec-90sec (5sec interval).	A		
	Controller sound	It can set with or without [Controller sound (beep sound)] at touching panel.	A		
	ner settings Set On timer by hour	The period of time to start operation after stopping can be set.	A	<u> </u>	
I		The period of set time to set within the range of hour-12hours (1hr interval). • The operation mode, set temp and fan speed at starting operation can be set.	А		
	Set Off timer by hour	The period of time to stop operation after starting can be set. •The period of set time can be set within the range of 1hour-12hours (1hr interval).	A		
3	3 Set On timer by clock The clock time to start operation can be set. • The set clock time can be set by 5 minutes interval. • [Once (one time only)] or [Everyday] operation can be switched.				
4	Set Off timer by clock	•The set clock time can be set by 5 minutes interval.			
5	Confirmation of timer settings	-[Once (one time only]) or [Everyday] operation can be switched. Status of timer settings can be seen.	A	+	
	ekly timer		-	1	
	Weekly timer	On timer and Off timer on weekly basis can be set.			
	[Administrator password]	*8-operation patterns per day can be set at a maximum.			
		•The setting clock time can be set by 5 minutes interval. •Holiday setting is available. •The operation mode, set temp and fan speed at starting operation can be set.	A		
0.11	ama laava mada	יוזס סטרענטרו וויסטס, סטר נטווף מווע זמו סטטטע ער סערומו שי טעט שט סטר.			
10.H	LHome leave mode Image: Constraint of the set mode <th< td=""></th<>				

-					
	Setting & display item	Description	RC-EX series	RC-I	
۵	Administrator settings	[Administrator password]	A		
	Enable/Disable setting	•Enable/Disable setting of operation can be set. [On/Off] [Change set temp.] [Change operation mode] [Change air flow direction]	A		
	Linable/Disable setting	Individual flag control setting [Fan speed] High power operation [Energy-saving operation [Timer settings] [Weekly timer setting]	А		
2	Silent mode timer	Request for administrator password can be set. [Individual flap control setting][Weekly timer][Energy-saving setting][Home leave mode][Administrator settings] The period of time to operate the outdoor unit by prioritizing the quietness can be set.			
-		•The [Start time] and the [End time] for operating outdoor unit in silent mode can be set. •The period of the operation time can be set once a day by 5 minutes interval.	A		
3	Setting temp. range	The upper/lower limit of indoor temp. setting range can be set.			
5	octang temp. range	The limitation of indoor temp. setting range can be set for each operation mode in cooling and heating.	A		
4	Temp. increment setting	The temp increment setting can be changed by 0.5°C or 1.0°C.	A		
5	RC display setting	Register (Room name) (Mame of M)			
	no diopidy colding	Display [indoor temp.] or not.		C	
		Display [inspection code] or not.	A		
		Display [Heating stand-by] [Defrost operation] [Auto cooling/heating] or not		C	
6	Change administrator password	The administrator password can be changed. (Default setting is "0000")	Α		
		The administrator password can be reset.	В	1	
.In	staller settings	[Service password]	В		
1	Installation date	The [Installation date] can be registered.	В		
		-When registering the [Installation date], the [Next service date] is displayed automatically. (For changing the [Next service date]. please refer the item of [Service & Maintenance].)			
2	Service contact	The [Service contact] can be registered and can be displayed on the RC.	в		
		•The [Contact company] can be registered within 10 characters. •The [Contact phone] can be registered within 13 digits.	В		
3	Test run	On/Off operation of the test run can be done.			
	Cooling test run	The [Cooling test run] can be done at 5 $^\circ$ C of set temp. for 30 minutes.	в	C	
	Drain pump test run	Only the drain pump can be operated.		C	
	Compressor Hz fixed operation	The [Test run] operation can be done with fixed compressor Hz set by installer.		C	
1	Static pressure adjustment	In case of combination with only the ducted indoor unit which has a function of static pressure adjustment, the static pressure is adjustable.	В		
5	Change auto-address	The set address of each indoor unit decided by auto-address setting method can be changed to any other address. (For multiple KX units only)	В		
6	Address setting of Main IU	Main indoor unit address can be set.			
		•Only the Main indoor unit can change operation mode and the Sub indoor units dominated by the Main indoor unit shall follow.	В		
P	C function settings	•The Main indoor unit can domain 10 indoor units at a maximum. [Service password]	В	-	
.н 1	Main/Sub RC setting	[service password] The setting of [Main/Sub RC] can be changed.	B	C	
1 2	RC sensor		B		
-		The offset value of [RC sensor] sensing temp, can be set respectively in heating and cooling.	в		
3	9 RC sensor adjustment	The offset value of [RC sensor] sensing temp. can be set respectively in heating and cooling. •The setting range of offset value is $\pm 3^{\circ}$ both in cooling and heating.	В		
4	12 Operation mode	The [Valid/Invalid] setting of [Auto][Cooling][Heating] and [Corr] can be done respectively.	В	C	
5	13 Fan speed	The setting of [Fan speed] can be done from following patterns.•1-speed, 2-speeds (Hi-Me), 2-speeds (Hi-Lo), 3-speeds, 4-speeds.	B	Ċ	
5	14 External input	The applicable range ([Individual] or [All units]) of CnT input to the multiple indoor units connected in one control system.		-	
6	- External input	Individual : Only the unit received CnT input signal. [All units]: All the units connected to one control system received CnT input signal.	В	C	
7	15 Ventilation setting	The setting of [Invalid] operation of ventilator, [Interlock] with AC or [Independent] of ventilator can be selected.	_		
	· · · · · · · · · · · · · · · · · · ·	When setting [Interlock], the operation of external ventilator is interlocked with the operation of AC •When setting [Independent], only the operation of external ventilator is available.	В		
3	16 Flap control	The [Flap control] method can be switched to[Stop at fixed position] or [Stop at any position] Stop at fixed position] : Stop the flap at a certain position	_		
		among the designated 4 positions. • [Stop at any position] : Stop the flap at any arbitrary position just after the stopping command from RC was sent.	В		
9	17 Auto-restart	The operation control method after recovery of power blackout happened during operation can be set.	В	C	
0	18 Auto temp. setting	[Valid] or [Invalid] of [Auto temp. setting] can be selected.	В		
1	19 Auto fan speed setting	[Valid] or [Invalid] of [Auto fan speed setting] can be selected.	В		
. I <i>)</i>	/U settings	[Service password]	В		
1	High ceiling	The fan tap of indoor fan can be changed. •[Standard] [High ceiling 1] [High ceiling 2] can be selected.	В	C	
2	Filter sign	The setting of filter sign display timer can be done from following patterns.	В	C	
3	External input 1	The content of control by external input can be changed. The selectable contents of control are [On/Off] [Permission/Prohibition] [Cooling/heating] [Emergency stop]	В	C	
4	External input 1 signal	The type of external input signal ([Level input])/[Pulse input]) can be changed.	В	Ō	
5	External input 2	The selectable contents of control are [On/Off] [Permission/Prohibition] [Cooling/heating] [Emergency stop]	В		
6	External input 2 signal	The type of external input signal ([Level input]/[Pulse input]) can be changed.	В		
7		The judgment temp. of heating thermo-off can be adjusted within the range from 0 to $+3^{\circ}C$ (1°C interval)	В		
B	Return air sensor adjust.	The sensing temp, of return air temp, sensor built in the indoor unit can be adjusted within the range of $\pm 2^{\circ}$ C.	В		
9	Fan control in heating thermo OFF	The fan control method at heating thermo-off can be changed. The selectable fan control methods are [Low] [Set fan speed] [Intermittent] [Stop].	B	C	
)	Anti-frost temp.	The judgment temp. of anti-frost control for the indoor unit in cooling can be changed to [Temp. High] or [Temp. Low].	В	Ċ	
	Anti-frost control	When the anti-frost control of indoor unit in cooling is activated, the fan speed can be changed.	В	Ō	
2	Drain pump operation	In any operation mode in addition to cooling and dry mode, the setting of drain pump operation can be done.	B	Ĭŏ	
	Residual fan operation in cooling	The time period of residual fan operation after stopping or thermo-off in cooling mode can be set.	B	Ō	
	Residual fan operation in heating	The time period of residual fan operation after stopping of thermo-off in heating mode can be set.	B		
	Intermittent fan operation in heating	The fan operation rule following the residual fan operation after stopping or thermo-off in heating mode can be set.	В	Ċ	
;	Fan circulator operation	In case that the fan is operated as the circulator, the fan control rule can be set.	B	F	
,	· · · · · · · · · · · · · · · · · · ·	When only the OA processing units are operated, control pressure value can be changed.	B	0	
3	Auto operation mode	The [Auto rule selection] for switching the operation mode automatically can be selected from 3 patterns.	B	F	
5 }	Thermo. rule setting	When selecting [Outdoor air temp. control], the judgment temp can be offset by outdoor temp	B	-	
	Auto fan speed control	Under the [Auto fan speed control] mode, the switching range of fan speed can be selected from following 2 patterns [Auto 1] [Auto 2]. •[Auto 1] : Hi \(\Delta\)Me\(\Delta\)Lo. (Auto 2] : P-hi\(\Delta\)Hi\(\Delta\)Me\(\Delta\)Lo.	B	-	
	ervice & Maintenance	onder die paue dat speed conduij mode, die switchnig range of dat speed can de selected nom nonowing z patients (Add 1) (Add 2). "(Add 1) i n' wierwich (Add 2) i P-nitwinierwich (Add 2) i P-nitwinierwich (Add 2) i P-nitwinierwich (Bervice password)	B	-	
	IU address No.	Max. 16 indoor units can be connected to one remote control, and all address No. of the connected indoor units can be displayed.		-	
1		•The indoor unit conforming to the address No. can be identified by selecting the address No. and tapping [Check] to operate the indoor fan.	В	0	
2	Next service date	The [Next service date] can be registered. The [Next service date] and [Service contact] is displayed on the [Periodical check] message screen.	AB		
3	Operation data	Total 39 items of [Operation data] for indoor unit and outdoor unit can be displayed.	B	0	
	Error history	[Date and time of error occurred] [I/U address] [Error code] for Max. 16 latest cases of error history can be displayed.	В		
	Display anomaly data	The operation data just before the latest error stop can be displayed.	B	<u> </u>	
	Reset periodical check	The timer for the periodical check can be reset.	B	C	
	Saving I/U settings	The I/U settings memorized in the indoor PCB connected to the remote control can be saved in the memory of the remote control.	В	\vdash	
5	Special settings	[Erase I/U address] [CPU reset] [Initializing] [Touch panel calibration]	B		
		[ברמסי איס מטטריסס] [טו ט רפסבו] [ווונומוצוווק] [וטטטו אמושר כמושרמנוטוו]	0	-	
6				I ^	
6	spection	The address Ne of anomalous index/outdoor unit and area and are discloued	А		
3 .In		The address No, of anomalous indoor/outdoor unit and error code are displayed.	A		

10.3 Installation of wired remote control (option)

(1) Model RC-EX1A

eco touch REMOTE CONTROL RC-EX1A INSTALLATION MANUAL

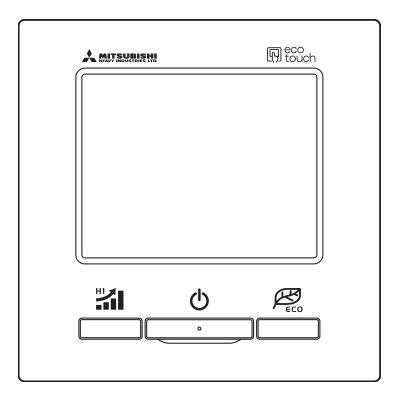

1. Safety precautions

This installation manual describes the installation methods and precautions related to the remote control. Use this manual together with the user's manuals for the indoor unit, outdoor unit and other optional equipment. Please read this manual carefully before starting the installation work to install the unit properly.

Safety precautions

Please read this manual carefully before starting installation work to install the unit properly. Every one of the followings is important information to be observed strictly.

Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc
Failure to follow these instructions properly may cause injury or property damage.

It could have serious consequences depending on the circumstances.

•The following pictograms are used in the text.



Never do.



Always follow the instructions given.

Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, the "Installation Manual" should be given to a new owner.

Ask a professional contractor to carry out installation work according to the installation manual. Improper installation work may result in electric shocks, fire or break-down.

Shut OFF the main power supply before starting electrical work.

Otherwise, it could result in electric shocks, break-down or malfunction.

Do not install the unit in appropriate environment or where inflammable gas could generate, flow in, accumulate or leak.

If the unit is used at places where air contains dense oil mist, steam, organic solvent vapor, corrosive gas (ammonium, sulfuric compound, acid, etc) or where acidic or alkaline solution, special spray, etc. are used, it could cause electric shocks, break-down, smoke or fire as a result of significant deterioration of its performance or corrosion.

Do not install the unit where water vapor is generated excessively or condensation occurs. It could cause electric shocks, fire or break-down.

Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.

Improper connections or fixing could cause heat generation, fire, etc.

Seal the inlet hole for remote control cable with putty.

If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.

It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.

The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.

Do not install the remote control at following places.

It could cause break-down or deformation of remote control.

- (1) Where it is exposed to direct sunlight
- (2) Near the equipment to generate heat
- (3) Where the surface is not flat

Do not leave the remote control with its upper case removed.

When the upper case is removed, put it in a packing box or packing bag to protect internal PCBs or other parts from dust, moisture, etc.

2. Accessories & prepare on site

Accessories

R/C main unit, wood screw (ø3.5 x 16) 2 pcs User's Manual, Installation Manual

Parts procured at site

Item name	Q'ty	Remark	
Switch box For 1 piece or 2 pieces (JIS C8340 or equivalent)	1	These are not required when installing	
Thin wall steel pipe for electric appliance (JIS C8305 or equivalent)	As required	directly on a wall.	
Lock nut, bushing (JIS C8330 or equivalent)	As required		
Lacing (JIS C8425 or equivalent)	As required	Necessary to run R/C cable on the wall.	
Putty	Suitably	For sealing gaps	
Molly anchor	As required		
R/C cable (0.3 mm ² x 2 pcs)	As required	See right table when longer than 100 m	

When the cable length is longer than 100 m, the max size for wires used in the R/C case is 0.5 mm². Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

< 200 m	0.5 mm ² x 2-core
< 300 m	0.75 mm ² x 2-core
< 400 m	1.25 mm ² x 2-core
< 600 m	2.0 mm ² x 2-core

3. Remote control installation procedure


Determine where to install the remote control

Installation	"Using a switch box"
	"Installed directly on a wall"
Wiring direction	"Backward"
	"Upper center", "Upper left"

Cautions for selecting installation place

- (1) Installation surface must be flat and sufficiently strong. R/C case must not be deformed.
- (2) Where the R/C can detect room temperatures accurately. This is a must when detecting room temperatures with the temperature sensor of R/C.
 - \cdot Install the R/C where it can detect the average temperature in the room.
 - · Install the R/C separated from a heat source sufficiently.
 - Install the R/C where it will not be influenced by the turbulence of air when the door is opened or closed.

Select a place where the R/C is not exposed to direct sunlight or blown by winds from the air conditioner or temperatures on the wall surface will not deviate largely from actual room temperature.

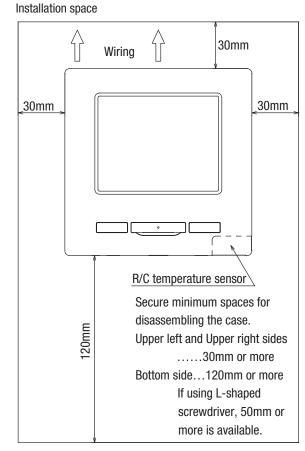

Request

Be sure not to install R/C at a place where temperatures around the installation surface of R/C may differ largely from actual room temperature.


Difference between detected temperature and actual room temperature could cause troubles. The correction for detected temperature by the R/C cannot offset such temperature difference because it corrects the detected temperatures itself.

Request

Do not install the R/C at a place where it is exposed to direct sunlight or where surrounding air temperature exceeds 40° C or drops below 0° C.

It could cause discoloration, deformation, malfunction or breakdown.

Installation procedure

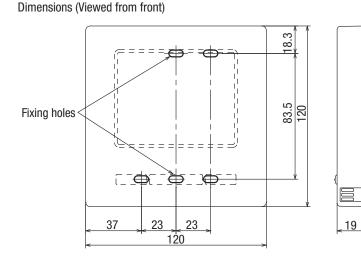

- ① To remove the upper case from the bottom cases of R/C
 - \cdot Insert the tip of flat head screwdriver or the like in the recess at the lower part of R/C and twist it lightly to remove.

Take care to protect the removed upper case from moisture or dust.

② Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit.


R/C wires (X, Y) have no polarity.


In case of embedding wiring (When the wiring is retrieved "Backward")

③ Embed the switch box and the R/C wires beforehand.

Seal the inlet hole for the R/C wiring with putty. If dust or insect enters, it could cause electric shocks, fire or breakdown.


PCB side (Viewed from rear)

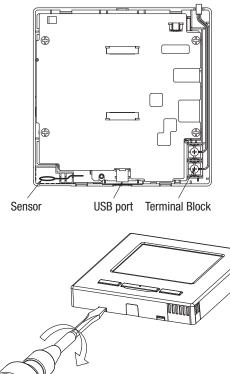


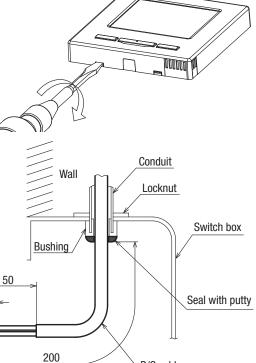


R/C cable

8

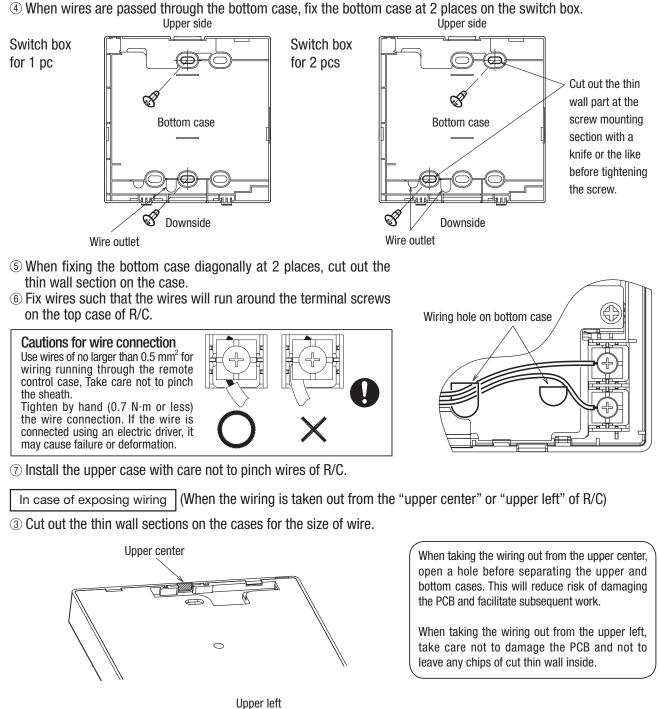


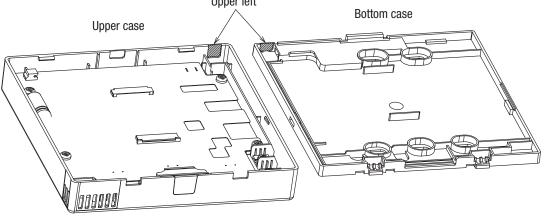


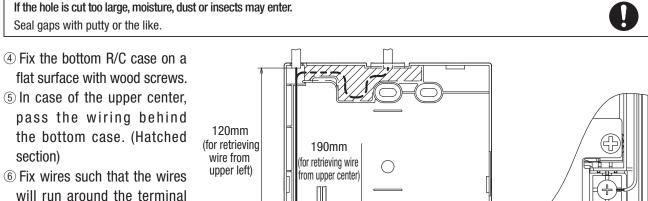

⑦ Install the top case with care not to pinch wires of R/C.

screw of the top case of R/C.

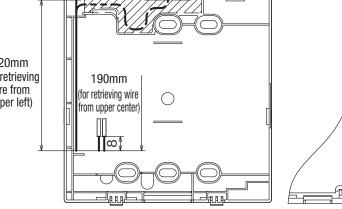

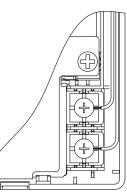


Main/Sub setting when more than one remote control are used


Main-Sub setting for use of two or more R/C

Up to two units of R/C can be used at the maximum for 1 indoor unit or 1 group.


One is main R/C and the other is sub R/C.

Operating range is different depending on the main or sub R/C.

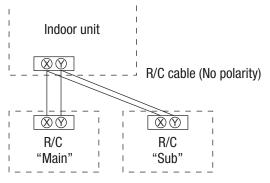



R/C function	Main	Sub
Run/Stop, setting temperature, fan speed and flap direction operations	0	0
High power and energy-saving operations	\bigcirc	0
Energy-saving setting	\bigcirc	_
R/C sensor	\bigcirc	—
Test run menu operation	\bigcirc	_
Room temperature range setting	\bigcirc	—
Indoor unit settings	\bigcirc	—
Individual flap control	0	—
Operation data display	0	_
Error history display	0	0

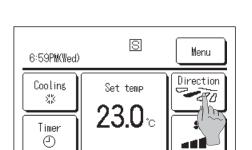

Now stopping

Tap the panel for change.

Note: Connection to personal computer

It can be set from a personal computer via the USB port (mini-B). Connect after removing the cover for USB port of upper case.

Replace the cover after use.



If dust, insect, etc. enters, it could cause electric shocks or breakdown.


Special software is necessary for the connection.

For details, view the web site or refer to the engineering data.

Do not connect to a personal computer

without using the special software.


Do not connect the personal computer to the USB simultaneously with other USB devices. It could cause malfunction or breakdown of R/C or personal computer.

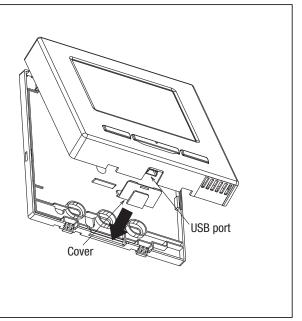

Note: Initializing of password

Administrator password (for daily setting items) and service password (for installation, test run and maintenance) are used.


- O The administrator password at factory default is "0000". This setting can be changed (Refer to User's Manual). When the administrator password is forgotten, it can be initialized, if the [Highpower] and the [Energy-saving] buttons are pushed simultaneously for 5 seconds on the administrator password input screen.
- Service password is "9999", which cannot be changed.
 When the administrator password is input, the service password is also accepted.

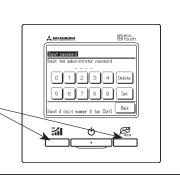

(2) Model RC-E5

PJA012D730

Read together with indoor unit's installation manual.

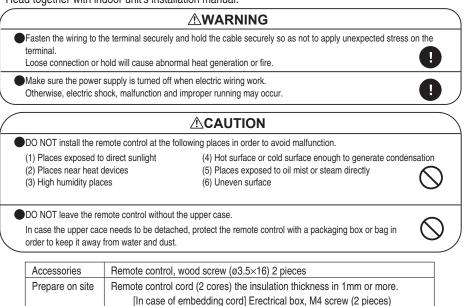

[In case of exposing cord] Cord clamp (if needed)


Installation procedure

 Open the cover of remote control, and remove the screw under the buttons without fail.


② Remove the upper case of remote control. Insert a flat-blade screwdriver into the dented part of the upper part of the remote control, and wrench slightly.

[In case of embedding cord]

③ Embed the erectrical box and remote control cord beforehand.

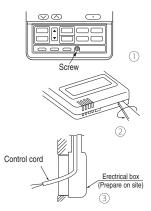


Prepare two M4 screws (recommended length is 12-16mm) on site, and install the lower case to erectrical box. Choose either of the following two positions in fixing it with screws.

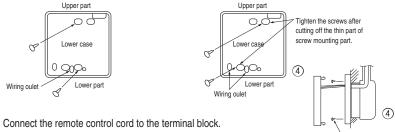



- Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)
- Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.

[In case of exposing cord]


- ③ You can pull out the remote control cord from left upper part or center upper part. Cut off the upper thin part of remote control lower case with a nipper or knife, and grind burrs with a file etc.
- ④ Install the lower case to the flat wall with attached two wooden screws.







The wiring inside the remote control case should be within 0.3mm² (recommended) to 0.5mm². The sheath should be peeled off inside the remote control case. The peeling-off length of each wire is as below.



- Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.
- In case of exposing cord, fix the cord on the wall with cord clamp so as not to slack.

Installation and wiring of remote control


- Wiring of remote control should use 0.3mm² × 2 core wires or cables. (on-site configuration)
- ② Maximum prolongation of remote control wiring is 600 m.

If the prolongation is over 100m, change to the size below. But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of

the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

Master/ slave setting when more than one remote controls are used

A maximum of two remote controls can be connected to one indoor unit (or one group of indoor units.)

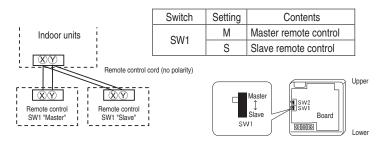

Set SW1 to "Slave" for the slave remote control. It was factory set to "Master" for shipment.

Note: The setting "Remote control thermistor enabled" is only selectable with the master remote control in the position where you want to check room temperature.

The air conditioner operation follows the last operation of the remote control regardless of the master/ slave setting of it.


The indication when power source is supplied

When power source is turned on, the following is displayed on the remote control until the communication between the remote control and indoor unit settled.

Master remote control : " @WAIT@	Μ"
Slave remote control : "	S"

At the same time, a mark or a number will be displayed for two seconds first.

This is the software's administration number of the remote control, not an error cord.



When remote control cannot communicate with the indoor unit for half an hour, the below indication will appear.

Check wiring of the indoor unit and the outdoor unit etc.

The range of temperature setting

When shipped, the range of set temperature differs depending on the operation mode as below.

Heating : 16~30°C (55~86°F)

Except heating (cooling, fan, dry, automatic) : 18~30°C (62~86°F)

Oupper limit and lower limit of set temperature can be changed with remote control.

Upper limit setting: valid during heating operation. Possible to set in the range of 20 to 30°C (68 to 86°F). Lower limit setting: valid except heating (automatic, cooling, fan, dry) Possible to set in the range of 18 to 26°C (62 to 79°F).

When you set upper and lower limit by this function, control as below.

1. When (2) TEMP RANGE SET, remote control function of function setting mode is "INDN CHANGE" (factory setting), [If upper limit value is set]

During heating, you cannot set the value exceeding the upper limit.

[If lower limit value is set]

During operation mode except heating, you cannot set the value below the lower limit.

2. When 0 TEMP RANGE SET, remote control function of function setting mode is "NO INDN CHANGE" [If upper limit value is set]

During heating, even if the value exceeding the upper limit is set, upper limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.

[If lower limit value is set]


During except heating, even if the value lower than the lower limit is set, lower limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.

How to set upper and lower limit value

1. Stop the air-conditioner, and press O (SET) and C (MODE) button at the same time for over three seconds.

The indication changes to "FUNCTION SET ▼".

- 2. Press **▼** button once, and change to the "TEMP RANGE ▲ " indication.
- 3. Press O (SET) button, and enter the temperature range setting mode.
- 4. Select "UPPER LIMIT ▼" or "LOWER LIMIT ▲" by using ▲ ▼ button.
- 5. Press <u>(SET)</u> button to fix.
- When "UPPER LIMIT ▼ " is selected (valid during heating)
- ① Indication: " $⊕ \lor \land$ SET UP" → "UPPER 30°C ∨"
 - ② Select the upper limit value with temperature setting button \bigtriangledown . Indication example: "UPPER 26°C $\lor \land$ " (blinking)
 - ③ Press <u>○</u>(SET) button to fix. Indication example: "UPPER 26°C" (Displayed for two seconds) After the fixed upper limit value displayed for two seconds, the indication will return to "UPPER LIMIT ▼".
- 7. When "LOWER LIMIT ▲" is selected (valid during cooling, dry, fan, automatic)
 - ① Indication: " $\textcircled{b} \lor \land$ SET UP" \rightarrow "LOWER 18°C \land "
 - ② Select the lower limit value with temperature setting button ∑ △. Indication example: "LOWER 24°C ∨ ∧" (blinking)
 - ③ Press <u>(SET</u>) button to fix. Indication for example: "LOWER 24°C" (Displayed for two seconds) After the fixed lower limit value displayed for two seconds, the indication will return to "LOWER LIMIT **V**".
- 8. Press ON/OFF button to finish.

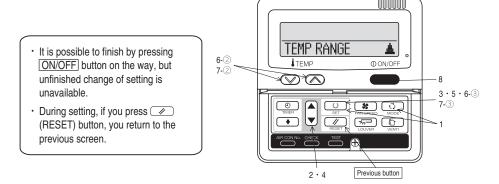

e functional setting				
ne initial function setting for typ ontrol and indoor unit are conn		d automatically by the	e indoor unit connected, when remote	
s long as they are used in a type		I be no need to chang	ge the initial settings.	
you would like to change the in	nitial setting marked "(○ ", set your desired	setting as for the selected item.	
ne procedure of functional sett	ing is shown as the foll	lowing diagram.		
ow of function setting	1]			
t : Stop air-conditioner and p	ress "O," (SET) and	d	Record and keep the	
"(MODE) buttons		er three seconds.	setting	
lize :Press "O_" (SET) but et :Press "Ø" (RESET)				
ect : Press 🔺 👿 button.	battom	0		
: Press ON/OFF button.		Cons	sult the technical data etc. for each control details	
possible to finish above setting o unfinished change of setting is u				
" : Initial settings		Stop air-condition	ier and press (MODE) buttons	
": Automatic criterion		at the same time for ov		
		FUNCTION S		
				To next p
UNCTION T (Remote control fu	Inction)			
	linetionij			
Function	setting			
	L&⊡ ESP VALID		ting of ESP:External Static Pressure	
02 AUTO RUN SET	600 ESP INVALID	Invalidate se	itting of ESP	
	AUTO RUN ON AUTO RUN OFF	<u> </u>		
03 IMA TEMP SW			operation is impossible	
	SVALID		e setting button is not working	
04 📧 MODE SW			setung button is not working	
	6군 VALID 6군 INVALID	Mode button	i is not working	
05 (1) ON/OFF SW			is not working	
	கூர VALID கூர INVALID	On/Off butto	n is not working	
06 🖾 FAN SPEED SW	6년 VALID			
	6년 WHLID		button is not working	
07 🖾 LOUVER SW	පත VALID	*	·	
	5 INVALID		on is not working	
08 © TIMER SW	കത VALID			
	50 INVALID		n is not working	
09 SENSOR SET	SENSOR OFF	Remote thermis	istor is not working.	
	SENSOR ON	Remote thermis	istor is working.	
	SENSOR +3.0%		istor is working, and to be set for producing +3.0°C increase in temperature. istor is working, and to be set for producing +2.0°C increase in temperature.	
	ESENSOR + 1.0%		istor is working, and to be set for producing +1.0 C increase in temperature. istor is working, and to be set for producing -1.0 C increase in temperature.	
	SENSOR -2.0°C	Remote thermis	istor is working, and to be set for producing -2.0°C increase in temperature.	
10 AUTO RESTART	SENSOR -3.0%	Remote thermis	istor is working, and to be set for producing -3.0 °C increase in temperature.	
1011101111111	INVALID			
11 VENT LINK SET	VALID			
	NO VENT		ngle split series, by connecting ventilation device to CNT of the	
	LICKET I TAILS		d circuit board (in case of VRF series, by connecting it to CND of the	
	VENT LINK		d circuit board), the operation of ventilation device is linked with the	
		operation of i In case of Sing	le split series, by connecting ventilation device to CNT of the indoor printed	
	NO VENT LINK	circuit board (in	n case of VRF series, by connecting it to CND of the indoor printed circuit	
12 TEMP RANGE SET			an operate /stop the ventilation device independently by (Em) (VENT) button.	
	INDN CHANGE		e the range of set temperature, the indication of set temperature wing the control.	
	NO INDN CHANGE	If you change	e the range of set temperature, the indication of set temperature	
13 I/U FAN		will not vary f	following the control, and keep the set temperature.	
1015.21.1	HI-MID-LO		becomes of \$444-\$440 or the four speed of \$4441-\$444-\$440.	
	HI-LO HI-MID		n becomes of %###- %##0. n becomes of %###- %##0.	
	1 FAN SPEED		n is fixed at one speed.	
14 코고 POSITION		If you change	e the remote control function "14 ╼̅¬ POSITION ",	
	4POSITION STOP		ange the indoor function "04 Find POSITION" accordingly. The louver stop position in the four.	
	FREE STOP		an stop at any position.	
15 MODEL TYPE	Heat Pump	T *		
	COOLING ONLY	X		
16 EXTERNAL CONTROL SET	THETHTEHAL	If you input s	signal into CNT of the indoor printed circuit board from external the	
	INDIVIDUAL	If you input s indoor unit w	ill be operated independently according to the input from external.	
	FOR ALL UNITS	If you input int connect to the	signal into CNT of the indoor printed circuit board from external, the vill be operated independently according to the input from external. to CNT of the indoor printed circuit board from external, all units which e same remote control are operated according to the input from external.	
17 ROOM TEMP INDICATION SET				
	INDICATION OFF INDICATION ON		rking indication, indoor unit temperature is indicated instead of airflow.	
		(Only the ma	aster remote control can be indicated.)	
18 MINDICATION	INDICATION ON			
18 涼⑲INDICATION		1 III and an annual	paration indication should not be indicated.	
	INDICATION OFF	Heating prep	saration indication should not be indicated.	
18 ※●INDICATION 19 ℃/*⊨ SET	INDICATION OFF		e indication indication should not be indicated.	
	ь	C Temperature		To next p

Note 1: The initial s	etting marked " ※ " is	decided by connected	indoor and outdoor unit, and is automatically defined as following table.
Function No.	Item	Default	Model
Remote control	AUTO RUN SET	AUTO RUN ON	"Auto-RUN" mode selectable indoor unit.
function02		AUTO RUN OFF	Indoor unit without "Auto-RUN" mode
Remote control	ISSIFAN SPEED S₩	கு 🗷 VALID	Indoor unit with two or three step of air flow setting
function06		ுன Invalid	Indoor unit with only one of air flow setting
Remote control	E LOUVER SW	පතා VALID	Indoor unit with automatically swing louver
function07		கன Invalid	Indoor unit without automatically swing louver
Remote control function13	I/U FAN	HI-MID-LO	Indoor unit with three step of air flow setting
		HI-LO	Indoor unit with two step of air flow setting
		HI-MID	
		1 FAN SPEED	Indoor unit with only one of air flow setting
Remote control	MODEL TYPE	Heat Pump	Heat pump unit
function15		COOLING ONLY	Exclusive cooling unit

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit. But only master indoor unit is received the setting change of indoor unit function "05 EXTERNAL INPUT" and "06 PERMISSION / PROHIBISHION".

n previous page					Note2: Fan se	etting of "HI	GH SPEED"			
Indoor unit No. are indicated only when			Ean tap							
(Indoor unit function) I/U FUNCTION A plural ind		or units are connected. Function				- e	8adi - 8ad - 8ad - 8ad	8afi - 8afi - 8afi	Staff - Staff)	Staff - Staff
L	I/U000 ▲	02 FAN SPEED SET	setting			STANDARD	UH - Hi - Me - Lo	Hi - Me - Lo	Hi - Lo	Hi - Me
	I/U001≑		STANDARD	*	SPEED - SET	HIGH	UH - UH - Hi - Me	UH - Hi - Me	UH - Me	UH - Hi
	I/U002≑ I/U003≑		HIGH SPEED 1 HIGH SPEED 2	*		SPEED1, 2	ome indoor unit is "HIGH S			•
	I/U004 ≑	03 FILTER SIGN SET					set with wireless remote co			
			INDICATION OFF TYPE 1		The filter sign is	indicated af	ter running for 180 hours.			
To set other in	: door unit, press		TYPE 2		The filter sign is	indicated af	ter running for 600 hours.			
AIRCON NO.			TYPE 3 TYPE 4				ter running for 1000 hours. ter running for 1000 hours.		it will be stopp	ed by
	o back to the indoo	or			compulsion after					
unit selection s		04 🖘 POSITION	7				ction "04 🖘 POSITION"			
(for example: I/	/U 000 🔺).		4POSITION STOP				e control function "14 - op position in the four.	FUSITION accordin	igiy.	
		05 EXTERNAL INPUT	FREE STOP		The louver can s					
			LEVEL INPUT	10						
			PULSE INPUT							
		06 OPERATION PERMISSION/PROHIBITION	INVALID							
			VALID	- T	Permission/proh	ibition contr	ol of operation will be valid			
		07 EMERGENCY STOP	INVALID							
			VALID		With the VRF se	eries, it is us	ed to stop all indoor units c	onnected with the s	ame outdoor	unit immediate
					When stop signa	al is inputed	from remote on-off termina	al "CNT-6", all indoc	or units are sto	opped immedia
			OFFSET +3.0% OFFSET +2.0%				8.0°C increase in temperatu			
		08 🔅 SP OFFSET	OFFSET +1.0%				2.0°C increase in temperatule.0°C increase in temperatule.0°C			
			NO OFFSET	0	··· ····					
			OFFSET +2.0%		To be reset prod	tucina +2 0°	C increase in return air ten	nerature of indoor	unit	
			OFFSET +1.5%		To be reset prod	ducing +1.5°	C increase in return air ten	nperature of indoor	unit.	
		09 RETURN AIR TEMP	OFFSET +1.0% NO OFFSET		To be reset prod	ducing +1.0°	C increase in return air ten	perature of indoor	unit.	
			OFFSET - 1.0°c	Ť	To be reset prod	ducing -1.0°C	C increase in return air tem	perature of indoor u	unit.	
			OFFSET -1.5% OFFSET -2.0%				c increase in return air tem			
		10			To be reset prou	Jucing -2.0 C	C increase in return air tem	perature of indoor t	Init.	
			LOW FAN SPEED				OFF, fan speed is low spe OFF, fan speed is set spe			
			SET FAN SPEED		-					
			INTERMITTENCE FAN OFF				OFF, fan speed is operate OFF, the fan is stopped.	d intermittently.		
			THRON	-	When the remote	e thermistor	is working, "FAN OFF" is	set automatically.		
					Do not set "FAN	OFF" when	the indoor unit's thermisto	r is working.		
		11 FROST PREVENTION TEMP			Change of indoo	or heat exch	anger temperature to start	frost prevention cor	ntrol.	
			TEMP HIGH TEMP LOW	0						
		12 FROST PREVENTION CONTROL			Working only wit					
			FAN CONTROL ON FAN CONTROL OFF	$ \cdot $	I o control frost p	prevention, 1	he indoor fan tap is raised.			
		13 DRAIN PUMP LINK								
			恭心 恭心AND京		Drain pump is ru Drain pump is ru		oling and dry. oling, dry and heating.			
			\$\$O AND⊗ AND		Drain pump is ru	un during co	oling, dry, heating and fan.			
		14 🗱 FAN REMAINING	\$© AND≋		Drain pump is ru	un during co	oling, dry and fan.			
			NO REMAINING	10	After cooling is s	stopped, the	fan does not perform extra	a operation.		
			0.5 HOUR		After cooling is s	stopped, the	fan perform extra operatio	n for half an hour.		
			1 HOUR 6 HOUR				fan perform extra operatio fan perform extra operatio			
		15 🔆 FAN REMAINING								
			NU REMAINING 0.5 HOUR				eating thermostat is OFF, eating thermostat is OFF,			
		1	2 HOUR		After heating is s	stopped or h	eating thermostat is OFF,	the fan perform ext	ra operation fo	or two hours.
			6 HOUR		After heating is s	stopped or h	eating thermostat is OFF,	the fan perform ext	ra operation fo	or six hours.
		16 X FAN INTERMITTENCE								
		16 × FAN INTERMITTENCE	NO REMAINING							
		16 X FAN INTERMITTENCE					r heating thermostat is OFF	, the fan perform ir	termittent ope	eration for five
		16 * FAN INTERMITTENCE	NO REMAINING 20minOFF sminON		with low fan spe	ed after twe	r heating thermostat is OFF nty minutes' OFF. r heating thermostat is OFF			
			NO REMAINING	+	with low fan spe	ed after twe s stopped or	nty minutes' OFF. r heating thermostat is OFF			
		16 * FAN INTERMITTENCE	NO REMAINING 20minOFF sminON	+	with low fan spe During heating is	ed after twe s stopped or	nty minutes' OFF. r heating thermostat is OFF			

1. 2. 3. 4.	VIO set function Stop air-conditioner and press ○, (SET) ⓒ (MODE) buttons at the same time for over three seconds, and the "FUNCTION SET ▼ " will be displayed. FUNCTION SET ▼ " will be displayed. FUNCTION SET ▼ " Press ○, (SET) button. Make sure which do you want to set, " FUNCTION ▼ " (remote control function) or "I/U FUNCTION ▲ " (indoor unit function). Press ▲ or ▼ button. Selecct " FUNCTION ▼ " (remote control function) or "I/U FUNCTION ▲ " (indoor unit function). Press ○ (SET) button.	Operation message Function description: (b), setting description: (c) Function No. (c) Image: setting description: (c) Fixing button Image: setting description: (c) Image: setting description: (c) Image: setting description: (c) Image: setting description: (c) <
6.	 Press () (SET) button. [/U FUNCTION ▲ Con the occasion of remote control function selection 1 "DATA LOADING" (Indication with blinking) Display is changed to "01 () () () () () () () () () () () () ()	Identified the setting of the setting will be indicated. For example) In Press I or I button. For example) Or Press I or I button. For example) In Press I or I button. Setting Or Press I or I button. Setting Or Press I or I button. Setting O Press I or I button. Setting Setting O Press I or I button. Setting O Prese I or I button. Setting
	It is possible to finish by pressing ON/OFF butto unavailable. During setting, if you press (RESET) but Setting is memorized in the control and it is save [How to check the current setting] When you select from "No. and funcion" and press set button setting. (But, if you select "ALL UNIT ▼ ", the setting of the lowest number of the lowest n	ton, you return to the previous screen. Ind independently of power failure. by the previous operation, the "Setting" displayed first is the current

10.4 Installation of outdoor unit

70

(1) Models SRC50, 60ZMXA-S



Model 40.50.60 R410A REFRIGERANT USED

- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 33.
- When install the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping length, height differences between indoor and outdoor units, power supply voltage and etc.) and installation spaces.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, [A WARNING] and [A CAUTION].
 [A WARNING]: Wrong installation would cause serious consequences such as injuries or death.
 [A CAUTION]: Wrong installation might cause serious consequences depending on circumstances.
 Both mentions the important items to protect your health and safety so strictly follow them by any means.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user.
- For installing qualified personnel, take precautions in respect to themselves by using suitable protective clothing, groves, etc., and then perform the installation works.
- Please pay attention not to fall down the tools, etc. when installing the unit at the high position.
- If unusual noise can be heard during operation, consult the dealer.
 - The meanings of "Marks" used here are shown as follows:



•	 Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. Do not carry out the installation and maintenance work except the by qualified installer. Install the system in full accordance with the installation manual. Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire. Be sure to use only for household and residence. If this appliance is installed in inferior environment such as machine shop and etc., it can cause malfunction. When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149). If the density of refrigerant exceeds the limit, please consult the dealer and install the ventilation. Use the original accessories and the specified components for installation. If arts other than those prescribed by us are used, It may cause water leaks, electric shocks, fire and personal injury. Install the unit in a location with good support. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. 	 Ventilate the working area well in the event of refrigerant leakage during installation. If the refrigerant comes into contact with naked flames, poisonous gas is produced. Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit. Tighten the flare nut by torque wrench with specified method. If the flare nut way toprave wrench with specified method. If the flare nut by torque wrench with specified method. If the flare nut way toprave wrench with specified method. If the flare nut way toprave wrench with specified method. If the flare nut way toprave wrench with specified method. If the flare nut way toprave wrench with specified method. If the flare nut way toprave wrench with specified method. If the flare nut way toprave wrench with specified method. If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause bust or personal injury due to anomalously high pressure in the refrigerant. The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. Power supply with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire. Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire. This appliance must b	 circuit breaker or switch (fuse:16A) with a contact separation of at least 3mm. Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. Incorrect installation may result in overheading and fire. Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks. Loose connections or cable mountings can cause anomalous heat production or fire. Be sure to fix up the service panels. Incorrect fixing can cause electric shocks or fire due to installation, inspection or servicing. If the power supply is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan. Stop the compressor before removing the pipe after shutting the service valve on pump down work. If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle. Only use prescribed option parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. Be sure to wear protective goggles and gloves while at work. Earth leakage breaker is not installed, it can cause electric shocks.
\oslash	• Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury. • Do not processing, splice the power cord, or share a socket with other power plugs. This may cause fire or electric shock due to defecting contact, defecting insulation and over-current etc.	 Do not bundling, winding or processing for the power cord. Or, do not deforming the power plug due to tread it. This may cause fire or heating. Do not run the unit with removed panels or protections. Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks. 	• Do not perform any change of protective device itself or its setup condition. The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.

9	• Carry out the electrical work for ground lead with care. Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting.					
	 Use the circuit breaker for all pole correct capacity. Circuit breaker should be the one that disconnect all poles under over current. Using the incorrect circuit breaker, it can cause the unit malfunction and fire. Install isolator or disconnect switch on the power supply wiring in accordance with the local codes and regulations. The isolator should be locked in OFF state in accordance with EN60204-1. After maintenance, all wiring, wiring ties and the like, should be returned to their original state and wiring route, and the necessary clearance from all metal parts should be secured. Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in accident such as personal injury due to falling from the installation place. 	 Take care when carrying the unit by hand. If the unit weights more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins. Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up. Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables. 	• When perform the air conditioner operation (cooling or drying operation) in which ventilator is installed in the room. In this case, using the air conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the room lapse into the negative pressure status. Therefore, set up the opening port such as incorporate the air into the room that may appropriate to ventilation (For example; Open the door a little). In addition, just as above, so set up the opening port if the room lapse into negative pressure status due to register of the wind for the high rise apartment etc.			
0	 Do not install the unit in the locations listed below. Locations where carbon fiber, metal powder or any powder is floating. Locations where any substances that can affect the unit such as sulphide gas, acid and alkaline can occur. Vehicles and ships. Locations where cosmetic or special sprays are often used. Locations where any machines which generate high frequency harmonics are used. Locations with salty atmospheres such as coastlines. Locations where the unit is exposed to chimney smoke. Locations where the unit is exposed to chimney smoke. Locations where the unit is exposed to chimney smoke. Locations where the unit is exposed to chimney smoke. Locations where the unit carbospheres. Locations where heat radiation from other heat source can affect the unit. Locations with any obstacles which can prevent inlet and outlet air of the unit. Locations where short circuit of air can occur (in case of multiple units installation). Locations where some ting in cloud above the unit could fall. It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire. 	 Do not install the outdoor unit in the locations listed below. Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood. Locations where outlet air of the outdoor unit blows directly to an animal or plants. The outlet air can affect adversely to the plant etc. Locations where vibration can be amplified and transmitted due to insufficient strength of structure. Locations where vibration and operation sound generated by the outdoor unit can affect seriously (on the wall or at the place near bed room). Locations where an equipment affected by high harmonics is placed (TV set or radio receiver is placed within 5m). Locations where drainage cannot run off safely. It can affect surrounding environment and cause a claim. Do not install the unit near the location where leakage of combustible gases can occur. It leaked gases accumulate around the unit, it can cause fire. Do not install the unit where corrosive gas (such as sulfurous acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled. Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire. Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics. Equipment such as inverters, standby generators, medical high frequency equipment such as inverters, standby generators, medical high frequency equipment and telecommunication equipments can affect medical equipment and telecommunication equipments and solfect medical equipment and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipments and solfect medical equipment and telecommunication equipment and bostruct its function or cause jamming.<	 Do not install the outdoor unit in a location where insects and small animals can inhabit. Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean. Do not use the base flame for outdoor unit which is corroded or damaged due to long periods of operation. Using an old and damage base flame can cause the unit falling down and cause personal injury. Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used. Connecting the circuit with copper wire or other metal thread can cause unit failure and fire. Do not touch any buttons with wet hands. It can cause electric shocks. Do not touch any refrigerant pipes with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury. Do not touch the suction or aluminum fin on the outdoor unit. This may cause damage the objects or injury due to falling to the object. Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art. 			

(Check before installation work)

Model name and power source

• Refrigerant piping length

• Piping, wiring and miscellaneous small parts

• Indoor unit installation manual

Accessories for outdoor unit Q'ty Grommet (Heat pump type only) 4 Drain elbow (Heat pump type only) 1

a	Sealing plate	1
6	Sleeve	1
C	Inclination plate	1
0	Putty	1
e	Drain hose (extension hose)	1
ക	Piping cover	1
U	(for insulation of connection piping)	1

Option parts

	Q'ty	ty		Necessary tools for the installation work		Wrench key (Hexagon) [4m/m]
	Quy					Vacuum pump
	1		1 Plus headed driver		11	Vacuum pump adapter (Anti-reverse flow type)
	1		2	Knife	<u> </u> ''	(Designed specifically for R410A)
	1		3	Saw	12	Gauge manifold (Designed specifically for R410A)
	1		4	Tape measure	13	Charge hose (Designed specifically for R410A)
	1		5	Hammer	14	Flaring tool set (Designed specifically for R410A)
1	1		6	Spanner wrench	15	Gas leak detector (Designed specifically for R410A)
	1		7	Torque wrench [14.0~62.0N·m (1.4~6.2kgf·m)]	16	Gauge for projection adjustment
			8	Hole core drill (65mm in diameter)	10	(Used when flare is made by using conventional flare tool)

Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant. A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit service valve charge port and a different size check joi nt provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the left before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)



TION When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.

1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When you have to unpack the unit for a compelling reason before you haul it to the installation point, hoist the unit with nylon slings or ropes and protection pads so that you may not damage the unit.

2) Portage

72

• The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.




3) Selecting the installation location

Be sure to select a suitable installation place in consideration of following conditions.

- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance
 of the unit.
- A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
- A place where the unit is not exposed to oil splashes.
- A place where it can be free from danger of flammable gas leakage.
- A place where drain water can be disposed without any trouble.
- A place where the unit will not be affected by heat radiation from other heat source.
- A place where snow will not accumulate.
- A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which
 can harm the unit, will not be generated and not remain.
- If a operation is conducted when the outdoor air temperature is -5 lower, the outdoor unit should be installed at a place where it is not influenced by natural wind.
- · A place where strong wind will not blow against the outlet air blow of the unit.

4) Caution about selection of installation location


- (1) If the unit is installed in the area where the snow will accumulate, following measures are required. The bottom plate of unit and intake, outlet may be blocked by snow.
- 1 Install the unit on the base so that the bottom is higher than snow cover surface. 2 Install the unit under or provide the roof on site.





Since drain water generated by defrost control may freeze, following measures are required. • Do not execute drain piping work by using a drain elbow and drain grommets (accessories). [Refer to Drain piping work.] (2) If the unit can be affected by strong wind, following measures are required. Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.

1 Place the unit outlet side is turned to the wall.



2 Install so the direction of the air from the blowing outlet will be perpendicular to the direction of the wind.




5) Installation space


- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
 When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In order to facilitate servicing of controllers, please provide a sufficient space between units so that their top plates can be removed easily.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.

6) Installation

(1) Anchor bolt fixed position




② Notabilia for installation




Use a long block to extend the width. Use a thicker block to anchor deeper

- In installing the unit, fix the unit's legs with bolts specified on the above.
- The protrusion of an anchor bolt on the front side must be kept within 15mm.
- · Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the above illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5mm or less.) Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.



Wind






2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

• Check the following points in light of the indoor unit specifications and the installation site.

. Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

	Restrictions	Dimensional restrictions	Marks appearing in the drawing on the right
Ν	Nain pipe length	30m or less	L
Elevation difference between indoor and outdoor units			н
			Н



▲ CAUTION • The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, please see "5. UTILIZATION OF EXISTING PIPING."

2) Determination of pipe size


Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

	Model 40, 50, 60		
	Gas pipe	Liquid pipe	
Outdoor unit connected	ø12.7 Flare	ø6.35 Flare	
Refrigerant piping (branch pipe L)	ø12.7	ø6.35	
Indoor unit connected	ø12.7	ø6.35	

When pipe is brazing.

Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.



3) Refrigerant pipe wall thickness and material


 Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

NOTE Select pipes having a wall thickness larger than the specified minimum pipe thickness.

Pipe diame	ter [mm]	ø6.35	ø12.7
Minimum pipe wall	thickness [mm]	0.8	0.8
Pipe ma	terial*	O-type pipe	O-type pipe

*Phosphorus deoxidized seamless copper pipe ICS 23.040.15, ICS 77.150.30



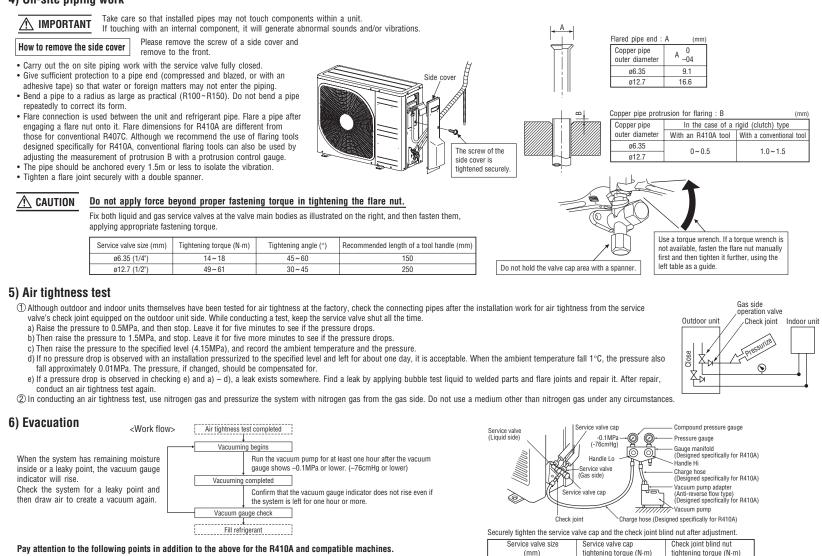

ø6.35 (1/4")

ø12.7 (1/2")

20~30

25~35

• To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a

gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).

Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe ø6.35)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
Model 40, 50, 60	0.02	1.50	15

 This unit contains factory charged refrigerant covering 15m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 15m refrigerant piping. When refrigerant piping exceeds 15m, additionally charge an amount calculated from the pipe length and the above

table for the portion in excess of 15m.

• If an existing pipe system is used, a required refrigerant charge volume will very depending on the liquid pipe size. For further information, please see "5. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

Additional charge volume (kg) = { Main length (m) - Factory charged volume 15 (m) } x 0.02 (kg/m)

* When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally. For an installation measuring 15m or shorter in pipe length, please charge the refrigerant volume charged for

shipment at the factory, when you recharge refrigerant after servicing etc.

8) Heating and condensation prevention

(1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.

• Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.


(2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.

• All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation. • Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).

- Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
- Both gas and liquid pipes need to be dressed with 20mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

3. DRAIN PIPING WORK

- · Execute drain piping by using a drain elbow and drain grommets supplied separately as accessories, where water drained from the outdoor unit is a problem.
- · Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- · Condensed water may flow out from vicinity of service valve or connected pipes.
- · Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)

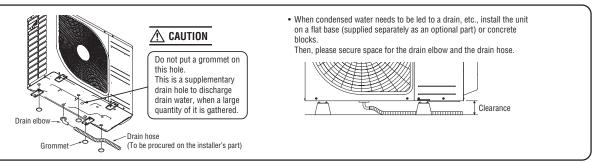


(2) Charging refrigerant

- · Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- . Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gasify upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume
- When refrigerant is charged with the unit being run, complete a charge operation within 30minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.



NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the service panel.

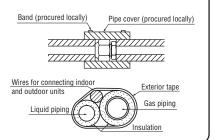

4. ELECTRICAL WIRING WORK For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider gualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.

- Do not use any supply cord lighter than one specified in parentheses for each type below.
- braided cord (code designation 60245 IEC 51)
- ordinary tough rubber sheathed cord (code designation 60245 IEC 53)

 flat twin tinsel cord (code designation 60227 IEC 41) Use polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.

- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone arounding wire.
- If improperly grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire
- Do not turn on the power until the electrical work is completed.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It dose not improve power factor, while it can cause an abnormal overheat accident)
- · For power supply cables, use conduits.

circuit

breaker

Power supply

1 2/N 3 🗄

Indoor unit

· Grounding terminals are provided in the control box.

When wire length exceeds

30m. use 2.5mm² wires.

- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- · Fasten cables so that may not touch the piping, etc. When cables are connected, make sure that all electrical components
- within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- · Never use a shield cable.

*Demand

response enabling

D1 D2 D3 C

DRED*

 SRC-ZMXA-S complies with the DRED (Demand Response Enabling Devices) standard AS/NZS4755.3.1 and supports demand response modes 1, 2, and 3 (DRM1, 2, and 3). Since the air conditioner limits the electric power or energy by receiving the DRED input signal, the sense of cooling operation or heating operation may deteriorate over time. The outdoor unit of this air conditioner is equipped with a terminal block for DRED input and supports ELV (Extra-Low Voltage) complying with AS/NZS60335.1.

▲ CAUTION

In case of faulty wiring connection, the indoor unit stops, and then the run lamp turns on and the timer lamp blinks.


Use cables for interconnection wiring to avoid loosening of the wires. CENELEC code for cables Required field cables.

H05RNR4G1.5 (Example) or 245IEC57

- Harmonized cable type
- 05 300/500 volts

н

- R Natural-and/or synth. rubber wire insulation Ν
 - Polychloroprene rubber conductors insulation
- R Stranded core
- Number of conductors 4or5 One conductor of the cable is the earth conductor G (vellow/green)
- 1.5 Section of copper wire (mm²)

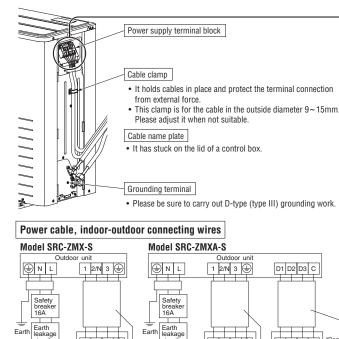

circuit

breaker

Power supply

with size 4 x (0.5mm² to 2.0mm²) cable or flexible cord, where the maximum allowable length is 30m.

· Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.

· Always perform grounding system installation work with the power cord unplugged

Connecting cable between outdoor unit and DRED shall be double insulation layer, polychloroprene sheathed (>50V)


In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.


1 2/N 3 🕀

Indoor unit

When wire length exceeds

30m. use 2.5mm² wires.

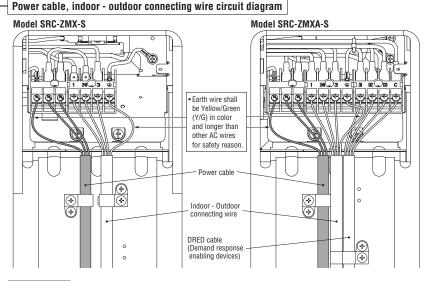




Phase		Switchgear	r or Circuit Breaker	Power source	Interconnecting and
	Earth leakage breaker	Switch breaker	Over current protector rated capacity	(minimum)	grounding wires (minimum)
Single-phase	15A, 30mA, 0.1sec or less	30A	16A	2.0mm ²	1.5mm² X 4

. The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.

- Switchgear or Circuit breaker capacity which is calculated from MAX, over current should be chosen along the regulations in each country.
- . The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

5. UTILIZATION OF EXISTING PIPING

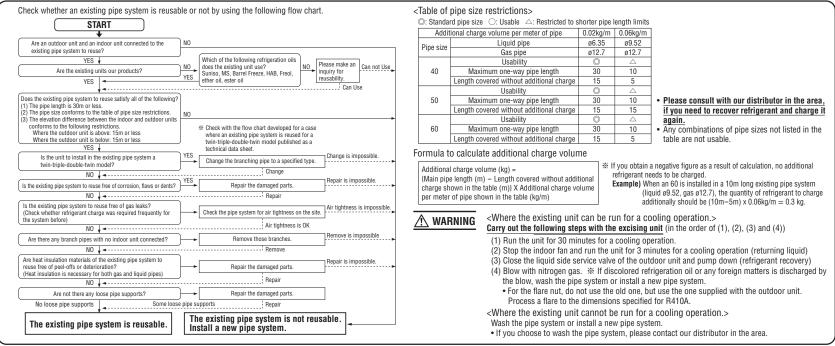

INSTALLATION TEST CHECK After installation POINTS Power cables and connection

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly. Explain to the customer how to use the unit and how to take care of the unit following the instruction manual.

	Power cables and connecting wires are securely fixed to the terminal block.	l
--	---	---

	The	power	supply	voltage	is	correct	as	the	rating
--	-----	-------	--------	---------	----	---------	----	-----	--------

The drain hose is fixed securely.

_					
	Operation	valve	is	fully	open

No gas leaks from the joints of the service valve.

inal block.	The pipe joints for indoor and outdoor pipes have been insulated.
	The reverse flow check cap is attached.
	The cover of the pipe cover (A) faces downward to prevent rain from entering.
	Gaps are properly sealed between the pipe covers (A) (B) and the wall surface / pipes.
	The screw of the side cover is tightened securely.


11. OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER

All icons are shown for the sake of explanation.

11.1 Wired remote control

Model RC-EX1A


(5) LCD display (With backlight) A tap on the LCD lights the backlight. ⑦ Clock, R/C name display Displays the current time and the name of R/C The backlight turns off automatically if there is no operation for certain period of time. Lighting period of the backlight lighting can be 1) Change set temp button changed. Displays the temperature which If the backlight is ON setting, when the screen is set currently. Tap this button is tapped while the backlight is turned off, the to change the set temperature. In eco backlight only is turned on (Operations with A. MI switches 1, 2 and 3 are excluded.) MEETING1 7:05PMKWe Menu 鱼 8 Icon display irection Set temp olin 10 Change operation mode button Each icon is displayed when one of following settings 01 ** Displays the operation mode which **23.0**° is going on.(It is referring to the following figure for \$\$ is selected currently. Tap this button Timer (1) details.) a fi to change the operation mode. w stopp 9 Menu button 1 Timer button When setting or changing other than the following Displays simplified contents of the 10-14, tapthemenubutton. When menu items are timer which is set currently. B displayed, select one and set. " ტ (When two or more timers are set, contents of the timer which will be 12 Flap direction button operated immediately after is Displays the flap direction which is selected currently. displayed.) Tap this button to change the flap direction. Tap this button to set the timer. I Fan speed change button ② switch (High Power switch) Displays the fan speed which is selected currently. Pushing this button starts the high power Tap this button to change the fan speed. operation. 15 Message display 1) () switch (Run/Stop switch) Status of air conditioner operation and messages of One push on the button starts operation the R/C operations etc.are displayed. and another push stops operation. ③ P switch (Energy Saving switch) 6 USB port (mini-B) Pushing this button starts the energy-saving USB connector (mini-B) allows connecting to a operation. personal computer. For operating methods, refer to the instruction 4 Operation lamp manual attached to the software for personal This lamp lights in green (yellow-green) during computer (eco-touch remote control RC-EX1A, operation. It changes to red if any error occurs. utility software). Touch panel system, which is operated by tapping the LCD screen with a finger, is employed for any operations other than the ① Run/Stop, ② High power and ③ Energy-saving switches. 8 Icon display

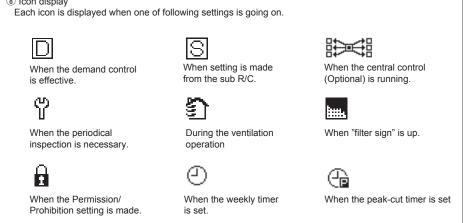


- 78 -

Model RC-E5

The figure below shows the remote control with the cover opened. Note that all the items that may be displayed in the liquid crystal display area are shown in the figure for the sake of explanation Characters displayed with dots in the liquid crystal display area are abbreviated.



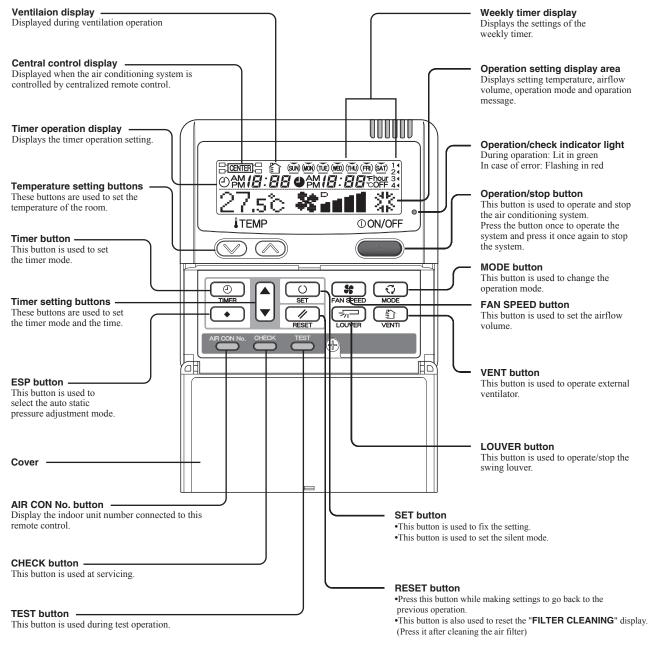


* All displays are described in the liguid crystal display for explanation.

11.2 Operation control function by the wired remote control Model RC-EX1A

(1) Switching sequence of the operation mode switches of remote control


- (a) Tap the change operation mode button on the TOP screen.
- (b) When the change operation mode screen is displayed, tap the button of desired mode.
- (c) When the operation mode is selected, the display returns to the TOP screen. Icons displayed have the following meanings.

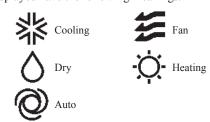


- Notes(1) Operation modes which cannot be selected depending on combinations of IU and OU are not displayed.
 - (2) When the Auto is selected, the cooling and heating switching operation is performed automatically according to indoor and outdoor temperatures.

(2) CPU reset

Reset CPU from the remote control as follows.

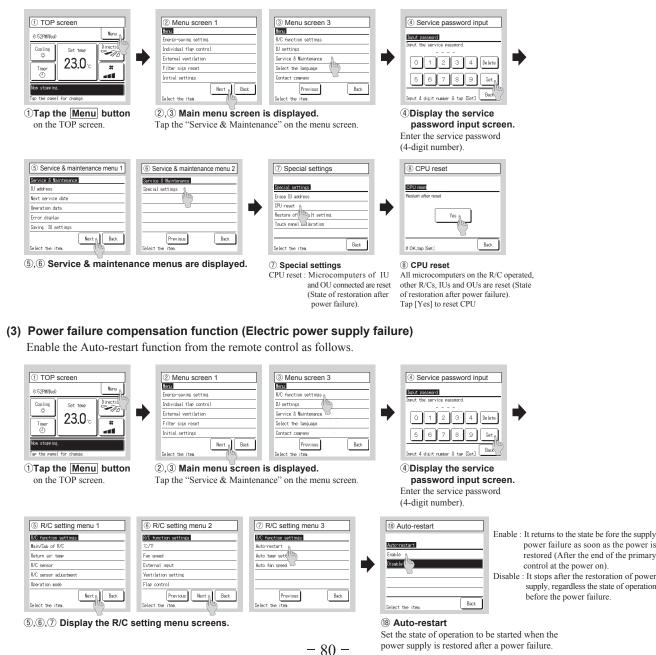

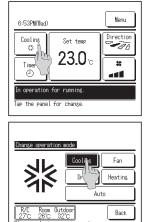

• Since it memorizes always the condition of remote control, it starts operation according to the contents of memory no sooner than normal state is recovered after the power failure. Although the auto swing stop position and the timer mode are cancelled, the weekly timer setting is restored with the holiday setting for all weekdays.

After recovering from the power failure, it readjusts the clock and resets the holiday setting for each weekday so that the setting of weekly timer becomes effective.


- Content memorized with the power failure compensation are as follows.
- Note (1) Items (f), (g) and (h) are memorized regardless whether the power failure compensation is effective or not while the setting of silent mode is cancelled regardless whether the power failure compensation is effective or not.
 - (a) At power failure Operating/stopped

If it had been operating under the off timer mode, sleep timer mode, the state of stop is memorized. (Although the timer mode is cancelled at the recovery from power failure, the setting of weekly timer is changed to the holiday setting for all weekdays.)

- (b) Operation mode
- (c) Airflow volume mode
- (d) Room temperature setting
- (e) Louver auto swing/stop
 - However, the stop position (4-position) is cancelled so that it returns to Position (1).
- (f) "Remote control function items" which have been set with the remote control function setting ("Indoor function items" are saved in the memory of indoor unit.)
- (g) Upper limit value and lower limit value which have been set with the temperature setting control
- (h) Sleep timer and weekly timer settings (Other timer settings are not memorized.)

Model RC-E5

(1) Switching sequence of the operation mode switches of remote control



(2) CPU reset

This functions when "CHECK" and "ESP" buttons on the remote control are pressed simultaneously. Operation is same as that of the power supply reset.

(3) Power failure compensation function (Electric power supply failure)

- This becomes effective if "Power failure compensation effective" is selected with the setting of remote control function.
- Since it memorizes always the condition of remote control, it starts operation according to the contents of memory no sooner than normal state is recovered after the power failure. Although the auto swing stop position and the timer mode are cancelled, the weekly timer setting is restored with the holiday setting for all weekdays. After recovering from the power failure, it readjusts the clock and resets the holiday setting for each weekday so that the


setting of weekly timer becomes effective.

- Content memorized with the power failure compensation are as follows.
 - Note (1) Items (f), (g) and (h) are memorized regardless whether the power failure compensation is effective or not while the setting of silent mode is cancelled regardless whether the power failure compensation is effective or not.
 - (a) At power failure Operating/stopped

If it had been operating under the off timer mode, sleep timer mode, the state of stop is memorized. (Although the timer mode is cancelled at the recovery from power failure, the setting of weekly timer is changed to the holiday setting for all weekdays.)

- (b) Operation mode
- (c) Airflow volume mode
- (d) Room temperature setting
- (e) Louver auto swing/stop
- However, the stop position (4-position) is cancelled so that it returns to Position (1).
- (f) "Remote control function items" which have been set with the remote control function setting ("Indoor function items" are saved in the memory of indoor unit.)
- (g) Upper limit value and lower limit value which have been set with the temperature setting control
- (h) Sleep timer and weekly timer settings (Other timer settings are not memorized.)

[Parts layout on remote control PCB]

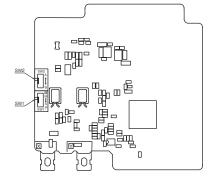


	Switch	Setting	Contents
Indoor units	SW1	M	Master remote control
	5001	S	Slave remote control
XX		nge SW2 becau	se it is not used normally.
Remote	e control cord (no polarity)		
╶╴┎╧╧╧╌╴╷╶╶╶╦╦	<u></u>		
Bemote control I Bemote c			
SW1 "Master" SW1 "SI			
' '	/		
Caution			
When using multiple r	emote controls the	following	displays or settings
cannot be done with th		0	
the master remote co			
①Louver position sett	ing (set upper or lo	wer limit of	swinging range)
②Setting indoor unit f			
③Setting temperature			
④Operation data disp	•		
⑤Error data display			
6 Silent mode setting			
•			
⑦Test operation of dr			

11.3 Operation control function by the indoor control

(1) Auto operation


(a) If "Auto" mode is selected by the remote control, the heating and the cooling are automatically switched according to the difference between outdoor air temperature and setting temperature and the difference between setting temperature and return air temperature. (When the switching of cooling mode ↔ heating mode takes place within 3 minutes, the compressor does not operate for 3 minutes by the control of 3-minute timer.) This will facilitate the cooling/heating switching operation in intermediate seasons and the adaptation to unmanned operation at stores, etc (ATM corner of bank).



Room temperature (detected with ThI-A) [deg]

Notes (1) Temperature range of switching cooling/heating mode can be changed by RC-EX1A from $\pm 1.0 \sim \pm 4.0$.


(2) Room temperature control during auto cooling/auto heating is performed according to the room temperature setting temperature. (DIFF: ±1 deg)
(3) If the indoor heat exchanger temperature rises to 59°C or higher during heating operation, it is switched automatically to cooling operation. In addition, for 1 hour after this switching, the heating operation is not




(b) The following automatic controls are performed other than (a) above.

performed, regardless of the temperature shown at right.

- (i) Cooling or heating operation mode is judged according to the conditions of the "Judgment based on Setting temperature + Cooling select temperature and Indoor return air temperature" and the "Judgment based on Outdoor temperature".
 - In "Setting temperature Cooling select temperature < Indoor return air temperature" and "Outdoor temperature/Cooling < Outdoor return air temperature" ⇒ Operation mode: Cooling
 - "Setting temperature + Heating select temperature > Indoor return air temperature" and "Outdoor temperature/Heating > Outdoor air temperature" ⇒ Operation mode: Heating
 - 3) The outdoor air temperature of the above judgment conditions is sampled at every 10 minutes.
 - 4) In the range where the above cooling and heating zones are overlapped \Rightarrow Forced thermostat OFF

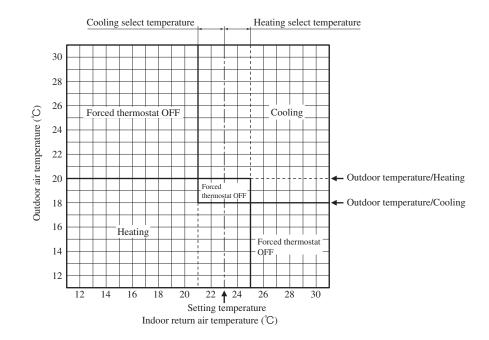

- (ii) Regardless of the setting temperature, the cooling or heating operation mode is judged according to the "Judgment based on Room temperature/Cooling or Heating and Outdoor temperature/Cooling or Heating".
 - In case of "Room temperature/Cooling < Indoor return air temperature" and "Outdoor temperature/Cooling < Outdoor air temperature" ⇒ Operation mode: Cooling
 - In case of "Room temperature/Heating > Indoor return air temperature" and "Outdoor temperature /Heating > Outdoor air temperature" ⇒ Operation mode: Heating
 - 3) The outdoor air temperature of the above judgment conditions is sampled at every 10 minutes.
 - 4) In the range where the above cooling and heating zones are overlapped \Rightarrow Forced thermostat OFF

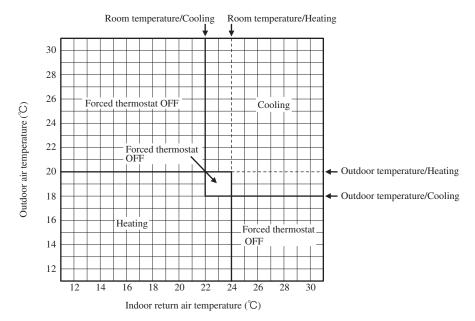

(2) Operations of functional items during cooling/heating

Operation	Operation Cooling						
Functional item	Thermostat ON	Thermostat OFF	Fan	Thermostat ON	Thermostat OFF	Hot start (Defrost)	Dehumidifying
Compressor	0	×	×	0	×	0	O/×
4-way valve	×	×	×	0	0	\bigcirc (×)	×
Outdoor unit fan	0	×	×	0	×	$\bigcirc(\times)$	O/×
Indoor unit fan	0	0	0	O/×	O/×	O/×	O/×
Drain pump ⁽³⁾	0	× (2)	imes (2)		$O/\times^{(2)}$		Thermostat ON: \bigcirc Thermostat OFF: $\times^{\scriptscriptstyle (2)}$

Note (1) \bigcirc : Operation \times : Stop \bigcirc/\times : Turned ON/OFF by the control other than the room temperature control.

(2) ON during the drain motor delay control.

(3) Drain pump ON setting may be selected with the indoor unit function setting of the wired remote control.

(3) Dehumidifying operation

Return air temperature thermistor [ThI-A (by the remote control when the remote control thermistor is enabled)] controls the indoor temperature environment simultaneously.

- (a) Operation is started in the cooling mode. When the difference between the return air temperature and the setting temperature is 2°C or less, the indoor unit fan tap is brought down by one tap. That tap is retained for 3 minutes after changing the indoor unit fan tap.
- (b) If the return air temperature exceeds the setting temperature by 3°C during dehumidifying operation, the indoor unit fan tap is raised. That tap is retained for 3 minutes after changing the indoor unit fan tap.
- (c) If the thermostat OFF is established during the above control, the indoor unit fan tap at the thermostat ON is retained so far as the thermostat is turned OFF.

(4) Timer operation

(a) RC-EX1A

(i) Sleep timer

Set the time from the start to stop of operation. The time can be selected in the range from 30 to 240 minutes (in the unit of 10-minute).

Note (1) Enable the "Sleep timer" setting from the remote control. If the setting is enabled, the timer operates at every time.

(ii) Set OFF timer by hour

Set the time to stop the unit after operation, in the range from 1 to 12 hours (in the unit of hour).

(iii) Set ON timer by hour

Set the time to start the unit after the stop of operation, in the range from 1 to 12 hours (in the unit of hour). It is allowed also to set simultaneously the indoor temperature, operation mode, air flow rate and warm-up enabled/ disabled.

(iv) Set ON timer by clock

Set the time to start operation. The time can be set in the unit of 5-minute. This setting can be activated only once or at every time. It is allowed also to set simultaneously the indoor temperature, operation mode, air flow rate and warm-up enabled/disabled.

Note (1) It is necessary to set the clock to use this timer.

(v) Set OFF timer by clock
 Set the time to stop operation. The time can be set in the unit of 5-minute. This setting can be activated only once or at every time.

Note (1) It is necessary to set the clock to use this timer.

(vi) Weekly timer

Set the ON or OFF timer for a week. Up to 8 patterns can be set for a day. The day-off setting is provided for holidays and non-business days.

Note (1) It is necessary to set the clock to use the weekly timer.

(vii) Combination of patterns which can be set for the timer operations

	Sleep time	Set OFF timer by hour	Set ON timer by hour	Set OFF timer by clock	Set ON timer by clock	Weekly timer
Sleep time		×	×	0	0	0
Set OFF timer by hour	×		×	×	×	×
Set ON timer by hour	×	×		×	×	×
Set OFF timer by clock	0	×	×		0	×
Set ON timer by clock	0	×	×	0		×
Weekly timer	0	×	×	×	×	

Note (1) \bigcirc : Allowed \times : Not

(b) RC-E5

(i) Sleep timer

Set the duration of time from the present to the time to turn off the air-conditioner.

It can be selected from 10 steps in the range from "OFF 1 hour later" to "OFF 10 hours later". After the sleep timer setting, the remaining time is displayed with progress of time in the unit of hour.

(ii) OFF timer

Time to turn OFF the air-conditioner can be set in the unit of 10 minutes.

(iii) ON timer

Time to turn ON the air-conditioner can be set. Indoor temperature can be set simultaneously.

(iv) Weekly timer

Timer operation (ON timer, OFF timer) can be set up to 4 times a day for each weekday.

(v) Timer operations which can be set in combination

ltem	Timer	OFF timer	ON timer	Weekly timer
Timer		×	0	×
OFF timer	×		0	×
ON timer	0	0		×
Weekly timer	×	×	×	

Note (1) O: Allowed X: Not

(2) Since the ON timer, sleep timer and OFF timer are set in parallel, when the times to turn ON and OFF the airconditioner are duplicated, the setting of the OFF timer has priority.

(5) Remote control display during the operation stop

When the operation is stopped (the power supply is turned ON), it displays preferentially the "Room temperature", "Center/ Remote", "Filter sign", "Inspection" and "Timer operation".

(6) Hot start (Cold draft prevention at heating)

(a) Operating conditions

When either one of following conditions is met, the hot start control is performed.

- (i) From stop to heating operation
- (ii) From cooling to heating operation
- (iii) Form heating thermostat OFF to ON
- (iv) After completing the defrost control (only on units with thermostat ON)

(b) Contents of operation

- (i) Indoor fan motor control at hot start
 - 1) Within 7 minutes after starting heating operation, the fan mode is determined depending on the condition of thermostat (fan control with heating thermostat OFF).
 - a) Thermostat OFF
 - i) Operates according to the fan control setting at heating thermostat OFF.
 - ii) Even if it changes from thermostat OFF to ON, the fan continues to operate with the fan control at thermostat OFF till the heat exchanger thermistor (ThI-R1 or R2, whichever higher) detects 35°C or higher.
 - iii) When the heat exchanger thermistor (ThI-R1 or R2, whichever higher) detects 35°C or higher, the fan operates with the set airflow volume.
 - b) Thermostat ON
 - i) When the heat exchanger thermistor (ThI-R1 or R2, whichever higher) detects 25°C or lower, the fan is turned OFF and does not operate.
 - ii) When the heat exchanger thermistor (ThI-R1 or R2, whichever higher) detects 25°C or higher, the fan operates with the fan control at heating thermostat OFF.
 - iii) When the heat exchanger thermistor (ThI-R1 or R2, whichever higher) detects 35°C or higher, the fan operates with the set airflow volume.
 - c) If the fan control at heating thermostat OFF is set at the "Set airflow volume" (from the remote control), the fan operates with the set airflow volume regardless of the thermostat ON/OFF.
 - Once the fan motor is changed from OFF to ON during the thermostat ON, the indoor fan motor is not turned OFF even if the heat exchanger thermistor detects lower than 25°C.

Note (1) When the defrost control signal is received, it complies with the fan control during defrosting.

- 3) Once the hot start is completed, it will not restart even if the temperature on the heat exchanger thermistor drops.
- (ii) During the hot start, the louver is kept at the horizontal position.
- (iii) When the fan motor is turned OFF for 7 minutes continuously after defrosting, the fan motor is turned ON regardless of the temperatures detected with the indoor heat exchanger thermistors (ThI-R1, R2).

(c) Ending condition

- (i) If one of following conditions is met during the hot start control, this control is terminated, and the fan is operated with the set airflow volume.
 - 1) Heat exchanger thermistor (ThI-R1 or R2, whichever higher) detects 35°C or higher.
 - 2) It has elapsed 7 minutes after starting the hot start control.

(7) Hot keep

Hot keep control is performed at the start of the defrost control.

- (a) Control
 - (i) When the indoor heat exchanger temperature (detected with ThI-R1 or R2) drops to 35°C or lower, the speed of indoor fan is changed to the lower tap at each setting.
 - (ii) During the hot keep, the louver is kept at the horizontal position.
- (b) Ending condition

When the indoor fan is at the lower tap at each setting, it returns to the set airflow volume as the indoor heat exchanger temperature rises to 45°C or higher.

(8) Auto swing control (FDT, FDTC only)

(a) RC-EX1A

- (i) Louver control
 - 1) To operate the swing louver when the air conditioner is operating, press the "Direction" button on the TOP screen of remote control. The wind direction select screen will be displayed.
 - 2) To swing the louver, touch the "Auto swing" button. The lover will move up and down. To fix the swing louver at a position, touch one of [1] [4] buttons. The swing lover will stop at the selected position.
 - 3) Louver operation at the power on with a unit having the louver 4-position control function The louver swings one time automatically (without operating the remote control) at the power on. This allows the microcomputer recognizing and inputting the louver motor (LM) position.
- (ii) Automatic louver level setting during heating

At the hot start and the heating thermostat OFF, regardless whether the auto swing switch is operated or not (auto swing or louver stop), the louver takes the level position (in order to prevent blowing of cool wind). The louver position display LCD continues to show the display which has been shown before entering this control.

(iii) Louver free stop control

If you touch the "Menu" \rightarrow "Next" \rightarrow "R/C settings" buttons one after another on the TOP screen of remote control, the "Flap control" screen is displayed. If the free stop is selected on this screen, the louver motor stops upon receipt of the stop signal from the remote control. If the auto swing signal is received from the remote control, the auto swing will start from the position before the stop.

(b) RC-E5

- (i) Louver control
 - 1) Press the "LOUVER" button to operate the swing louver when the air conditioner is operating. "SWING $\frac{1}{2}$ " is displayed for 3 seconds and then the swing louver moves up and down continuously.
 - 2) To fix the swing louver at a position, press one time the "LOUVER" button while the swing louver is moving so that four stop positions are displayed one after another per second.

When a desired stop position is displayed, press the "LOUVER" button again. The display stops, changes to show the "STOP 1 —" for 5 seconds and then the swing louver stops.

3) Louver operation at the power on with a unit having the louver 4-position control function

The louver swings one time automatically (without operating the remote control) at the power on.

This allows inputting the louver motor (LM) position, which is necessary for the microcomputer to recognize the louver position.

- Note (1) If you press the "LOUVER" button, the swing motion is displayed on the louver position LCD for 10 second. The display changes to the "SWING ="," display 3 seconds later.
- (ii) Automatic louver level setting during heating

At the hot start with the heating thermostat OFF, regardless whether the auto swing switch is operated or not (auto swing or louver stop), the louver takes the level position (In order to prevent the cold start). The louver position display LCD continues to show the display which has been shown before entering this control.

(iii) Louver-free stop control


When the louver-free stop has been selected with the indoor function of wired remote control "= POSITION", the louver motor stops when it receives the stop signal from the remote control. If the auto swing signal is received from the remote control, the auto swing will start from the position where it was before the stop.

Note (1) When the indoor function of wired remote control " \neq_{n} POSITION" has been switched, switch also the remote control function " \neq_{n} POSITION" in the same way.

(9) Thermostat operation

(a) Cooling


- (i) Thermostat is operated with the room temperature control.
- (ii) Thermostat is turned ON or OFF relative to the set room temperature as shown below.



(iii) Thermostat is turned ON when the room temperature is in the range of -1 < Set temperature < +1 at the start of cooling operation (including from heating to cooling).

(b) Heating

- (i) Thermostat is operated with the room temperature control.
- (ii) Thermostat is turned ON or OFF relative to the set room temperature as shown below.

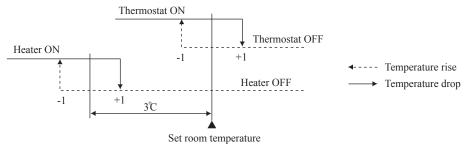

(iii) Thermostat is turned ON when the room temperature is in the range of -1 <Set point < +1 at the start of cooling operation (including from cooling to heating).

(c) Fan control during heating thermostat OFF

(i) Following fan controls during the heating thermostat OFF can be selected with the indoor function setting of the wired remote control.

① Low fan speed (Factory default), ② Set fan speed, ③ Intermittence, ④ Fan OFF

- (ii) When the "Low fan speed (Factory default)" is selected, the following taps are used for the indoor fans.For DC motor : ULo tap
- (iii) When the "Set fan speed" is selected, it is operated with the set fan speed also in the thermostat OFF condition.
- (iv) If the "Intermittence" is selected, following controls are performed:
 - 1) If the thermostat is turned OFF during the heating operation, the indoor unit moves to the hot control and turns OFF the indoor fan if the heat exchanger thermistors (both ThI-R1 and R2) detect 25°C or lower.
 - 2) Indoor fan OFF is fixed for 5 minutes. After the 5 minutes, the indoor fan is operated at ULo for 2 minutes. In the meantime the louver is controlled at level.
 - 3) After operating at ULo for 2 minutes, the indoor fan moves to the state of 1) above.
 - 4) If the thermostat is turned ON, it moves to the hot start control.
 - 5) When the heating thermostat is turned OFF, the remote control displays the temperature detected at the fan stop and revises the temperature later when the indoor fan changes from ULo to stop. The remote control uses the operation data display function to display temperatures and updates values of temperature even when the indoor fan is turned OFF.
 - 6) When the defrosting starts while the heating thermostat is turned OFF or the thermostat is turned OFF during defrosting, the indoor fan is turned OFF. (Hot keep or hot start control takes priority.) However, the suction temperature is updated at every 7-minute.
 - 7) When the heating thermostat is turned ON or the operation is changed to another mode (including stop), this control is stopped immediately, and the operating condition is restored.
- (v) When the "Fan OFF" is selected, the fan on the indoor unit of which the thermostat has been turned OFF, is turned OFF. The same occurs also when the remote control sensor is effective.

(d) Fan control during cooling thermostat OFF

(i) Following fan controls during the cooling thermostat OFF can be selected with the indoor function setting of the wired remote control.

1 Low fan speed, 2 Set fan speed (Factory default), 3 Intermittence, 4 Fan OFF

- (ii) When the "Low fan speed" is selected, the following taps are used for the indoor fans.
 - For DC motor : ULo tap
- (iii) When the "Set fan speed" is selected, it is operated with the set fan speed also in the thermostat OFF condition.
- (iv) If the "Intermittence" is selected, following controls are performed:
 - 1) If the thermostat is turned OFF during the cooling operation, the indoor unit fan motor stope.
 - 2) Indoor fan OFF is fixed for 5 minutes. After the 5 minutes, the indoor fan is operated at ULo for 2 minutes. In the meantime the louver is controlled at level.
 - 3) After operating at ULo for 2 minutes, the indoor fan moves to the state of 1) above.
 - 4) If the thermostat is turned ON, the fan starts operation at set fan speed.
 - 5) When the cooling thermostat is turned OFF, the remote control displays the temperature detected at the fan stop and revises the temperature later when the indoor fan changes from ULo to stop.

By using operation data display function at wireless remote control, the tempenature as displayad and the value is updated including the fan stops.

- 6) When the cooling thermostat is turned ON or the operation is changed to another mode (including stop), this control is stopped immediately, and the operating condition is restored.
- (v) When the "Fan OFF" is selected, the fan on the indoor unit of which the thermostat has been turned OFF, is turned OFF. The same occurs also when the remote control sensor is effective.

(10) Filter sign

As the operation time (Total ON time of ON/OFF switch) accumulates to 180 hours (1), "FILTER CLEANING" is displayed on the remote control. (This is displayed when the unit is in trouble and under the centralized control, regardless of ON/OFF)

Notes (1) Time setting for the filter sign can be made as shown below using the indoor function of wired remote control "FILTER SIGN SET". (It is set at TYPE 1 at the shipping from factory.)

Filter sign setting	Function			
TYPE 1	Setting time: 180 hrs (Factory default)			
TYPE 2	Setting time: 600 hrs			
ТҮРЕ 3	Setting time: 1,000 hrs			
TYPE 4	Setting time: 1,000 hrs (Unit stop) ⁽²⁾			

(2) After the setting time has elapsed, the "FILTER CLEANING" is displayed and, after operating for 24 hours further (counted also during the stop), the unit stops.

(11) Compressor inching prevention control

(a) 3-minute timer

When the compressor has been stopped by the thermostat, remote control operation switch or anomalous condition, its restart will be inhibited for 3 minutes. However, the 3-minute timer is invalidated at the power on the electric power source for the unit.

- (b) 3-minute forced operation timer
 - (i) Compressor will not stop for 3 minutes after the compressor ON. However, it stops immediately when the unit is stopped by means of the ON/OFF switch or by when the thermister turned OFF the change of operation mode.
 - (ii) If the thermostat is turned OFF during the forced operation control of heating compressor, the louver position (with the auto swing) is returned to the level position.


Note (1) The compressor stops when it has entered the protective control.

(12) Drain pump control

- (a) This control is operated when the inverter frequency is other than 0 Hz during the cooling operation and automatic cooling and dehumidifying operations.
- (b) Drain pump ON condition continues for 5 minutes even when it enters the OFF range according to (i) above after turning the drain pump ON, and then stops. The 5-minute delay continues also in the event of anomalous stop.
- (c) The drain pump is operated with the 5-minute delay operation when the compressor is changed from ON to OFF.
- (d) Even in conditions other than the above (such as heating, fan, stop, cooling thermostat OFF), the drain pump control is performed by the drain detection.
- (e) Following settings can be made using the indoor function setting of the wired remote control.
 - (i) 🗱 👌 [Standard (in cooling & dry)] : Drain pump is run during cooling and dry.
 - (ii) 念合的资 [Operate in standard & heating]: Drain pump is run during cooling, dry and heating.
 - (iii) ②◇AND☆AND 😫 [Operate in heating & fan]: Drain pump is run during cooling, dry, heating and fan.
 - (iv) 黨合訊[1] [Operate in standard & fan]: Drain pump is run during cooling, dry and fan. Note (1) Values in [] are for the RC-EX1A model.

(13) Drain motor (DM) control

(a) Drain detection switch is turned ON or OFF with the float switch (FS) and the timer.



- [*1] Drain detection switch is turned "ON" when the float switch "Open" is detected for 3 seconds continuously in the drain detectable space.
- [*2] Drain detection switch is turned "OFF" when the float switch "Close" is detected for 10 seconds continuously.
- (i) It detects always from 30 seconds after turning the power ON.
 - 1) There is no detection of anomalous draining for 10 seconds after turning the drain pump OFF.
 - 2) Turning the drain detection switch "ON" causes to turn ON the drain pump forcibly.
 - 3) Turning the drain detection switch "OFF" releases the forced drain pump ON condition.
- (b) Indoor unit performs the control A or B depending on each operating condition.

Indoor unit operation mode						
	Stop (1)	Cooling	Dry	Fan (2)	Heating	Note (1) Including the stop from the cooling, dehumidifying, fan
Compressor ON		Control A			and heating, and the anomalous stop (2) Including the "Fan" operation according to the	
Compressor OFF		Control B				mismatch of operation modes

- (i) Control A
 - 1) If the float switch detects any anomalous draining condition, the unit stops with the anomalous stop (displays E9) and the drain pump starts. After detecting the anomalous condition, the drain motor continues to be ON.
 - 2) It keeps operating while the float switch is detecting the anomalous condition.
- (ii) Control B

If the float switch detects any anomalous drain condition, the drain motor is turned ON for 5 minutes, and at 10 seconds after the drain motor OFF it checks the float switch. If it is normal, the unit is stopped under the normal mode or, if there is any anomalous condition, E9 is displayed and the drain motor is turned ON. (The ON condition is maintained during the drain detection.)

(14) Operation check/drain pump test run operation mode

- (a) If the power is turned on by the dip switch (SW7-1) on the indoor PCB when electric power source is supplied, it enters the mode of operation check/drain pump test run. It is ineffective (prohibited) to change the switch after turning power on.
- (b) When the communication with the remote control has been established within 60 seconds after turning power on by the dip switch (SW7-1) ON, it enters the operation check mode. Unless the remote control communication is established, it enters the drain pump test run mode.

Note (1) To select the drain pump test run mode, disconnect the remote control connector (CNB) on the indoor PCB to shut down the remote control communication.

(c) Operation check mode


There is no communication with the outdoor unit but it allows performing operation in respective modes by operating the remote control.

(d) Drain pump test run mode

As the drain pump test run is established, the drain pump only operates and during the operation protective functions by the microcomputer of indoor unit become ineffective.

(15) Cooling, dehumidifying frost protection

(a) To prevent frosting during cooling mode or dehumidifying mode operation, the of compressor speed is reduced if the indoor heat exchanger temperature (detected with ThI-R) drops to 1.0 °C or lower at 4 minutes after the start of compressor operation. If the indoor unit heat exchanger temperature is 1.0 °C or lower after 1 minutes, the compressor speed is reduced further. If it becomes 2.5 °C or higher, the control terminates. When the indoor heat exchanger temperature has become as show below after reducing the compressor speed, it is switched to the fan operation. For the selection of indoor fan speed, refer to item 2).



Indoor heat exchanger temperature (°C)

(b) Selection of indoor fan speed

If it enters the frost prevention control during cooling operation (excluding dehumidifying), the indoor unit fan speed is switched.

- (i) In the case of FDT, FDUM only.
 - When the indoor return air detection temperature (detected with ThI-A) is 23°C or higher and the indoor heat exchanger temperature (detected with ThI-R) detects the compressor frequency drop start temperature A°C+1°C, of indoor unit fan speed is increased by 20rpm.
 - 2) If the phenomenon of 1) above is detected again after the acceleration of indoor unit fan, indoor unit fan speed is increased further by 20rpm.

Note (1) Indoor unit fan speed can be increased by up to 2 taps.


Compressor frequency drop start temperature

Item	А
Temperature - Low (Factory default)	1.0
Temperature - High	2.5

Note (1) Frost prevention temperature setting can be selected with the indoor unit function setting of the wired remote control.

(16) Heating overload protection

(a) If the indoor heat exchanger temperature (detected with ThI-R) at 63°C or higher is detected for 2 seconds continuously, the compressor stops. When the compressor is restarted after a 3-minute delay, if a temperature at 63°C or higher is detected for 2 seconds continuously within 60 minutes after initial detection and if this is detected 5 times consecutively, the compressor stops with the anomalous stop (E8). Anomalous stop occurs also when the indoor heat exchanger temperature at 63°C or higher is detected for 6 minutes continuously.



(b) Indoor unit fan speed selection

If, after second detection of heating overload protection up to fourth, the indoor fan is set at Me and Lo taps when the compressor is turned ON, the indoor fan speed is increased by 1 tap.

(17) Anomalous fan motor

- (a) After starting the fan motor, if the fan motor speed is 200min⁻¹ or less is detected for 30 seconds continuously and 4 times within 60 minutes, then fan motor stops with the anomalous stop (E16).
- (b) If the fan motor fails to reach at -50 min⁻¹ less than the required speed, it stops with the anomalous stop (E20).

(18) Plural unit control – Control of 16 units group by one remote control

(a) Function

One remote control switch can control a group of multiple number of unit (Max. 16 indoor units). "Operation mode" which is set by the remote control switch can operate or stop all units in the group one after another in the order of unit No.⁽¹⁾. Thermostat and protective function of each unit function independently.

- Note (1) Unit No. is set by SW2 on the indoor unit control PCB. Unit No. setting by SW2 is necessary for the indoor unit only. SW2: For setting of 0 – 9, A – F
 - (2) Unit No. may be set at random unless duplicated, it should be better to set orderly like 0, 1, 2..., F to avoid mistake.
- (b) Display to the remote control
 - (i) Center or each remote control basis, heating preparation: the youngest unit No. among the operating units in the remote mode (or the center mode unless the remote mode is available) is displayed.
 - (ii) Inspection display, filter sign: Any of unit that starts initially is displayed.
 - (iii) Confirmation of connected units
 - 1) In case of RC-EX1A remote control

If you touch the buttons in the order of "Menu" \rightarrow "Next" \rightarrow "Service & Maintenance" \rightarrow "IU address" on the TOP screen of remote control, the indoor units which are connected are displayed.

2) In case of RC-E5 remote control

Pressing "AIR CON No." button on the remote control displays the indoor unit address. If " \blacktriangle " " \checkmark " button is pressed at the next, it is displayed orderly starting from the unit of youngest No.

- (iv) In case of anomaly
 - 1) If any anomaly occurs on a unit in a group (a protective function operates), that unit stops with the anomalous stop but any other normal units continue to run as they are.
 - 2) Signal wiring procedure

Signal wiring between indoor and outdoor units should be made on each unit same as the normal wiring. For the group control, lay connect with sires wiring between rooms using terminal blocks (X, Y) of remote control. Connect the remote control communication wire separately from the power supply wire or wires of other electric devices (AC220V or higher).

(19) High ceiling control

When sufficient air flow rate cannot be obtained from the indoor unit which is installed at a room with high ceiling, the air flow rate can be increased by changing the fan tap. To change the fan tap, use the indoor unit function "FAN SPEED SET" on the wired remote control.

Fan tap			Indoor unit airflow setting						
Fai	пар	Sati -	\$**** - \$***0 - \$***0	\$2001 - \$2000 - \$2000	\$200 - \$200)	Stati - Stati			
FAN SPEED SET	STANDARD	PHi	- Hi - Me - Lo	Hi - Me - Lo	Hi - Lo	Hi - Me			
FAN SFEED SET	HIGH SPEED1, 2	PHi	- PHi - Hi - Me	PHi - Hi - Me	PHi - Me	PHi - Hi			

Notes (1) Factory default is STANDARD.

(2) At the hot-start and heating thermostat OFF, or other, the indoor unit fan is operated at the low speed tap of each setting.

(3) This function is not able to be set with wireless remote controls or simple remote control (RCH-E3)

(20) Abnormal temperature thermistor (return air/indoor heat exchanger) wire/short-circuit detection

(a) Broken wire detection

When the return air temperature thermistor detects -50° C or lower or the heat exchanger temperature thermistor detect -50° C or lower for 5 seconds continuously, the compressor stops. After a 3-minute delay, the compressor restarts but, if it is detected again within 60 minutes after the initial detection for 6 minutes continuously, stops again (the return air temperature thermistor: E7, the heat exchanger temperature thermistor: E6).

(b) Short-circuit detection


If the heat exchanger temperature thermistor detects 70°C or higher for 5 seconds continuously at 2 minutes and 20 seconds after the compressor ON during cooling operation, the compressor stops (E6).

(21) External input/output control (CnT or CnTA)

Be sure to connect the wired remote control to the indoor unit. Without wired remote control remote operation by CnT is not possible to perform.

 $\cdot CnT$

·CnTA (FDT, FDUM only)

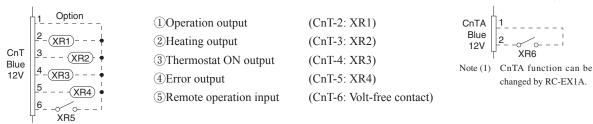

Priority order for combinations of CnT and CnTA input.

\square			CnTA						
		① Operation stop level	② Operation stop pulse	③ Operation permission/prohibition	④ Operation permission/prohibition pulse	(5) Cooling/heating selection level	6 Cooling/heating selection pulse		
	① Operation stop level	CnT ①	CnT ①	CnT ① +CnTA ②	CnT ①	CnT ① /CnTA ⑤	CnT ① /CnTA ⑥		
	② Operation stop pulse	CnT 2	CnT 2	CnT (2) +CnTA (3)	CnT ②	CnT 2 /CnTA 5	CnT 2 /CnTA 6		
CnT	(3) Operation permission/prohibition level	CnT ③ >CnTA ①	CnT ③ >CnTA ②	CnT ③ +CnTA ③	CnT ③	CnT ③ /CnTA ⑤	CnT ③ /CnTA ⑥		
	(4) Operation permission/prohibition pulse	CnT ④	CnT ④	CnT ④ +CnTA ③ ※	CnT ④	CnT ④ /CnTA ⑤	CnT ④ /CnTA ⑥		
	(5) Cooling/heating selection level	CnT (5) /CnTA (1)	CnT (5) /CnTA (2)	CnT (5) /CnTA (3) **	CnT (5) /CnTA (4)	CnT (5)	CnT (5)		
	6 Cooling/heating selection pulse	CnT 6 /CnTA 1	CnT 6 /CnTA 2	CnT 6 /CnTA 3	CnT 6 /CnTA 4	CnT 6	CnT 6		

Note (1) Following operation commands are accepted when the operation prohibition is set with CnTA as indicated with *.

Individual operation command from remote control, test run command from outdoor unit and operation command from optional device, CNT input. Reference: Explanation on the codes and the combinations of codes in the table above

1. In case of CnT "Number", the CnT "Number" is adopted and CnTA is invalidated.

- In case of CnTA "Number", the CnTA "Number" is adopted and CnTA is invalidated.
- In case of CnT "Number"/CnTA "Number", the CnT "Number" and the CnTA "Number" become independent functions each other.
- 4. In case of CnT "Number" + CnTA "Number", the CnT "Number" and the CnTA "Number" become competing functions each other.
- 5. In case of CnT "Number" > CnTA "Number", the function of CnT "Number" supersedes that of CnTA "Number".
- 6. In case of CnT "Number" < CnTA "Number", the function of CnTA "Number" supersedes that of CnT "Number".

(The "Number" above means (1) - (6) in the table.)

(a) Output for external control (remote display)

Following output connectors (CnT) are provided on the indoor control PCB for monitoring operation status.

- ① **Operation output:** Outputs DC12V signal for driving relay during operation
- (2) Heating output: Outputs DC12V signal for driving relay during heating operation
- 3 Thermostat ON output: Outputs DC12V signal for driving relay when compressor is operating.
- (4) Error output: Outputs DC12V signal for driving relay when anomalous condition occurs.

(b) Remote operation input

Remote operation input connector (CnT-6 or CnTA) is provided on the indoor control PCB.


However remote operation by CnT-6 or CnTA is not effective, when "Center mode" is selected by center controller.

In case of plural unit (twin, triple, double twin), remote operation input to CnT-6 or CnTA on the slave indoor unit is invalid.

Only the "LEVEL INPUT" is acceptable for external input, however when the indoor function setting of "Level input (Factory default)" or "Pulse input" is selected by the function for "External input" of the wired remote control, operation status will be changed as follows.

(i) In case of "Level input" setting (Factory default)

Input signal to CnT-6 or CnTA is OFF \rightarrow ON unit ON Input signal to CnT-6 or CnTA is ON \rightarrow OFF unit OFF Operation is not inverted.

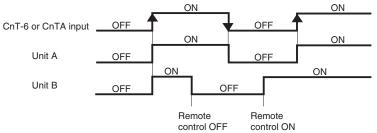


Note: The latest operation has priority

It is available to operate/stop by remote control or center control


(ii) In case of "Pulse input" setting (Local setting)

It is effective only when the input signal to CnT-6 or CnTA is changed OFF \rightarrow ON, and at that time unit operation [ON/ OFF] is inverted.

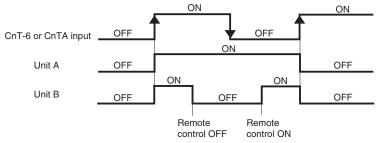

(c) Remote operation

(i) In case of multiple units (Max. 16 indoor units group) are connected to one wired remote control When the indoor function setting of wired remote control for "External control set" is changed from "Individual (Factory default)" to "For all units", all units connected in one wired remote control system can be controlled by external operation input.

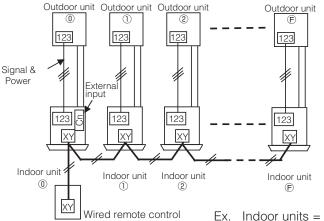

Ex. Indoor units = $(0+1)+(2)+\cdots = 16$ units

	Individual operation	on (Factory default)	All units operation (Local setting)		
	ON	OFF	ON	OFF	
CnT-6 or CnTA	Only the unit directly connected to the remote control can be operated.	Only the unit directly connected to the remote control can be stopped opeartion.	All units in one remote control system can be operated.	All units in one remote control system can be stopped operation.	
Unit ① only U		Unit ① only	Units $\widehat{\mathbb{1}} - \widehat{\mathbb{F}}$	Units ① – ④	


When more than one indoor unit (Max. 16 indoor units) are connected in one wired remote control system:

- (1) With the factory default, external input to CnT-6 or CnTA is effective for only the unit ①.
- (2) When setting "For all unit" (Local setting), all units in one remote control system can be controlled by external input to CnT-6 or CnTA on the indoor unit ①.
- (3) External input to CnT-6 or CnTA on the other indoor unit than the unit (1) is not effective.

(22) Operation permission/prohibition

(In case of adopting card key switches or commercially available timers)

When the indoor function setting of wired remote control for "Operation permission/prohibition" is changed from "Invalid (Factory default)" to "Valid", following control becomes effective.

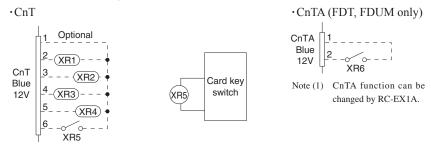

		operation default)	Operation permission/prohibition mode "Valid" (Local setting)		
CnT 6 or	ON	OFF	ON	OFF	
CnT-6 or CnTA	Operation	Stop	Operation permission*1	Operation prohibition (Unit stops)	

*1 **Only the "LEVEL INPUT" is acceptable for external input**, however when the indoor function setting of "Level input (Factory default)" or "Pulse input" is selected by the function for "External input" of the wired remote control, operation status will be changed as follows.

In case of "Level input" setting	In case of "Pulse input" setting
Unit operation from the wired remote control becomes available*(1)	Unit starts operation *(2)


- *(1) In case that "Operation permission/prohibition mode" setting is "Valid" and "External input" setting is "Level input (Factory default)";
 - ① When card key switch is ON (CnT-6 or CnTA ON: Operation permission), start/stop operation of the unit from the wired remote control becomes available.
 - ② When card key switch is OFF (CnT-6 or CnTA OFF: Operation prohibition), the unit stops operation in conjunction with OFF signal, and start/stop operation of the unit from the wired remote control becomes not available.
- *(2) In case that "Operation permission/prohibition mode" setting is "Valid" and "External input" setting is "Pulse input (Local setting)";
 - ① When card key switch is ON (Operation permission), the unit starts operation in conjunction with ON signal. and also start/stop operation of the unit from the wired remote control becomes available.
 - 2 When card key switch is OFF (Operation prohibition), the unit stops operation in conjunction with OFF signal, and start/stop operation of the unit from the wired remote control becomes not available.
- (3) This function is invalid only at "Center mode" setting done by central control.

(a) In case of CnT (1) Operation stop level > CnTA (3) Operation permission/prohibition level

		Operation			Operatio	on			Operation	
CnT① Level input			Sto	р			Sto	р		Stop
	Operatio	on permission								
CnTA③ Operation permission/				0	peration pro	ohibitio	on			
prohibition setting		Operation			Operation	(※)			Operation	
Actual operation			Stop				Stop			Stop
Operation permission/	Operatio	on permission		1	- - 			(Operation permis	sion
prohibition zone				Prohib	ition	Prol	hibition			


(*) CnT level input supersedes CnTA operation prohibition.

(b) In case of CnT ③ Operation permission/prohibition level + CnTA ③ Operation permission/prohibition level

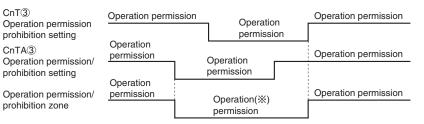


(*) Operation prohibition zone is determined by the OR judgment between CnT Operation prohibition zone and CnTA Operation prohibition zone.

(c) In case of CnT ③ Operation permission/prohibition level > CnTA ② Operation/stop pulse

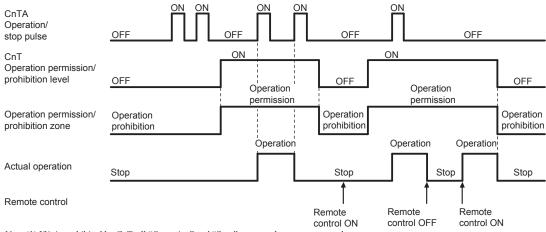

Note (1) If it is prohibited by CnT, all "Operation" and "Stop" commands are not accepted.

(d) In case of CnT 2 Operation/stop pulse + CnTA 3 Operation permission/prohibition level

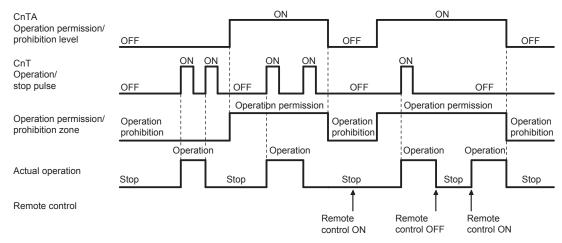

(23) Selection of cooling/heating external input function

- (a) When "External input 1 setting: Cooling/heating" is set for the indoor unit function from remote control, the cooling or heating is selected with CnT-6 or CnTA.
- (b) When the External input 1 method selection: Level input is set for the indoor unit function:
 - CnT-6 or CnTA: OPEN \rightarrow Cooling operation mode
 - CnT-6 or CnTA: CLOSE \rightarrow Heating operation mode
- (c) When the External input 1 method selection: Pulse input is set for the indoor unit function:
- If the external input is changed OPEN \rightarrow CLOSE, operation modes are inverted (Cooling \rightarrow Heating or Heating \rightarrow Cooling).

(d) If the cooling/heating selection signal is given by the external input, the operation mode is transmitted to the remote control.

External input selection	External input method		Operation
External input selection - Cooling/heating selection		External terminal input (CnT or CnTA)	OFF ON OFF ON
	(5) Level	Cooling/heating	Cooling Cooling Heating
		Cooling/heating (Competitive)	Heating Heating Cooling Cooling Auto. cooling.dry mode command 1 1 Heating. auto, heating mode command 1 from remote control 1 Heating. auto, heating mode command 1
	(6) Pulse	External terminal input (CnT or CnTA)	OFF ON OF ON Heating zone Cooling zone 1 After setting "Cooling/heating is selected by the current operation mode. During heating: Set at the heating zone (cooling prohibition zone). During cooling, dry, suto and fan mode: Set at cooling zone theating prohibition zone).
		Cooling/heating	Auto Cooling Cooling
		Cooling/heating (Competitive)	Auto Cooling Heating Cooling 1 Set "Cooling" 1 Auto, cooling, dry mode command 1 Auto, heating mode Heating" "Bhake" by remote control command by remote control

Selection of cooling/heating external input function

Notes (1) Regarding the priority order for combinations of CnT and CnTA, refer to Page 93.

(24) Fan control at heating startup

(a) Start conditions

At the start of heating operation, if the difference of setting temperature and return air temperature is 5°C or higher after the end of hot start control, this control is performed.


- (b) Contents of control
 - (i) Sampling is made at each minute and, when the indoor unit heat exchanger temperature (detected with ThI-R) is 37°C or higher, present number of revolutions of indoor unit fan speed is increased by 10min⁻¹.
 - (ii) If the indoor unit heat exchanger temperature drops below 37°C at next sampling, present number of revolutions of indoor unit fan speed is reduced by 10min⁻¹.

(c) End conditions

Indoor fan speed is reduced to the setting airflow volume when the compressor OFF is established and at 30 minutes after the start of heating operation.

(25) Room temperature detection temperature compensation during heating

With the standard specification, the compressor is turned ON/OFF with the thermostat setting temperature. When the thermostat is likely to turn OFF earlier because the unit is installed at the ceiling where warm air tends to accumulate, the setting can be changed with the wired remote control indoor unit function " \approx \$P OFFSET". The compressor and the heater are turned ON/OFF at one of the setting temperature +3, +2 or +1°C in order to improve the feeling of heating. The setting temperature, however, has the upper limit of 30°C.



(26) Return air temperature compensation

This is the function to compensate the deviation between the detection temperature by the return air temperature thermistor and the measured temperature after installing the unit.

- (a) It is adjustable in the unit of 0.5°C with the wired remote control indoor unit function "RETURN AIR TEMP".
 +1.0°C, +1.5°C, +2.0°C
 -1.0°C, -1.5°C, -2.0°C
- (b) Compensated temperature is transmitted to the remote control and the compressor to control them. Note (1) The detection temperature compensation is effective on the indoor unit thermistor only.

(27) High power operation (RC-EX1A only)

It operates at with the set temp. fixed at 16°C for cooling, 30°C for heating and maximum indoor fan speed for 15 minutes maximum.

(28) Energy-saving operation (RC-EX1A only)

It operates with the setting temperature fixed at 28°C for cooling, 22°C for heating or 25°C for auto. (Maximum capacity is restricted at 80%.)

(29) Warm-up control (RC-EX1A only)

Operation will be started 5 to 60 minutes before use according to the forecast made by the microcomputer which calculates when the operation should be started in order to warm up the indoor temperature near the setting temperature at the setting time of operation start.

(30) Home leave mode (RC-EX1A only)

When the unit is not used for a long period of time, the room temperature is maintained at a moderate leval, avoiding extremely hot or cool temperature.

- (a) Cooling or heating is operated according to the outdoor temperature (factory setting 35°C for cooling, 0°C for heating) and the set temp. (factory setting 33°C for cooling, 10°C for heating)
- (b) Set temp and indoor fan speed can be set by RC-EX1A.

(31) Auto temp. setting (RC-EX1A only)

Setting temperature is adjusted automatically at the adequate temperature the center set temp. is 24°C by correcting the outdoor air temperature.

(32) Fan circulator operation (RC-EX1A only)

When the fan is used for circulation, the unit is operated as follows depending on the setting with the remote control.

- (a) If the invalid is selected with the remote control, the fan is operated continuously during the fan operation. (mormal fan mode)
- (b) If the valid is selected with the remote control, the fan is operated or stopped when on the difference of the remote control temperature sensor and the indoor unit return air temperature sensor becomes bigger than 3°C.

(33) The operation judgment is executed every 5 minutes (RC-EX1A only)

Setting temperature Ts is changed according to outdoor temperature

This control is valid with cooling and heating mode. (NOT auto mode)

- (a) Operate 5 minutes forcedly.
- (b) Setting temperature is adjusted every 10 minutes.
 - (i) Cooling mode.
 - Ts = outdoor temperature offset value
 - (ii) Heating mode.
 - Ts = outdoor temperature offset value
- (c) If the return air temperature lower than 18°C or return air temperature becomes lower than 25°C, unit goes thermo OFF.

(34) Auto fan speed control (RC-EX1A only)

In order to reach the room temperature to the set temperature as quickly as possible, the airflow rate is increased when the set temperature of thermostat differs largely from the return air temperature. According to temperature difference be tureen set temperature and return air temperature, indoor fan tap are controlled automalically.

- Auto 1: Changes the indoor unit fan tap within the range of Hi \leftrightarrow Me \leftrightarrow Lo.
- Auto 2: Changes the indoor unit fan tap within the range of PHi \leftrightarrow Hi \leftrightarrow Me \leftrightarrow Lo.

(35) Indoor unit overload alarm (RC-EX1A only)

If the following condition is satisfied at 30 minutes after starting operation, RC-EX1A shows maintenance code "M07" and the signal is transmitted to the external output (CnT-5).

(a) Receipt of the signal by the external output is indicated by lighting an LED or other prepared on site.

- Cooling, Dry, Auto(Cooling) : Indoor air temperature = Set room temperature by remote control + Alarm temperature difference
- Heating, Auto(Heating) : Indoor air temperature = Set room temperature by remote control Alarm temperature difference Alarm temperature difference is selectable between 5 to 10° C.

(b) If the following condition is satisfied or unit is stopped, the signal is disappeared.

- Cooling, Dry, Auto(Cooling) : Indoor air temperature = Set room temperature + Alarm temperature difference -2°C
- Heating, Auto(Heating) : Indoor air temperature = Set room temperature Alarm temperature difference $+2^{\circ}C$

ON2

47

46

Outdoor air temperature (°C)

40 41


11.4 Operation control function by the outdoor control

(1) **Defrosting operation**


- (a) Starting conditions (Defrosting operation can be started only when all of the following conditions are met.)
 - After start of heating operation 1)

When it elapsed 35 minutes. (Accumulated compressor operation time)

- After end of defrosting operation 2) When it elapsed 35 minutes. (Accumulated compressor operation time)
- Outdoor heat exchanger sensor (TH1) temperature 3) When the temperature has been below -5°C for 3 minutes continuously.
- The difference between the outdoor air sensor temperature and the outdoor heat exchanger sensor temperature 4)
 - The outdoor air temperature $\geq -2^{\circ}$ C : 7°C or higher
 - $-15^{\circ}C \leq$ The outdoor air temperature $< -2^{\circ}C : 4/15 \times$ The outdoor air temperature $+ 7^{\circ}C$ or higher
 - The outdoor air temperature $< -15^{\circ}$ C : -5° C or higher

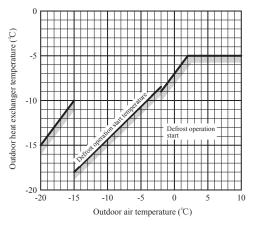

- (b) Ending conditions (Operation returns to the heating cycle when either one of the following is met.)
 - Outdoor heat exchanger sensor (TH1) temperature: 10°C or higher 1)
 - Continued operation time of defrosting \rightarrow For more than 18 minutes. 2)



*Depends on an operation condition, the time can be longer than 7 minutes.

(2) Cooling overload protective control

(a) Operating conditions: When the outdoor air temperature (TH2) has become continuously for 30 seconds at 41°C or more with the compressor running, the lower limit speed of compressor is brought up.

Outdoor air temperature	41°C or more	47°C or more	ON1
Lower limit speed	30 rps	40 rps	OFF 🕇 🕇
			-

(b) Detail of operation


The lower limit of compressor command speed is set to 30 or 40 rps and even if the calculated result becomes lower than that after fuzzy calculation, the speed is kept to 30 or 40 rps. However, when the thermo becomes OFF, the speed is reduced to 0 rps.

- (c) Reset conditions: When either of the following condition is satisfied.
 - 1) The outdoor air temperature is lower than 40°C.
 - 2) The compressor command speed is 0 rps.

(3) Cooling high pressure control

- (a) Purpose: Prevents anomalous high pressure operation during cooling.
- (b) **Detector:** Outdoor heat exchanger sensor (TH1)
- (c) Detail of operation:

Outdoor air temperature(TH2)	Α	В	С
TH2 ≧ 32°C	53	58	63
TH2 < 32°C	51	53	56

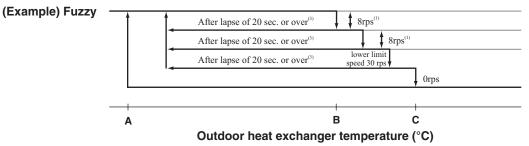

Notes (1) When the outdoor heat exchanger temperature is in the range of A~C°C, the speed is reduced by 8 rps at each 20 seconds.


- (2) When the temperature is 63°C or higher, the compressor is stopped.
- (3) When the outdoor heat exchanger temperature is in the range of A~C°C, if the compressor command speed is been maintained and the operation has continued for more than 20 seconds at the same speed, it returns to the normal cooling operation.

(4) Cooling low outdoor temperature protective control

(a) **Operating conditions:** When the outdoor air temperature (TH2) is C°C or lower continues for 20 seconds while the compressor command speed is other than 0 rps.

(b) Detail of operation:

- 1) The lower limit of the compressor command speed is set to 45 (35) rps and even if the speed becomes lower than 45 (35) rps, the speed is kept to 45 (35) rps. However, when the thermo becomes OFF, the speed is reduced to 0 rps.
- 2) The upper limit of the compressor command speed is set to 60 (75) rps and even if the calculated result becomes higher than that after fuzzy calculation, the speed is kept to 60 (75) rps.
- Note (1) Values in () are for outdoor air temperature is C^oC

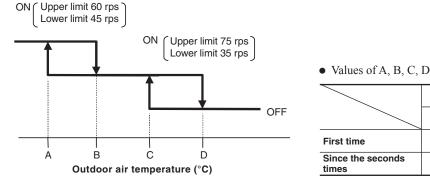

 Outdoor air temp. (°C)

 A
 B
 C
 D

 irst time
 9
 11
 22
 25

 ince the seconds
 16
 19
 25
 28

- (c) Reset conditions: When either of the following condition is satisfied.
 - 1) The outdoor air temperature (TH2) is D °C or higher.
 - 2) The compressor command speed is 0 rps.

(5) Heating high pressure control

- (a) Start condition : When the indoor heart exchanger temperature (ThI-R) has risen to a specified temperature while the compressor is turned on.
- (b) Compressor command speed is controlled according to the zones of indoor heat exchanger temperature as shown by the following table.

	ThI-R <p1< th=""><th colspan="2">P1≦Thl-R<p2< th=""><th>P2≦ThI-R<p3< th=""><th>P3≦Thl-R</th></p3<></th></p2<></th></p1<>		P1≦Thl-R <p2< th=""><th>P2≦ThI-R<p3< th=""><th>P3≦Thl-R</th></p3<></th></p2<>		P2≦ThI-R <p3< th=""><th>P3≦Thl-R</th></p3<>	P3≦Thl-R	
Protection control spe	ed (NP)	N	ormal	Ι	Retention	NP-4rps	NP-8rps
Sampling time	(s)	N	Normal		10	10	10
					Unit:	°C	
NP ThI-R	P 1		P2		P3		
NP<50	45		52		54.5		
50≦NP<115	45		52		57		
115≦NP<120	45-43		52-50	52-50			
120≦NP	43		50	55			

(6) Heating overload protective control


(a) **Operating conditions :** When the outdoor air temperature (TH2) is 13°C or higher continues for 30 seconds while the compressor command speed is other than 0 rps.

(b) Detail of operation

- (i) Taking the upper limit of compressor command speed range at 90(75)rps, if the output speed obtained with the fuzzy calculation exceeds the upper limit, the upper limit value is maintained.
- (ii) The lower limit of compressor command speed is set to 30(40)rps and even if the calculated result becomes lower than that after fuzzy calulation, the speed is kept to 30(40)rps. However, when the thermo becomes OFF, the speed is reduced to 0 prs
- (iii) Inching prevention control is activated and inching prevention control is carried out with the minimum speed set at 30(40)rps.

Note (1) Values in () are for outdoor air temperature at 17°C.

(c) Reset conditions: The outdoor air temperature (TH2) is lower than 11°C

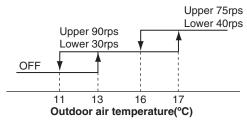


(7) Heating low outdoor temperature protective control

(a) Operating conditions: When the outdoor air temperature (TH2) is 4°C or lower continues for 30 seconds while the

compressor command speed is other than 0 rps.

(b) Detail of operation: The lower limit compressor command speed is change as shown in the figure below.




- (c) Reset conditions: When either of the following condition is satisfied.
 - 1) The outdoor air temperature (TH2) is higher than 6°C.
 - 2) The compressor command speed is 0 rps.

(8) Compressor overheat protection

(a) **Purpose:** It is designed to prevent deterioration of oil, burnout of motor coil and other trouble resulting from the compressor overheat.

(b) Detail of operation

1) Speeds are controlled with temperature detected by the sensor mounted on the discharge pipe.

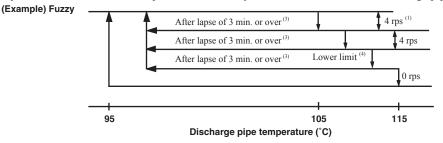

- Notes (1) When the discharge pipe temperature is in the range of 105~115°C, the speed is reduced by 4 rps.
 - (2) When the discharge pipe temperature is raised and continues operation for 20 seconds without changing, then the speed is reduced again by 4 rps.
 (3) If the discharge pipe temperature is in the range of 95~105 even when the compressor command speed is maintained for 3 minutes when the temperature is in the range of 95~105°C, the speed is raised by 1 rps and kept at that speed for 3 minutes. This process is repeated until the command
 - speed is reached.
 - (4) Lower limit speed

Model	Cooling	Heating
Lower Limit Speed	25 rps	32 rps

2) If the temperature of 115°C is detected by the sensor on the discharge pipe, then the compressor will stop immediately. When the discharge pipe temperature drops and the time delay of 3 minutes is over, the unit starts again within 1 hour but there is no start at the third time.

(9) Current safe

- (a) Purpose: Current is controlled not to exceed the upper limit of the setting operation current.
- (b) Detail of operation: Input current to the converter is monitored with the current sensor fixed on the printed circuit board of the outdoor unit and, if the operation current value reaches the limiting current value, the compressor command speed is reduced.

If the mechanism is actuated when the compressor command speed is less than 30 rps, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(10) Current cut

- (a) Purpose: Inverter is protected from overcurrent.
- (b) Detail of operation: Output current from the inverter is monitored with a shunt resistor and, if the current exceeds the setting value, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(11) Outdoor unit failure

This is a function for determining when there is trouble with the outdoor unit during air conditioning.

The compressor is stopped if any one of the following in item (a), (b) is satisfied. Once the unit is stopped by this function, it is not restarted.

- (a) When the input current is measured at 1 A or less for 3 continuous minutes or more.
- (b) If the outdoor unit sends a 0 rps signal to the indoor unit 3 times or more within 20 minutes of the power being turned on.

(12) Serial signal transmission error protection

- (a) **Purpose:** Prevents malfunction resulting from error on the indoor \leftrightarrow outdoor signals.
- (b) Detail of operation: If the compressor is operating and a serial signal cannot be received from the indoor control with outdoor control having serial signals continues for 7 minute and 35 seconds, the compressor is stopped.

After the compressor has been stopped, it will be restarted after the compressor start delay if a serial signal can be received again from the indoor control.

(13) Rotor lock

If the motor for the compressor does not turn after it has been started, it is determined that a compressor lock has occurred and the compressor is stopped.

(14) Outdoor fan motor protection

If the outdoor fan motor has operated at 75 min⁻¹ or under for more than 30 seconds, the compressor and fan motor are stopped.

(15) Outdoor fan control at low outdoor temperature

(a) Cooling

- 1) **Operating conditions:** When the outdoor air temperature (TH2) is 22°C or lower continues for 30 seconds while the compressor command speed is other than 0 rps.
- 2) Detail of operation: After the outdoor fan operates at A speed for 60 seconds; the corresponding outdoor heat exchanger temperature shall implement the following controls.

• Value of A							
	Outdoor fan						
Outdoor temperature > 10°C	2nd speed						
Outdoor temperature ≦ 10°C	1st speed						

a) Outdoor heat exchanger temperature $\leq 21^{\circ}$ C

After the outdoor fan speed drops (down) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is lower than 21°C, gradually reduce the outdoor fan speed by 1 speed. (Lower limit 1st speed)

- b) 21°C < Outdoor heat exchanger temperature ≤ 38°C
 After the outdoor fan speed maintains at A speed for 20 seconds; if the outdoor heat exchanger temperature is 21°C~ 38°C, maintain outdoor fan speed.
- c) Outdoor heat exchanger tempeature > 38°C After the outdoor fan speed rises (up) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is higher than 38°C, gradually increase outdoor fan speed by 1 speed. (Upper limit 3rd speed)

3) Reset conditions: When either of the following conditions is satisfied

- a) The outdoor air temperature (TH2) is 25°C or higher.
- b) The compressor command speed is 0 rps.

(b) Heating

- **1) Operating conditions:** When the outdoor air temperature (TH2) is 4°C or lower continues for 30 seconds while the compressor command speed is other than 0 rps.
- 2) Detail of operation: The outdoor fan is stepped up by 2 speed step at each 20 seconds. (Upper limit 8th speed)
- 3) **Reset conditions:** When either of the following conditions is satisfied
 - a) The outdoor air temperature (TH2) is 6°C or higher.
 - b) The compressor command speed is 0 rps.

(16) Refrigeration cycle system protection

(a) Starting conditions

- 1) When 5 minutes (Heating : 9 minutes) have elapsed after the compressor ON or the completion of the defrost control
- 2) Other than the defrost control
- 3) When, after meeting the conditions of 1) and 2) above, the compressor speed, indoor air temperature (ThI-A) and indoor heat exchanger temperature (ThI-R) have met the conditions in the following table for 5 minutes:

Operation mode	Compressor speed (N)	Indoor air temperature (ThI-A)	Indoor air temperature (ThI-A)/ Indoor heat exchanger temperature (ThI-R)	
Cooling	40≦N	$10 \leq \text{ThI-A} \leq 40$	ThI-A-4 <thi-r< td=""></thi-r<>	
Heating(1)	40≦N	$0 \leq \text{ThI-A} \leq 40$	ThI-R <thi-a+4< td=""></thi-a+4<>	

Notes (1) Except that the fan speed is HI in heating operation, silent mode control and DRED control.

(b) Contents of control

- 1) When the conditions of 1) above are met, the compressor stops.
- 2) Error stop occurs when the compressor has stopped 3 times within 60 minutes.

(c) Resetting condition

When the compressor has been turned OFF

(17) DRED

This air conditioner complies with the DRED (Demand Response Enabling Devices) standard AS/NZS4755.3.1 and supports below demand response modes 1, 2, and 3 (DRM1, 2, and 3). Since the air conditioner limits the electric power or energy by receiving the DRED input signal, the feeling of cooling operation or heating operation may deteriorate during that time. The outdoor unit of this air conditioner is equipped with a terminal block for DRED input and supports ELV (Extra-Low Voltage) complying with AS/NZS60335.1.


In DRED-enabled mode, a small "D" is displayed on the remote control, as shown on the pictures below. When the defrost cycle becomes active during DRED operation, RC-EX series continue to display the DRED active "D" symbol. However, the RC-E series does not; only "DEFROST" is displayed even though DRED mode remains active.

Demand response mode (DRM)	Description of operation in this mode	Remarks
DRM1	Compressor off	
DRM2	Compressor speed control	The air conditioner continues to cool or heat during the demand response event, but the electrical energy consumed by the air conditioner in a half hour period is not more than 50% of the total electrical energy that would be consumed if operating at the rated capacity in a half hour period.
DRM3	Compressor speed control	The air conditioner continues to cool or heat during the demand response event, but the electrical energy consumed by the air conditioner in a half hour period is not more than 75% of the total electrical energy that would be consumed if operating at the rated capacity in a half hour period.

Table AIR CONDITIONER DEMAND RESPONSE MODES

Display in DRED mode


RC-EX Series (From RC-EX1A)

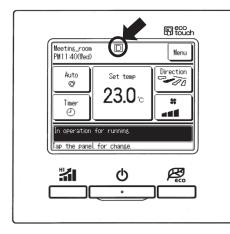

RC-E Series (From RC-E5)



RC-EX Series (From RC-EX1A)

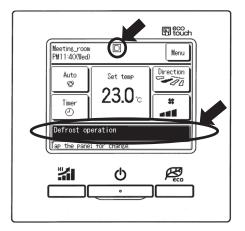

Display in DRED mode during Defrost operation

RC-E Series (From RC-E5)



12. MAINTENANCE DATA

12.1 Diagnosing of microcomputer circuit

(1) Selfdiagnosis function

(a) Check Indicator Table

Whether a failure exists or not on the indoor unit and outdoor unit can be know by the contents of remote control error code, indoor/outdoor unit green LED (power pilot lamp and microcomputer normality pilot lamp) or red LED (check pilot lamp).

(i) Indoor unit

Remote	control	Indoor co	ntrol PCB	Outdoor control PCB	Location of			Reference
Error code	Red LED	Red LED	Green LED	Red LED	trouble	Description of trouble	Repair method	page
		Stays OFF	Keeps flashing	Stays OFF	_	Normal operation	_	_
Mar far di cast car	Stars OFF	Stays OFF	Stays OFF	2-time flash	Indoor unit power supply	Power OFF, broken wire/blown fuse, broken transformer wire	Repair	127
No-indication	Stays OFF	*	Keeps	Store OFF	Remote control wires	Poor connection, breakage of remote control wire * For wire breaking at power ON, the LED is OFF.	Repair	129
		3-time flash	flashing	Stays OFF	Remote control	Defective remote control PCB	Replacement of remote control	128
🙂 WAI INSPE		Stays OFF	Keeps flashing	2-time flash	Indoor-outdoor units connection wire	Poor connection, breakage of indoor-outdoor units connection wire	Repair	129 - 133
			Ũ		Remote control	Improper setting of master and slave by remote control		
			*		Remote control wires (Noise)	Poor connection of remote control signal wire (White) * For wire breaking at power ON, the LED is OFF Intrusion of noise in remote control wi	Repair	
ΕI		Stays OFF	Keeps flashing	Stays OFF	Remote control indoor control PCB	*• Defective remote control or indoor control PCB (defective communication circuit)?	Replacement of remote control or PCB	135
		2-time flash	Keeps flashing	2-time flash	Indoor-outdoor units connection wire	Poor connection of wire between indoor-outdoor units during operation (disconnection, loose connection) Anomalous communication between indoor-outdoor units by noise, etc.	Repair	
		2-time	Keeps	Chara OFF	(Noise)	CPU-runaway on outdoor control PCB	Power reset or Repair	
E5		flash	flashing	Stays OFF	Outdoor control PCB	*• Occurrence of defective outdoor control PCB on the way of power supply (defective communication circuit)?	Replacement of PCB	136
		2-time	Keeps	Stays OFF	Outdoor control PCB	Defective outdoor control PCB on the way of power supply	Replacement	
		flash	flashing		Fuse	• Blown fuse		
сr		1-time	Keeps	Stays OFF	Indoor heat exchanger tempera- ture thermistor	Defective indoor heat exchanger temperature thermistor (defective element, broken wire, short-circuit) Poor contact of temperature thermistor connector	Replacement, repair of temperature thermistor	137
E6		flash	flashing	Stays OFF	Indoor control PCB	* Defective indoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	157
E 7		1-time	Keeps	Stays OFF	Indoor return air temperature therm- istor	Defective indoor return air temperature thermistor (defective element, broken wire, short-circuit) Poor contact of temperature thermistor connector	Replacement, repair of temperature thermistor	138
	Keeps	flash	flashing		Indoor control PCB	*• Defective indoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	
	flashing				Installation or oper- ating condition	Heating over-load (Anomalously high indoor heat exchanger temperature)	Repair	
<i>E8</i>		1-time flash	Keeps flashing	Stays OFF	Indoor heat exchanger tempera- ture thermistor	Defective indoor heat exchanger temperature thermistor (short-circuit)	Replacement of temperature therm- istor	139
					Indoor control PCB	*• Defective indoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	
					Drain trouble	Defective drain pump (DM), broken drain pump wire, disconnected connector	Replacement, repair of DM	
– –		1-time	Keeps	Storia OEE	Float switch	Anomalous float switch operation (malfunction)	Repair	140
23	E9	flash	flashing	Stays OFF	Indoor control PCB	*• Defective indoor control PCB (Defective float switch input circuit) *• Defective indoor control PCB (Defective DM drive output circuit)?	Replacement of PCB	140
					Option	Defective optional parts (At optional anomalous input setting)	Repair	
<u>E ID</u>	2	Stays OFF	Keeps flashing	Stays OFF	Number of con- nected indoor units	When multi-unit control by remote control is performed, the number of units is over	Repair	141
EIT		Keeps flashing	Keeps flashing	Stays OFF	Address setting error	Address setting error of indoor units	Repair	142
	-	1(2)-time	Keeps	Stays OFF	Fan motor	Defective fan motor	Replacement, repair	143
E 16	1	flash	flashing	Suyson	Indoor power PCB	Defective indoor power PCB	Replacement	145
<u>E 18</u>		1-time flash	Keeps flashing	Stays OFF	Address setting error	•Address setting error of master and slave indoor units	Repair	144
E 19		1-time flash	Keeps flashing	Stays OFF	Indoor control PCB	Improper operation mode setting	Repair	145

Remote	control	Indoor co	ntrol PCB	Outdoor control PCB	Location of trouble	Description of trouble	Repair method	Reference page
Error code	Red LED	Red LED	Green LED	Red LED		Description of itotable	nepair method	
<u></u>		1(2)-time	Keeps	Stays OFF	Fan motor	Indoor fan motor rotation speed anomaly	Replacement, repair	146
בכט	flash flashing Stays OF	Stays OFF	Indoor power PCB	Defective indoor power PCB	Replacement	140		
E51	Keeps flash- ing	1-time flash	Keeps flashing	Stays OFF	Panel switch detection	Defective panel switch operation (FDT only)	Repair	147
E28		Stays OFF	Keeps flashing	Stays OFF	Remote control temperature thermistor	Broken wire of remote control temperature thermistor	Repair	148

Note (1) Normal indicator lamp (Indoor, outdoor units: Green) extinguishes (or lights continuously) only when CPU is anomalous. It keeps flashing in any trouble other than anomalous CPU.

(2) * mark in the Description of trouble means that, in ordinary diagnosis, it cannot identify the cause definitely, and, if the trouble is repaired by replacing the part, it is judged consequently that the replaced part was defective.

(ii) Outdoor unit

Remote of	control	Indoor co	ntrol PCB	Outdoor control PCB				Reference	
Error code	Red LED	Red LED	Green LED	Red LED	Location of trouble	Description of trouble	Repair method	page	
					Installation, operation status	Higher outdoor heat exchanger temperature	Repair		
E35		Stays OFF	Keeps flashing	2-time flash	Outdoor heat exchanger temperature sensor	Defective outdoor heat exchanger temperature sensor	Replacement, repair of temperature sensor	149	
					Outdoor control PCB	*• Defective outdoor control PCB (Defective temperature sensor input circuit)?	Replacement of PCB		
					Installation, operation status	Higher discharge temperature	Repair		
E 36		Stays OFF	Keeps flashing	5-time flash	Discharge pipe temperature sensor	Defective discharge pipe temperature sensor	Replacement, repair of temperature sensor	150	
					Outdoor control PCB	*• Defective outdoor control PCB (Defective temperature sensor input circuit)?	Replacement of PCB		
E37		Stays OFF	Keeps	8-time flash	Outdoor heat exchanger temperature sensor	Defective outdoor heat exchanger temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	151	
			masning		Outdoor control PCB	*• Defective outdoor control PCB (Defective temperature sensor input circuit)?	Replacement of PCB		
E 38		Stays OFF	Keeps	8-time flash	Outdoor air temperature sensor	Defective outdoor air temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	152	
	flashing	flashing		Outdoor control PCB	*• Defective outdoor control PCB (Defective temperature sensor input circuit)?	Replacement of PCB			
E 3 9	Keeps flashing	Stays OFF	Keeps 8-time flag	· · · · · · · · · · · · · · · · · · ·	8-time flash	Discharge pipe temperature sensor	Defective discharge pipe temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	153
	nasining		flashing		Outdoor control PCB	*• Defective outdoor control PCB (Defective temperature sensor input circuit)?	Replacement of PCB		
E4D		Stays OFF	Keeps flashing	4-time flash	Installation, operation status	Service valve (gas side) closing operation	Replacement	154•155	
ЕЧ2		Stays OFF	Keeps	1-time flash	Outdoor control PCB, compressor	Current cut (Anomalous compressor over-current)	Replacement of PCB	155•156	
			flashing		Installation, operation status	Service valve closing operation	Repair		
ЕЧЛ		Stays OFF	Keeps flashing	2-time flash	Outdoor control PCB	Defective active filter	Repair PCB replacement	157	
ЕЧВ		Stays OFF	Keeps	ON	Fan motor	Defective fan motor	Replacement	158	
			flashing		Outdoor control PCB	Defective outdoor control PCB			
E5 /		Stays OFF	Keeps flashing	1-time flash	Power transistor error (outdoor control PCB)	Power transistor error	Replacement of PCB	159	
E57	- n Keeps	Keeps		Operation status	Shortage in refrigerant quantity	Repair	1.00		
יבם		Stays OFF flashing 2-time flash		Installation status	Service valve closing operation	Service valve opening check	160		
E 58		Stays OFF	Keeps flashing	3-time flash	Overload operation Overcharge Compressor locking	Current safe stop	Replacement	161	
E59		Stays OFF	Keeps flashing	2-time flash	Compressor, outdoor control PCB	Anomalous compressor startup	Replacement	162	
E 6 0		Stays OFF	Keeps flashing	7-time flash	Compressor	Anomalous compressor rotor lock	Replacement	163	

Note (1) * mark in the Description of trouble means that, in ordinary diagnosis, it cannot identify the cause definitely, and, if the trouble is repaired by replacing the part, it is judged consequently that the replaced part was defective.

(iii) Option control in-use

		Indoor co	ontrol PCB	Outdoor control PCB	Description of trouble	
Error code	Red LED	Red LED	Green LED	Red LED	Description of trouble	Repair method
E75	Keeps flashing	Stays OFF	Keeps flashing	Stays OFF	Communication error (Defective communication circuit on the main unit of SC-SL2N-E or SC-SL4-E) ete.	Replacement

(iv) Display sequence of error codes or inspection indicator lamps

Occurrence of one kind of error

Displays are shown respectively according to errors.

Occurrence of plural kinds of error

Section	Category of display
Error code on remote control	• Displays the error of higher priority (When plural errors are persisting)
Red LED on indoor control PCB	E 1×E5>·····>E 10×E32>·····E60
Red LED on outdoor control PCB	• Displays the present errors. (When a new error has occurred after the former error was reset.)

Error detecting timing

Section	Error description	Error code	Error detecting timing
	Drain trouble (Float switch activated)	69	Whenever float switch is activated after 30 second had past since power ON.
	Communication error at initial operation	"''BWAIT'B''	No communication between indoor and outdoor units is established at initial operation.
	Remote control communication circuit error	EI	Communication between indoor unit and remote control is interrupted for mote than 2 minutes continuously after initial communication was established.
Indoor	Communication error during operation	ES	Communication between indoor and outdoor units is interrupted for mote than 2 minutes continuously after initial communication was established.
	Excessive number of connected indoor units by controlling with one remote control	E 10	Whenever excessively connected indoor units is detected after power ON.
	Return air temperature thermistor anomaly	E7	-50°C or lower is detected for 5 seconds continuously within 60 minutes after initial detection of this anomalous temperature.
	Indoor heat exchanger temperature thermistor anomaly	66	-50°C or lower is detected for 5 seconds continuously within 60 minutes after initial detection of this anomalous temperature. Or 70°C or higher is detected for 5 seconds continuously.
	Outdoor air temperature thermistor anomaly	E 38	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature. Or -55°C or lower is detected for 5 seconds continuously within 20 seconds after compressor ON.
	Outdoor heat exchanger temperature thermistor anomaly	637	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature. Or -55°C or lower is detected for 5 seconds continuously within 20 seconds after compressor ON.
	Discharge pipe temperature thermistor anomaly	639	-25°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature.

Error log and reset

Error indicator	Memorized error log	Reset
Remote control display	• Higher priority error is memorized.	• Stop the unit by pressing the ON/OFF
Red LED on indoor control PCB	• Not memorized.	switch of remote controller. • If the unit has recovered from anomaly, it
Red LED on outdoor control PCB	• Memorizes a mode of higher priority.	can be operated.


Resetting the error log

- Resetting the memorized error log in the remote control
 - Holding down "CHECK" button, press "TIMER" button to reset the error log memorized in the remote control.
- Resetting the memorized error log in the indoor unit
- The remote controller transmits error log erase command to the indoor unit when "VENTI" button is pressed while holding down "CHECK" button.

Receiving the command, the indoor unit erase the log and answer the status of no error.

(2) Troubleshooting procedure

When any trouble has occurred, inspect as follows. Details of respective inspection method will be described on later pages.

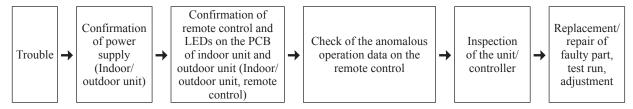

(3) Troubleshooting at the indoor unit

With the troubleshooting, find out any defective part by checking the voltage (AC, DC), resistance, etc. at respective connectors at around the indoor PCB, according to the inspection display or operation status of unit (the compressor does not run, fan does not run, the 4-way valve does not switch, etc.), and replace or repair in the unit of following part.

(a) Replacement part related to indoor PCB's

Control PCB, power supply PCB, temperature thermistor (return air, indoor heat exchanger), remote control switch, transformer and fuse

Note (1) With regard to parts of high voltage circuits and refrigeration cycle, judge it according to ordinary inspection methods.

(b) Instruction of how to replace indoor control PCB

SAFETY PRECAUTIONS
 Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the replacement in order to protect yourself.
 The precautionary items mentioned below are distinguished into two levels, WARNING and CAUTION.
Both mentions the important items to protect your health and safety so strictly follow them by any means.
WARNING Wrong installation would cause serious consequences such as injuries or death.
△ CAUTION Wrong installation might cause serious consequences depending on circumstances.
 After completing the replacement, do commissioning to confirm there are no anomaly.
Replacement should be performed by the specialist.
If you replace the PCB by yourself, it may lead to serious trouble such as electric shock or fire.
Replace the PCB correctly according to these instructions.
Improper replacement may cause electric shock or fire.
Shut off the power before electrical wiring work.
Replacement during the applying the current would cause the electric shock, unit failure or improper running.
It would cause the damage of connected equipment such as fan motor,etc.
 Fasten the wiring to the terminal securely, and hold the cable securely so as not to apply unexpected stress on the terminal.
Loose connections or hold could result in abnormal heat generation or fire.
 Check the connection of wiring to PCB correctly before turning on the power, after replacement.
Defectiveness of replacement may cause electric shock or fire.
CAUTION
 In connecting connector onto the PCB, connect not to deform the PCB. It may cause breakage or malfunction.
 Insert connecter securely, and hook stopper. It may cause fire or improper running.
• Bundle the cables together so as not to be pinched or be tensioned. It may cause malfunction or electric shock for disconnection or deformation.

(i) Model FDT, FDUM series

1) Control PCB

Replace and set up the PCB according to this instruction.

1 Set to an appropriate address and function using switch on PCB.

Coloct	the come	ootting	with the	romoved	
Select	the same	setting	with the	removed	PUB.

	item	switch	Content of control Plural indoor units control by 1 remote control				
	Address	SW2					
	Test run	SW7-1	—	Normal			
	Test full	5007-1	0	Operation check/drain motor test run			
_	O:ON -:OFF						

② Set to an appropriate capacity using the model selector switch(SW6).

Select the same capacity with the PCB removed from the unit.

SW6	-1	-2	-3	-4	SW6
50V		_	0	- T	ON
60V	0	0	0	_	
		•	-		




Example setting fro 50V

3 Replace the PCB

- 1. Exchange PCB after detaching all connectors connected with the PCB.
- 2. Fix the PCB so as not to pitch the wiring.
- 3. Connect connectors to the PCB. Match the wiring connector to the connector color on the PCB and connect it.

④ Control PCB

Parts mounting are different by the kind of PCB.

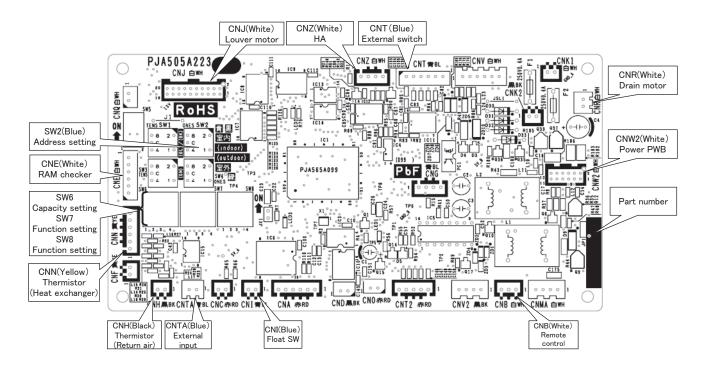

PSB012D990B

2) Power PCB


This PCB is a general PCB. Replace the PCB according to this instruction.

① Replace the PCB

- 1. Unscrew terminal of the wiring(yellow/green) connected to Terminal block (CNWO) from the box.
- 2. Replace the PCB only after all the wirings connected to the connector are removed.
- 3. Fix the board such that it will not pinch any of the wires.
- 4. Reconnect the wirings to the PCB. Wiring connector color should match with the color of connector of the PCB.
- 5. Screw back the terminal of wiring, that was removed in 1.


2 Power PCB

Parts mounting are different by the kind of PCB.

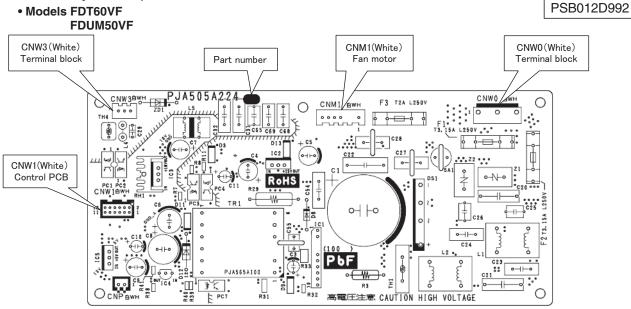

Model FDUM60VF

PSB012D993

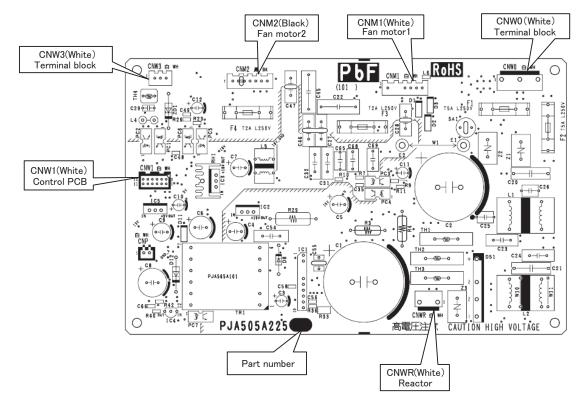

(ii) Model FDTC series

1) Control PCB


Replace and set up the PCB according to this instruction.

1 Set to an appropriate address and function using switch on PCB.

Select	elect the same setting with the removed PCB.						
	item	switch	Content of control				
	Address	SW2	Plural indoor units control by 1 remote control				
	Test run	SW7-1	— Normal				
	restruit	3007-1	0	Operation check/drain motor test run			
O:ON -:OFF							

② Set to an appropriate capacity using the model selector switch(SW6).

Select the same capacity with the PCB removed from the unit.



③ Replace the PCB

SW6

50VF


1. Fix the PCB so as not to pitch the cords.

2. Connect connectors to the PCB. Connect a cable connector with the PCB connector of the same color.

3.Do not pass CPU surrounding about wirings.

④ Control PCB

Parts mounting are different by the kind of PCB.

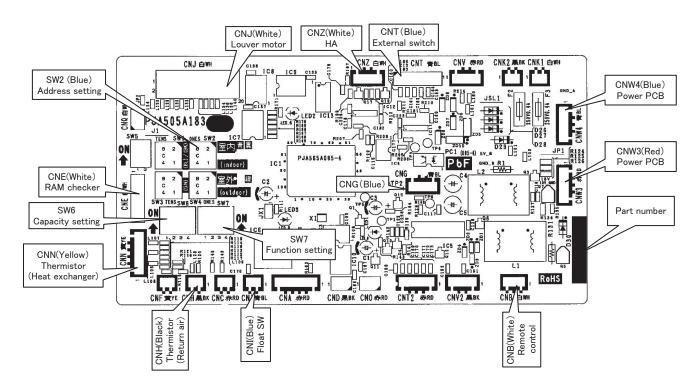

PSB012D953A

2) Power PCB


This PCB is a general PCB. Replace the PCB according to this instruction.

① Replace the PCB (refer to right dwg.)

Let the wiring (red and blue) pass beneath the (yellow/green) wiring and bind together with

nd.

- 1. Unscrew terminal of the wiring(yellow/green) soldered to PCB from the box.
- 2. Cut the band that binds the wiring (red and blue) from connector CNW1 and CNW2, and the wiring (yellow/green) from PCB (T2/T3). (Note 1) (However, do not cut the band that binds only the red and blue wirings.)
- 3. Replace the PCB only after all the wirings connected to the connector are removed.
- 4. Fix the board such that it will not pinch any of the wires.
- 5. Reconnect the wirings to the PCB. Wiring connector color should match with the color of connector of the PCB. (Note 2)
- 6. Let the wiring (red and blue) pass beneath the (yellow/green) wiring and bind together with band.
- 7. Screw back the terminal of wiring (yellow/green) from PCB(T1, T2/T3), that was removed in 1.
- In that case, do not place the crimping part of the wiring under the PCB.
- (Note 1): It might not be applicable on some models.
- (Note 2): After replacing PCB, connection between capacitor assy and connector CNP is no longer needed.

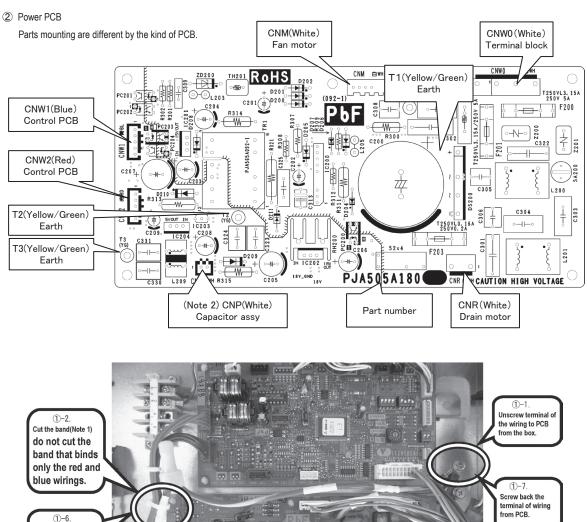

00.00

14/14

•DIP switch setting list

Switches	Description			efault setting	Remarks
SW2	Address No. setting at plural indoor	units control by 1 R/C	0		0-F
SW5-1	Reserved		OFF		keep OFF
SW5-2	Reserved		OFF		keep OFF
SW6-1					
SW6-2	Model selection			nodel	See table 1
SW6-3	Model selection		As per model		See table 1
SW6-4					
SW7-1	Test run, Drain motor	Normal*/Test run	OFF	Normal	
SW7-2	Reserved		OFF		keep OFF
SW7-3	Powerful mode	Valid*/Invalid	ON	Valid	
SW7-4	Reserved		OFF		keep OFF
SW8-1	Reserved		OFF		keep OFF
SW8-2	Reserved		OFF		keep OFF
SW8-3	Reserved		OFF		keep OFF
SW8-4	Reserved		OFF		keep OFF
JSL1	Superlink terminal spare	Normal*/switch to spare	With		

* Default setting

Table 1: Indoor unit model selection with SW6-1-SW6-4

	0: OFI	F 1:ON
	50V	60V
SW6-1	1	1
SW6-2	0	1
SW6-3	1	1
SW6-4	0	0

(4) Check of anomalous operation data with the remote control

(a) In case of RC-EX1A remote control

[Operating procedure]

- ① On the TOP screen, touch the buttons in the order of "Menu" → "Next" → "Service & Maintenance" → "Service password"
 → "Set" → "Error display" → "Error history".
- 2 When only one indoor unit is connected to the remote control, followings will be displayed.
 - 1. When there is any anomaly: "Loading. Wait a while" is displayed, followed by the operation data at the occurrence of anomaly.
 - Contents of display
 - Error code
 - Number and data item
 - 2. When there is no anomaly: "No anomaly" is displayed, and this mode is terminated.
- ③ When two or more indoor units are connected to the remote control, followings will be displayed.
 - 1. When there is any anomaly: If the unit having anomaly is selected on the "Select IU" screen, "Loading. Wait a while" is displayed, followed by the operation data at the occurrence of anomaly.
 - Contents of display
 - Indoor unit No.
 - Error code
 - Number and data item
 - 2. When there is no anomaly: "No anomaly" is displayed, ant this mode is terminated.

Note (1) When the number of connected units cannot be shown in a page, select "Next".

④ If you press [RUN/STOP] button, the display returns to the TOP screen.

◎ If you touch "Back" button on the way of setting, the display returns to the last precious screen.

Note (1) When two remote controls are used to control indoor units, the check of anomaly operation data can be made on the master remote control only. (It cannot be operated from the slave remote control.)

Anomaly operation data (Corresponding data may not be provided depending on models. Such items will not be displayed.)

Number		Data Item
01	*	(Operation Mode)
02	SET TEMP°	(Set Temperature)
03	RETURN AIR`c	(Return Air Temperature)
04	🖻 SENSOR ඊ	(Remote Control Thermistor Tempeature)
05	THI-R1C	(Indoor Heat Exchanger Thermistor / U Bend)
06	THI-R2_c	(Indoor Heat Exchanger Thermistor /Capillary)
07	THI-R3c	(Indoor Heat Exchanger Thermistor /Gas Header)
08	I/U FANSPEED	(Indoor Unit Fan Speed)
09	DEMANDHz	(Frequency Requirements)
10	ANSWERHz	(Response Frequency)
11	I/UEEVP	(Pulse of Indoor Unit Expansion Value)
12	TOTAL I/U RUN	H (Total Running Hours of The Indoor Unit)
21	OUTDOORc	(Outdoor Air Temperature)
22	THO-R1ზ	(Outdoor Heat Exchanger Thermistor)
23	THO-R2&	(Outdoor Heat Exchanger Thermistor)
24	COMPHz	(Compressor Frequency)
25	HPMPa	(High Pressure)
26	LPMPa	(Low Pressure)
27	TdC	(Discharge Pipe Temperature)
28	COMP BOTTOM ඊ	(Comp Bottom Temperature)
29	CTAMP	(Current)
30	TARGET SHた	(Target Super Heat)
31	SH`C	(Super Heat)
32	TDSHC	(Discharge Pipe Super Heat)
33	PROTECTION No	(Protection State No. of The Compressor)
34	0/UFANSPEED	(Outdoor Unit Fan Speed)
35	63H1	(63H1 On/Off)
36	DEFROST	(Defrost Control On/Off)
37	TOTAL COMP RUN_	H (Total Running Hours of The Compressor)
38	0/U EEV1P	(Pulse of The Outdoor Unit Expansion Valve EEVC)
39	0/U EEV2P	(Pulse of The Outdoor Unit Expansion Valve EEVH)

(b)	In case of RC-E5 remote control	Number		Data Item
Op	peration data can be checked with remote control unit operation.	01	*	(Operation Mode)
	Press the CHECK button.	02	<u>SET TEMP`c</u>	(Set Temperature)
0		03	RETURN AIR&	(Return Air Temperature)
	The display change " OPER DATA ♥"	04	🗏 🗏 🔁 🖾 🖪 🖾	(Remote Control Thermistor Tempeature)
2	Press the O (SET) button while "OPER DATA To is displayed.	05	THI-RI`c	(Indoor Heat Exchanger Thermistor / U Bend)
3	When only one indoor unit is connected to remote control,	06	THI-R2ზ	(Indoor Heat Exchanger Thermistor /Capillary)
٢	•	07	THI-R3c	(Indoor Heat Exchanger Thermistor /Gas Header)
	"DATALDADING" is displayed (blinking indication during data loading).	08	I/U FANSPEED	(Indoor Unit Fan Speed)
	Next, operation data of the indoor unit will be displayed. Skip to step ⑦.	09	DEMANDHz	(Frequency Requirements)
a	When plural indoor units is connected, the smallest address number of	10	ANSWERHz	(Response Frequency)
Ð	•	11	I/UEEVP	(Pulse of Indoor Unit Expansion Value)
	indoor unit among all connected indoor unit is displayed.	12	TOTAL I /U RUN	H (Total Running Hours of The Indoor Unit)
	[Example]:	21	OUTDOORC	(Outdoor Air Temperature)
	" \bigcirc \$ SELECT I/U" (blinking 1 seconds) → "I/U000 ▲ " blinking.	22	THO-R1C	(Outdoor Heat Exchanger Thermistor)
		23	THO-R2C	(Outdoor Heat Exchanger Thermistor)
(5)	Select the indoor unit number you would like to have data displayed	24	COMPHz	(Compressor Frequency)
	with the \blacktriangle \bigtriangledown button.	25 26	HPMPa LPMPa	(High Pressure)
6	Determine the indoor unit number with the O (SET) button.	20	itriilittiine Tdiilittii	(Low Pressure) (Discharge Pipe Temperature)
٢		27	TUC COMP BOTTOMと	
	(The indoor unit number changes from blinking indication to	20	CTAMP	(Current)
	continuous indication)	30	TARGET SH&	(Target Super Heat)
	" [/U000 " (The address of selected indoor unit is blinking for 2	31	SHC	(Super Heat)
		32	TDSH °	(Discharge Pipe Super Heat)
	seconds.)	33	PROTECTION No	(Protection State No. of The Compressor)
	\downarrow	34	0/UFANSPEED	(Outdoor Unit Fan Speed)
	"[]ATALOADING" (A blinking indication appears while data loaded.)	35	63H1	(63H1 On/Off)
	Next, the operation data of the indoor unit is indicated.	36	DEFROST	(Defrost Control On/Off)
		37	TOTAL COMP RUN_	H (Total Running Hours of The Compressor)
\bigcirc	Upon operation of the $ \blacktriangle $ $ \nabla $ button, the current operation data is	38	0/U EEV 1P	(Pulse of The Outdoor Unit Expansion Valve EEVC)
	displayed in order from data number 01.	39	0/UEEV2P	(Pulse of The Outdoor Unit Expansion Valve EEVH)

The items displayed are in the above table.

*Depending on models, the items that do not have corresponding data are not displayed.

- To display the data of a different indoor unit, press the AIR CON NO. button, which allows you to go back to the indoor unit selection screen.
- ON/OFF button will stop displaying data.


Pressing the *(RESET)* button during remote control unit operation will undo your last operation and allow you to go back to the previous screen.

 \odot If two (2) remote controls are connected to one (1) inside unit, only the master control is available for trial operation and confirmation of operation data. (The slave remote control is not available.)

(5) Inverter checker for diagnosis of inverter output


Checking method

- (a) Setup procedure of checker.
 - 1) Power OFF (Turn off the breaker).
 - 2) Remove the terminal cover of compressor and disconnect the wires (U, V, W) from compressor.
 - 3) Connect the wires U (Red), V (White) and W (Black) of the checker to the terminal of disconnected wires (U, V, W) from compressor respectively.
- (b) Operation for judgment.
 - 1) Power ON and start check operation on cooling or heating mode.
 - 2) Check ON/OFF status of 6 LED's on the checker.
 - 3) Judge the PCB by ON/OFF status of 6 LED's on the checker.

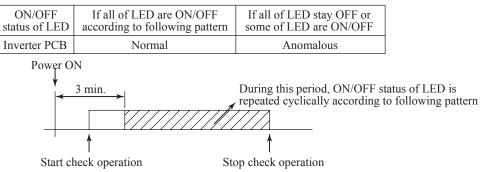

d) Stop check operation within about 2minutes after starting check operation.




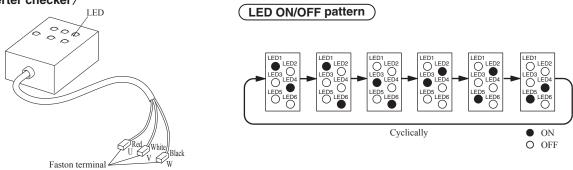

Connect to the terminal of the wires which are disconnected from compressor.

(6) Outdoor unit control failure diagnosis circuit diagram

Check point of outdoor unit

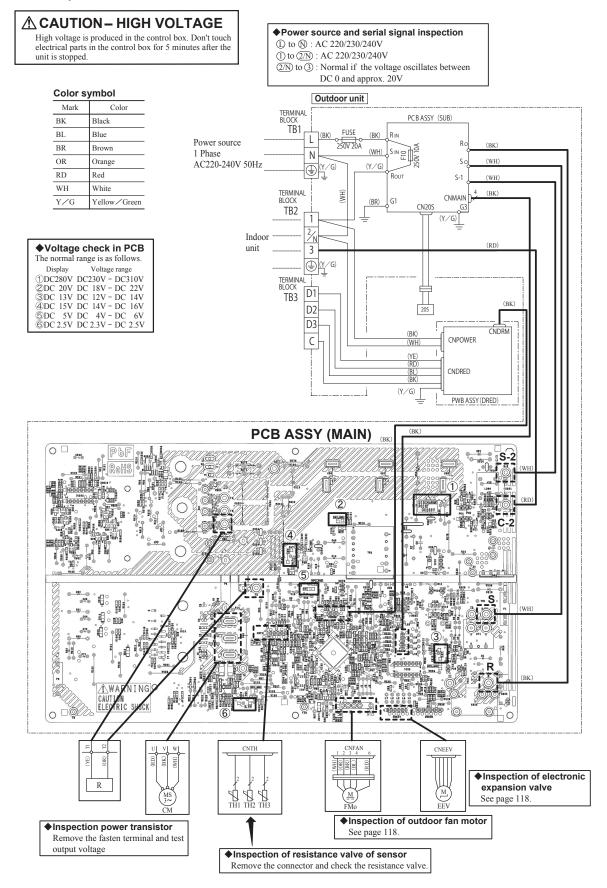


① Inspection of electronic expansion valve

Electronic expansion valve operates for approx. 10 seconds after the power on, in order to determine its aperture. Check the operating sound and voltage during the period of time. (Voltage cannot be checked during operation in which only the aperture change occurs.)

(i) If it is heard the sound of operating electronic expansion valve, it is almost normal.

(ii) If the operating sound is not heard, check the output voltage.



Approx. DC 5 V is detected for 10 seconds after the power on.

(iii) If voltage is detected, the outdoor PCB is normal.

(iv) If the expansion valve does not operate (no operating sound) while voltage is detected, the expansion valve is defective.

Inspection of electronic expansion valve as a separate unit

Measure the resistance between terminals with an analog tester.

Measuring point	Resistance when normal
1-6	
1-5	$46 \pm 4\Omega$
1-4	(at 20°C)
1-3]

2 Outdoor unit fan motor check procedure

• When the outdoor unit fan motor error is detected, diagnose which of the outdoor unit fan motor or outdoor PCB is defective.


• Diagnose this only after confirming that the indoor unit is normal.

- (i) Outdoor PCB output check
 - 1) Turn off the power.
 - 2) Disconnect the outdoor unit fan motor connector CNFAN.

3) When the indoor unit is operated by inserting the power supply plug and pressing (ON) the backup switch for more than 5 seconds, if the voltage of pin No. ② in the following figure is output for 30 seconds at 20 seconds after turning "ON" the backup switch, the outdoor PCB is normal but the fan motor is defective.

If the voltage is not detected, the outdoor PCB is defective but the fan motor is normal.

Note (1) The voltage is output 3 times repeatedly. If it is not detected, the indoor unit displays the error message.

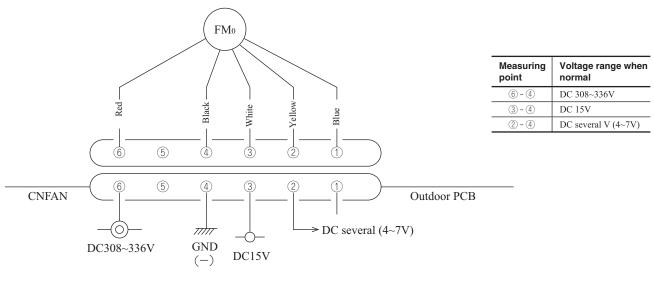

(ii) Fan	motor	resistance	check

Measuring point	Resistance when normal
6 - 4 (Red - Black)	20 M Ω or higher
3 - 4 (White - Black)	20 k Ω or higher

Notes (1) Remove the fan motor and measure it without power connected to it.

(2) If the measured value is below the value when the motor is normal, it means that the fan motor is faulty.


12.2 Troubleshooting flow (1) List of troubles


Remote controller display	Description of trouble	Reference page
None	Operates but does not cool.	120
None	Operates but does not heat.	121
None	Earth leakage breaker activated	122
None	Excessive noise/vibration (1/3)	123
None	Excessive noise/vibration (2/3)	124
None	Excessive noise/vibration (3/3)	125
None	Louver motor failure (FDT, FDTC series)	126
None	Power supply system error (Power supply to indoor control PCB)	127
None	Power supply system error (Power supply to remote control)	128
INSPECT I/U	INSPECT I/U (When 1 or 2 remote controls are connected)	129
INSPECT I/U	INSPECT I/U (Connection of 3 units or more remote controls)	130
௹WAIT௹	Communication error at initial operation	131-133
None	No display	134
E1	Remote control communication circuit error	135
E5	Communication error during operation	136
E6	Indoor heat exchanger temperature thermistor anomaly	137
E7	Return air temperature thermistor anomaly	138
E8	Heating overload operation	139
E9	Drain trouble	140
E10	Excessive number of connected indoor units (more than 17 units) by controlling with one remote control	141
E11	Address setting error of indoor units	142
E16	Indoor fan motor anomaly	143
E18	Address setting error of moster and slave indoor unit	144
E19	Indoor unit operation check, drain motor check setting error	145
E20	Indoor fan motor rotation speed anomaly	146
E21	Defective panel switch operation (FDT only)	147
E28	Remote control temperature thermistor anomaly	148
E35	Cooling overload operation	149
E36	Discharge pipe temperature error	150
E37	Outdoor heat exchanger temperature thermistor anomaly	151
E38	Outdoor air temperature thermistor anomaly	152
E39	Discharge pipe temperature thermistor anomaly	153
E40	Service valve (gas side) closing operation	154
E42	Current cut	155 · 156
E47	Active filter voltage error	157
E48	Outdoor fan motor anomaly	158
E51	Power transistor anomaly	159
E57	Insufficient refrigerant amount or detection of service valve closure	160
E58	Current safe stop	161
E59	Compressor startup failure	162
E60	Anomalous compressor rotor lock	163


M

(2) Troubleshooting


ſ	Error code	LED	Green	Red	Content
	Remote control: None	Indoor	Keeps flashing	Stays OFF	Operates but does not cool
		Outdoor	_	Stays OFF	Operates but does not coor
L					

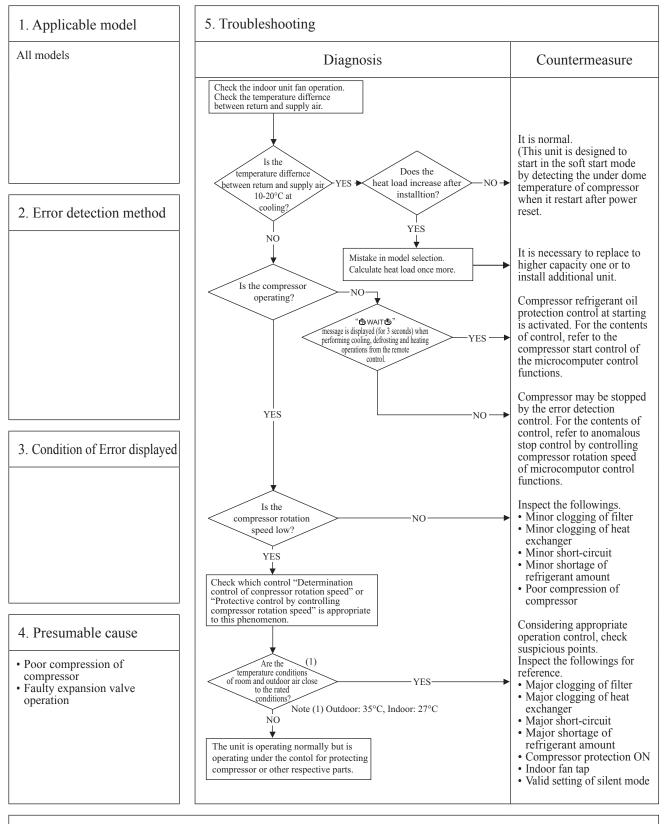

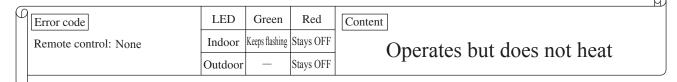


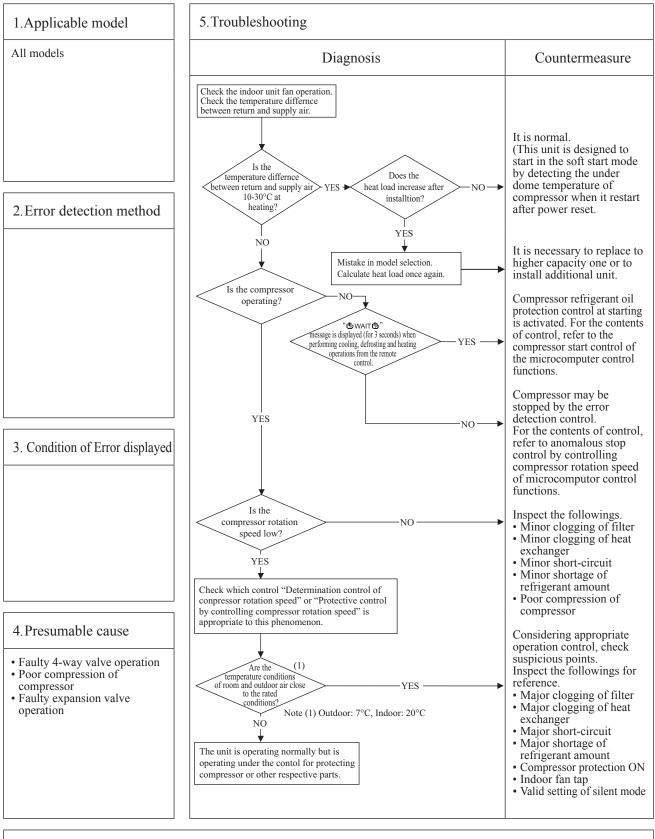


_						Ð
β	Error code	LED	Green	Red	Content	
	Remote control: None	Indoor	Stays OFF	Stays OFF	Earth leakage breaker activated	
		Outdoor	_	Stays OFF	Larth leakage breaker activated	J
L	<u>, </u>					

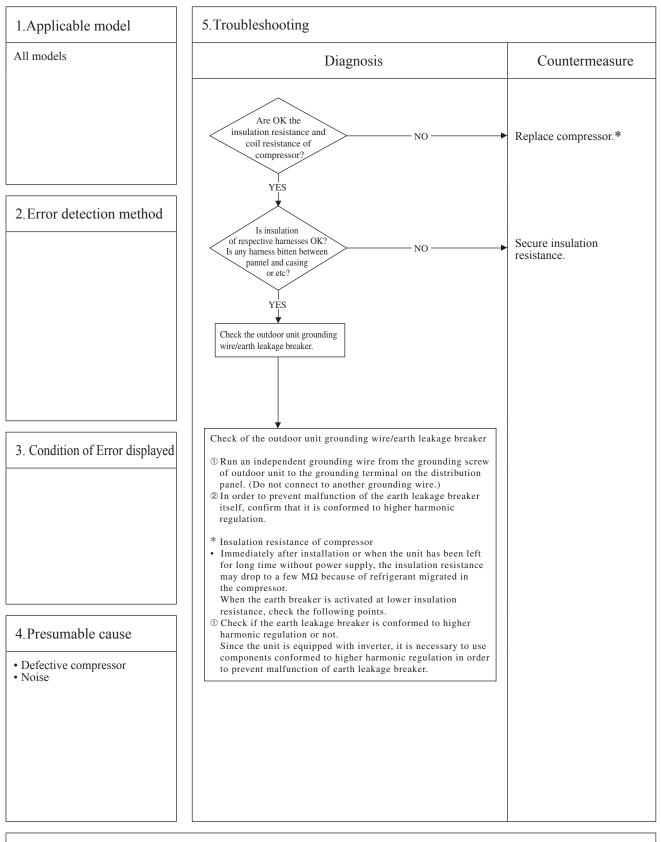


ſ	Error code	LED	Green	Red	Content
	Remote control: None	Indoor	-	-	Excessive noise/vibration (1/3)
		Outdoor	_	-	
L					

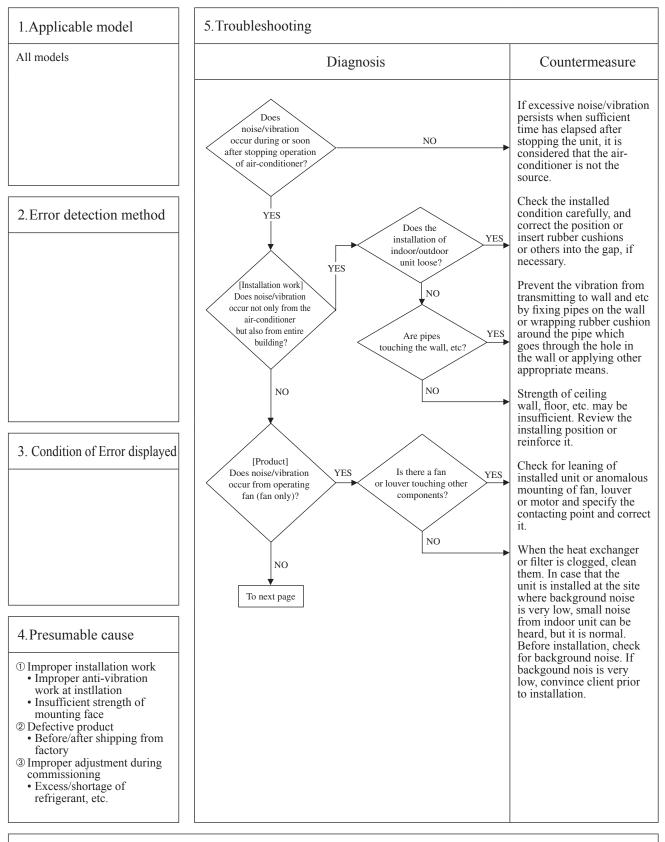


						Ð
ſ	Error code	LED	Green	Red	Content	
	Remote control: None	Indoor	_	-	Excessive noise/vibration (2/3)	
		Outdoor	-	-	Excessive noise/vioration (2/5)	J
L)					

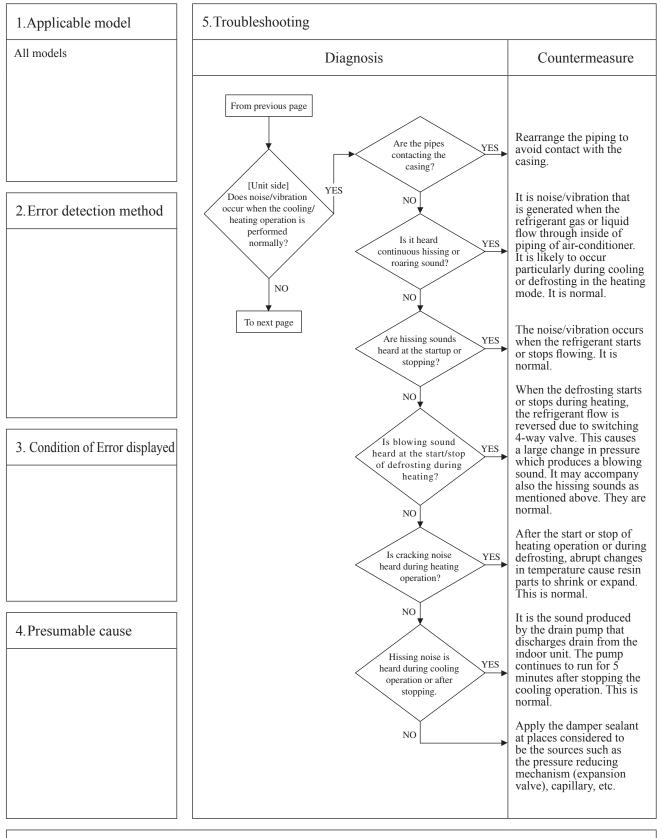

						A
F	Error code	LED	Green	Red	Content	
	Remote control: None	Indoor	_	-	Excessive noise/vibration (3/3)	
		Outdoor	_	-		
l						

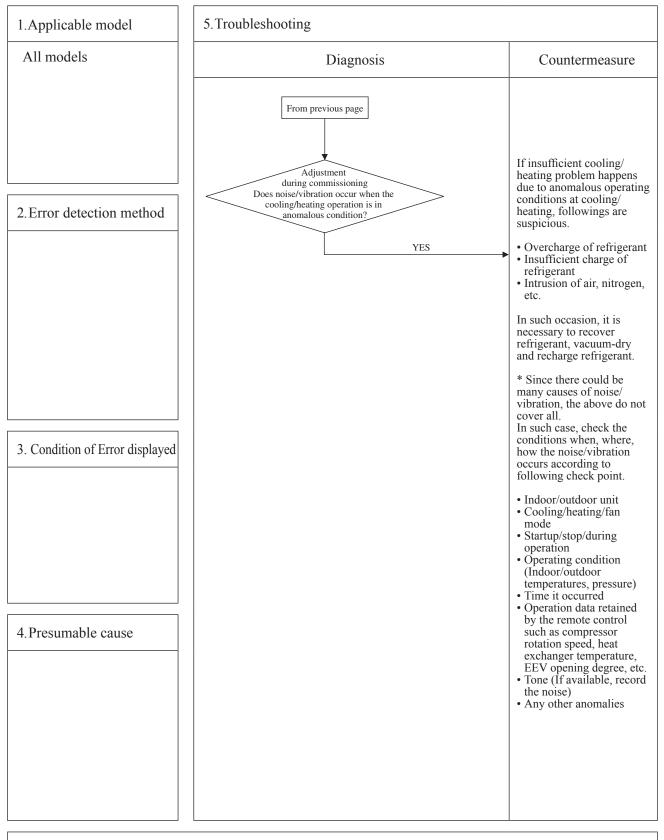


_							0
μ	Error code	LED	Green	Red	Content	Louver motor failure	
	Remote control: None	Indoor	Keeps flashing	Stays OFF			
		Outdoor	_	Stays OFF		(FDT, FDTC series)	J
L)						

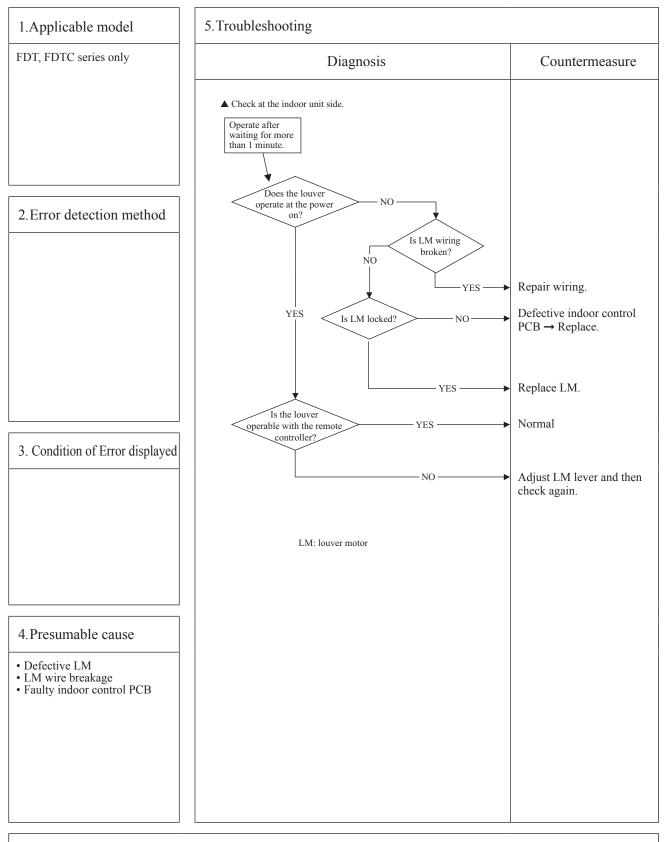


G

ſ	Error code	LED	Green	Red	Content Power supply system error
	Remote control: None	Indoor	Stays OFF	Stays OFF	(Dewer supply to indeer central DCD)
	1	Outdoor	—	2-time flash	(Power supply to indoor control PCB)

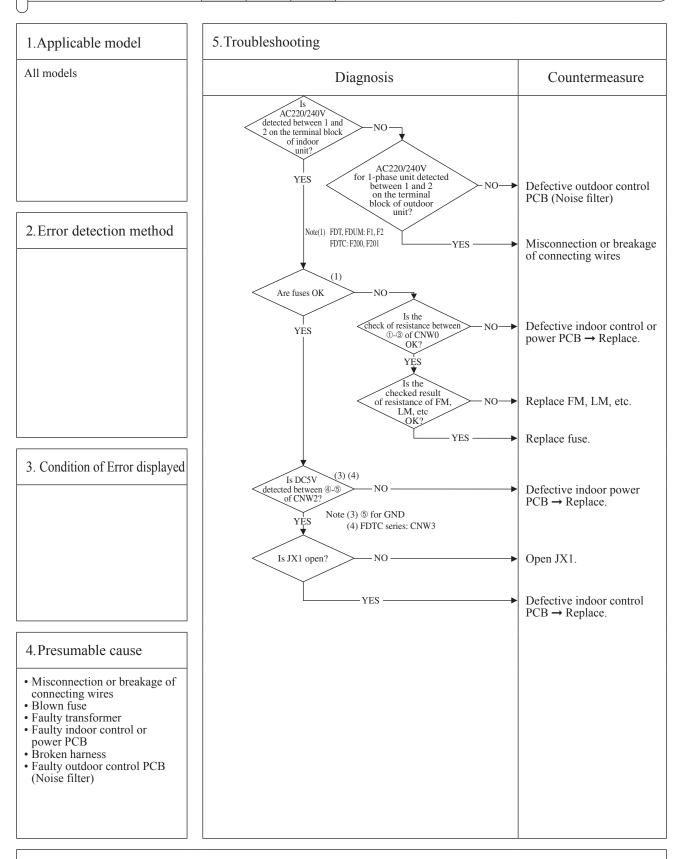


					G
f	Error code	LED	Green	Red	Content Dower supply system error
	Remote control: None	Indoor	Keeps flashing	3-time flash	Power supply system error (Power supply to remote control)
		Outdoor	_	Stays OFF	(I ower suppry to remote control)

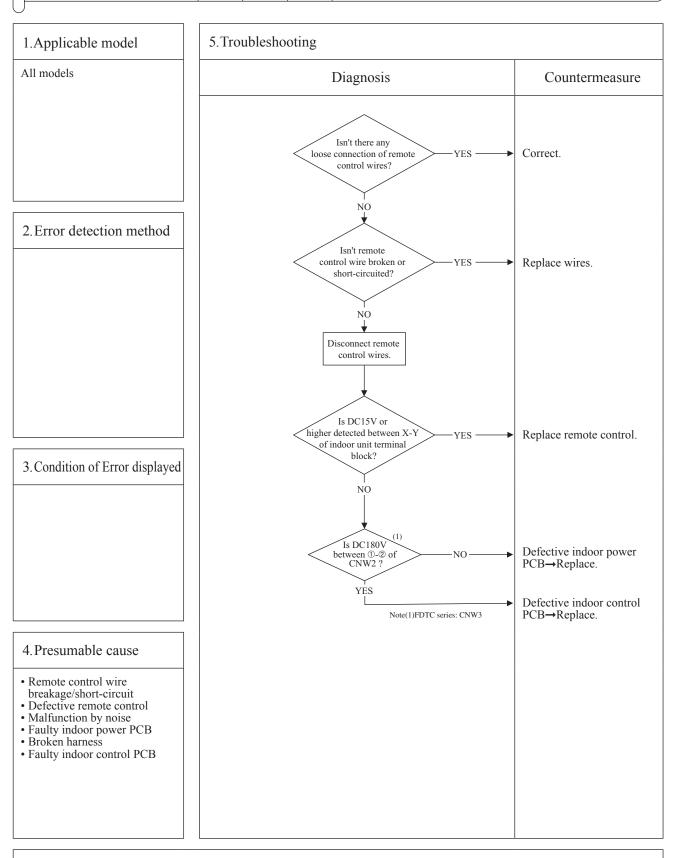



M

P	Error code	LED	Green	Red	Content
	Remote control: INSPECT I/U	Indoor	Keeps flashing	Stays OFF	
		Outdoor	_	2-time flash	(When 1 or 2 remote controls are connected)
L	J				

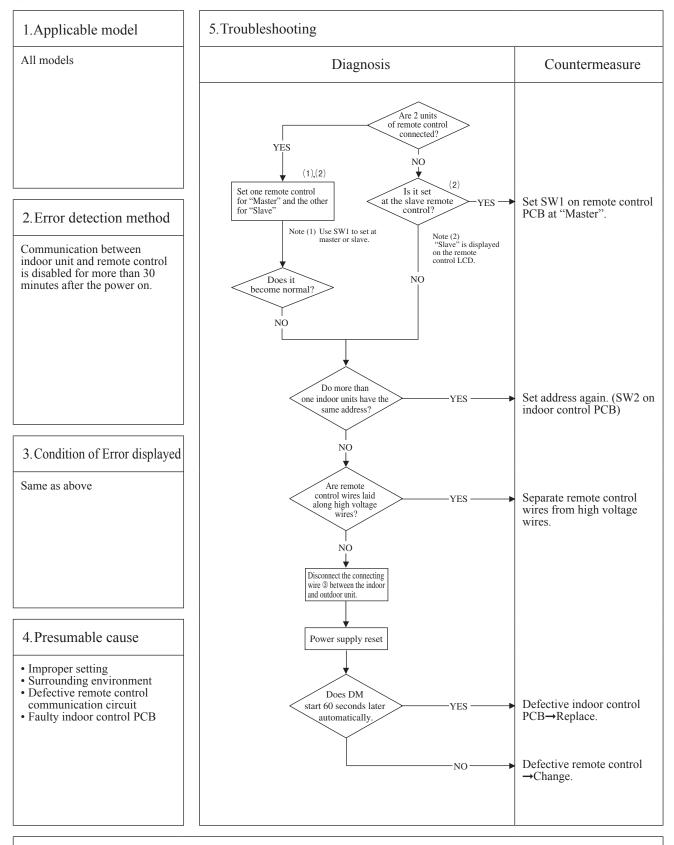

Note: If any error is detected 30 minutes after displaying "OWAITO" on the remote control, the display changes to "INSPECT I/U".




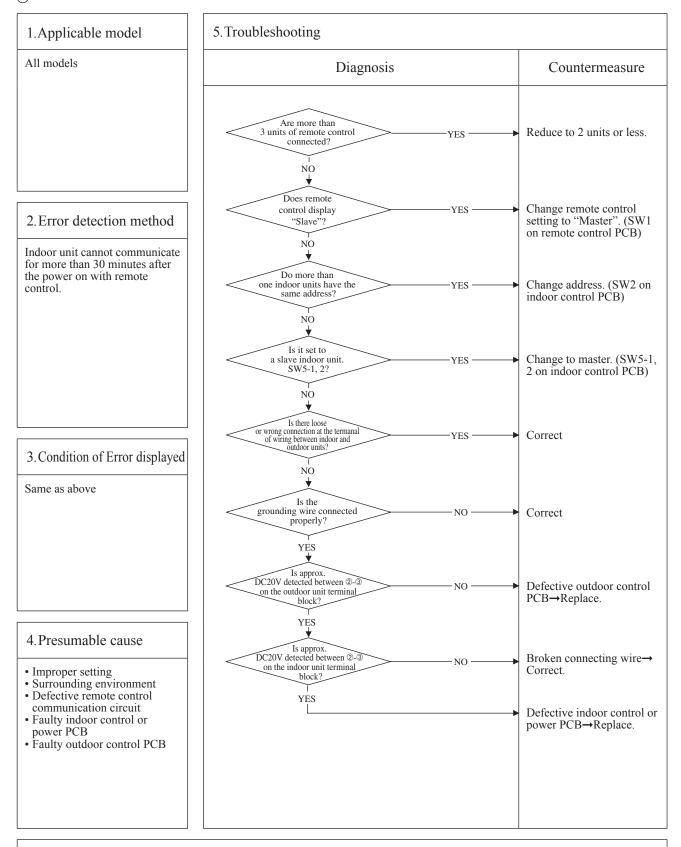



Note: If any error is detected 30 minutes after displaying ""WAIT"" on the remote control, the display changes to "INSPECT I/U".

G


β	9[Error code	LED	Green	Red	Content
		Remote control: 🖲 WAIT 🖱	Indoor	Keeps flashing	Stays OFF	Communication error at
			Outdoor		2-time flash	initial operation $(1/3)$

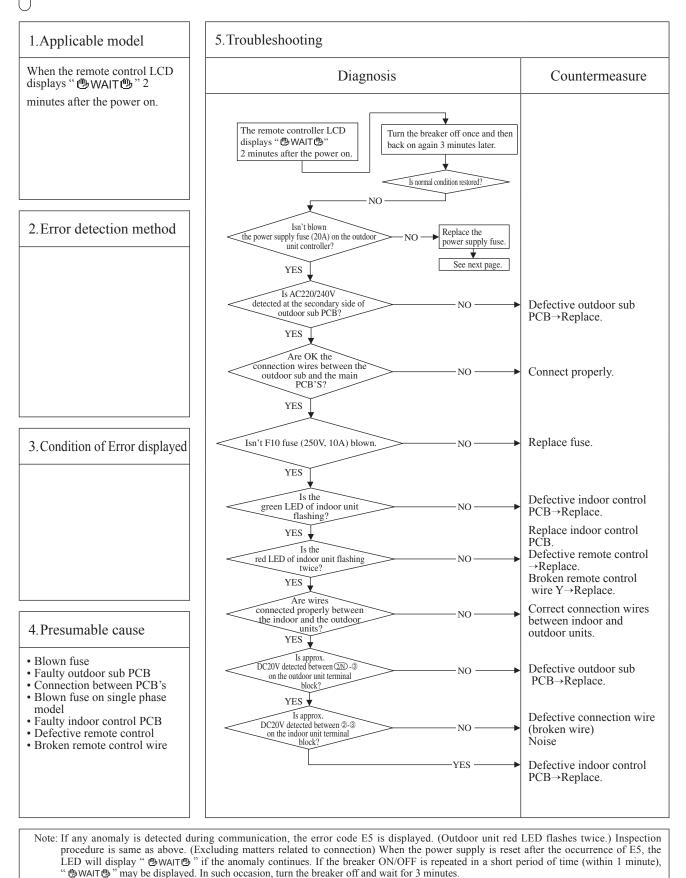




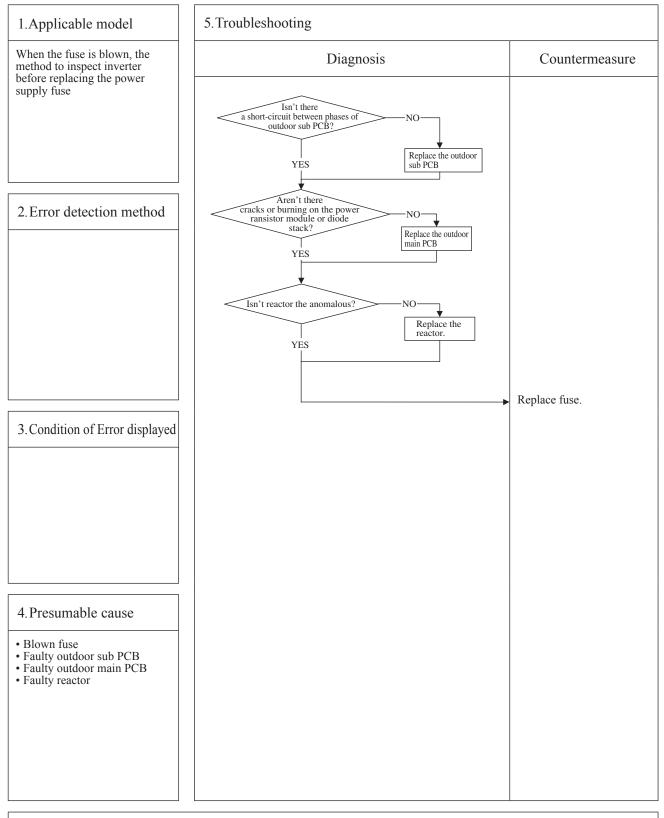


						Ð
μ	Error code	LED	Green	Red	Content	
	Remote control: "WAIT"	Indoor	Keeps flashing	Stays OFF	Communication error at	
		Outdoor	-	2-time flash	initial operation $(3/3)$	
L)					_

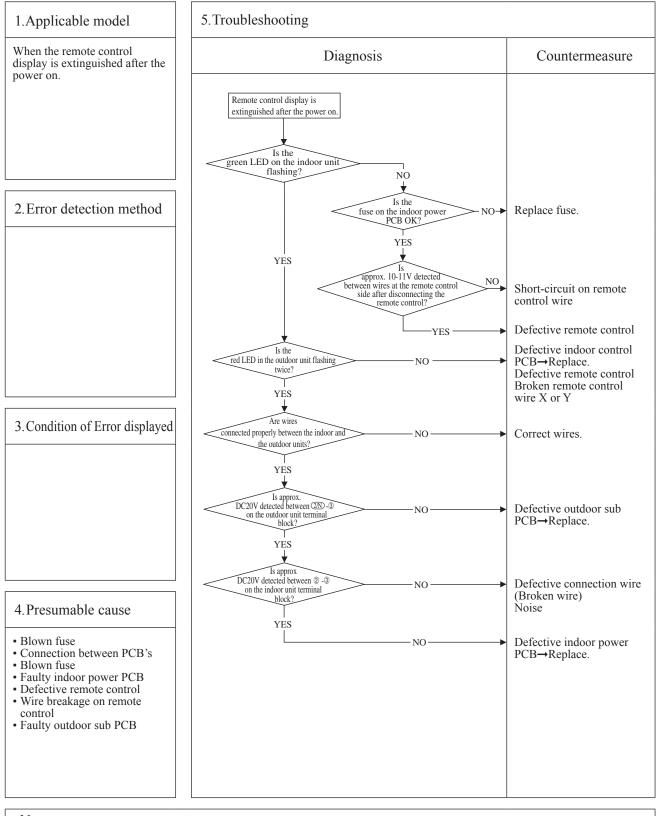


					<u> </u>
μ	Error code	LED	Green	Red	Content
	Remote control: None	Indoor	Stays OFF	Stays OFF	No display
		Outdoor	_	Stays OFF	
L)				

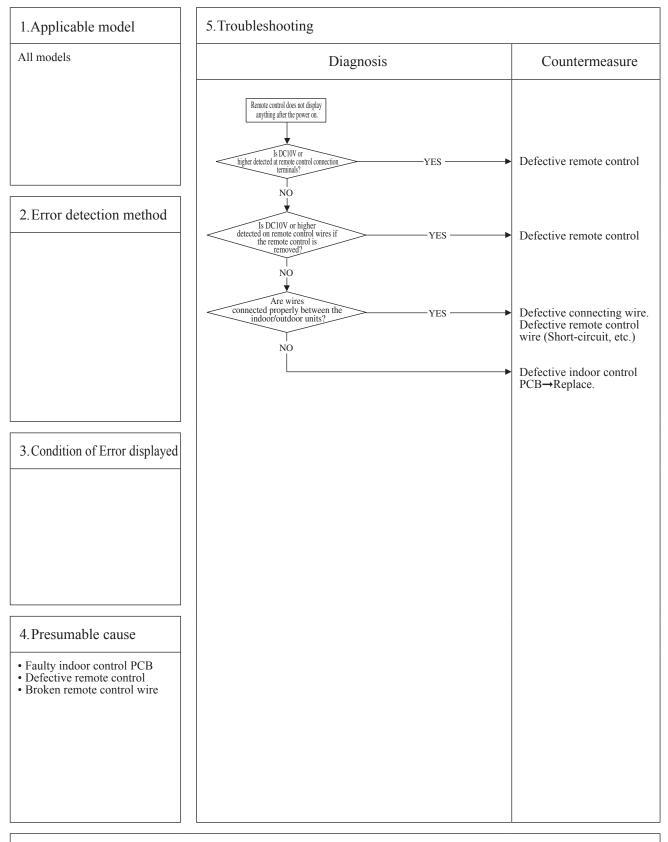

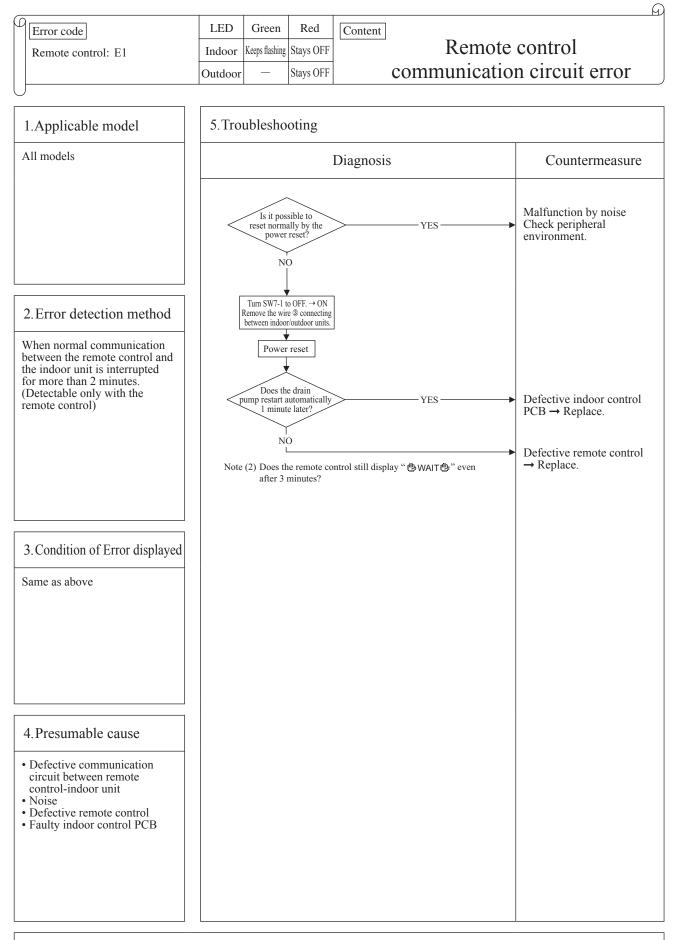



Note: If the indoor unit cannot communicate normally with the remote control for 180 seconds, the indoor unit PCB starts to reset automatically.


_					
ρ	Error code	LED	Green	Red	Content
	Remote control: E5	Indoor	Keeps flashing	2-time flash	Communication error during operation
		Outdoor	_	See below	communeation error during operation
L.					

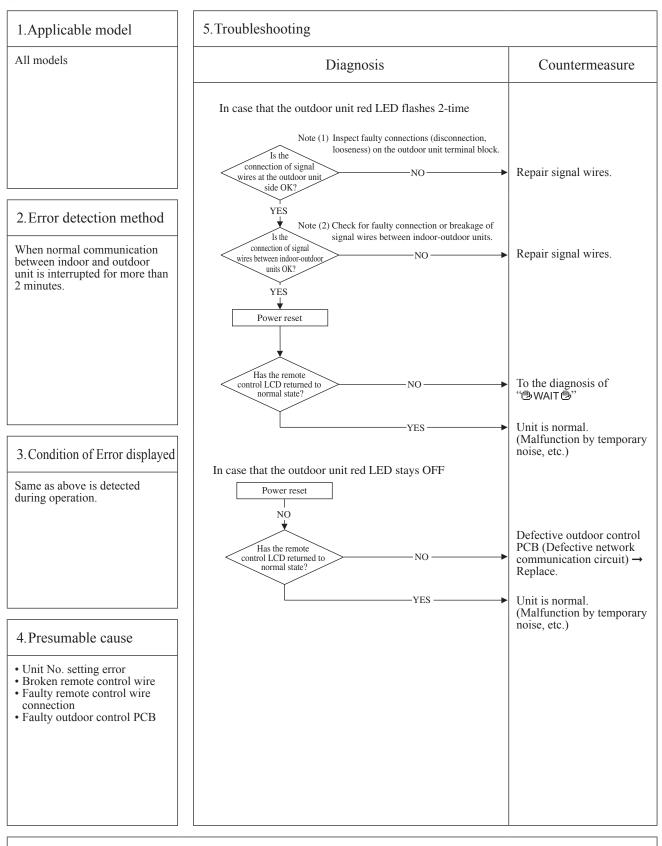



Note: Pressing the pump-down switch cancels communications between indoor and outdoor unit so that "communication error-E5" is displayed on indoor unit and remote control, but it is normal.




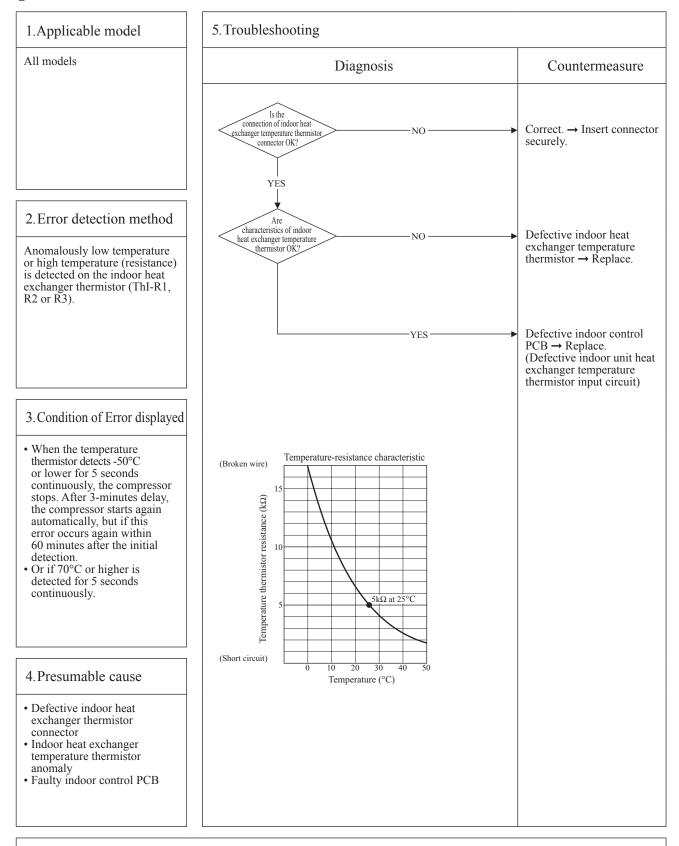

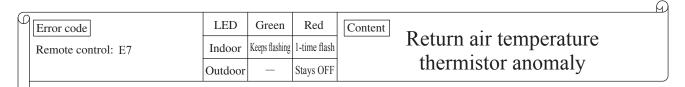

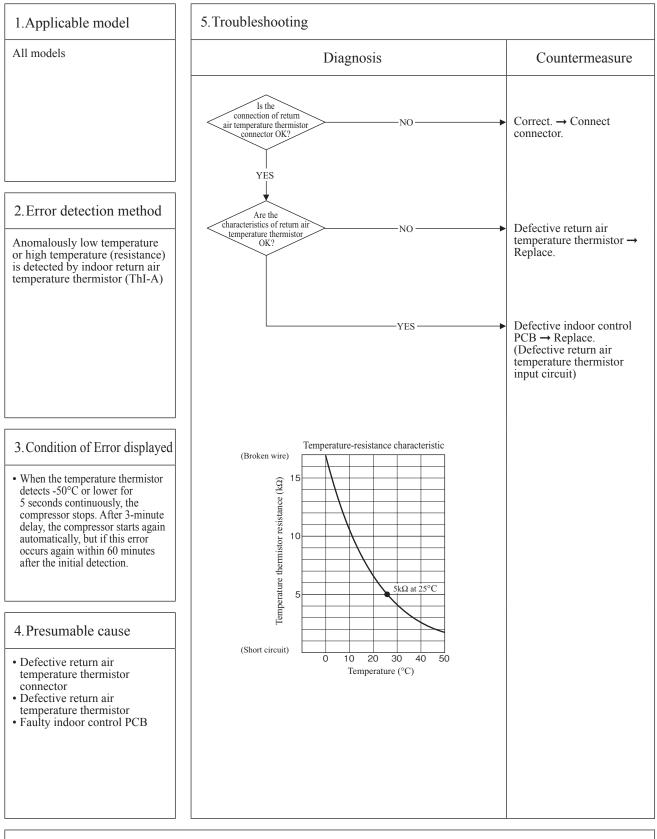




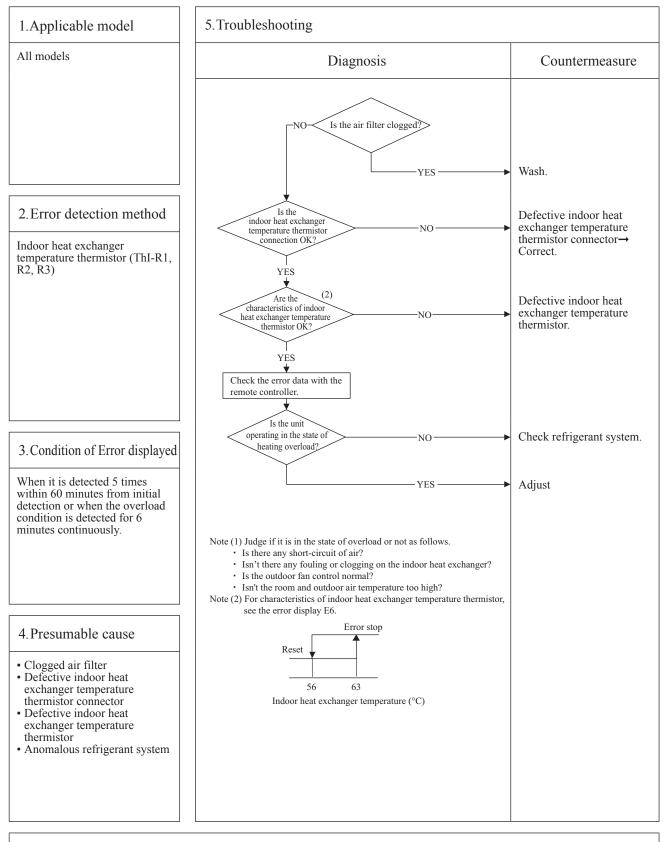


Note: During heating operation; After starting compressor, compressor rotation speed is decreased by detecting indoor heat exchanger temperature (ThI-R) in order to control high pressure.


	_					G
ſ	9	Error code	LED	Green	Red	Content
		Remote control: E9	Indoor	Keeps flashing	1-time flash	Drain trouble
			Outdoor	_	Stays OFF	

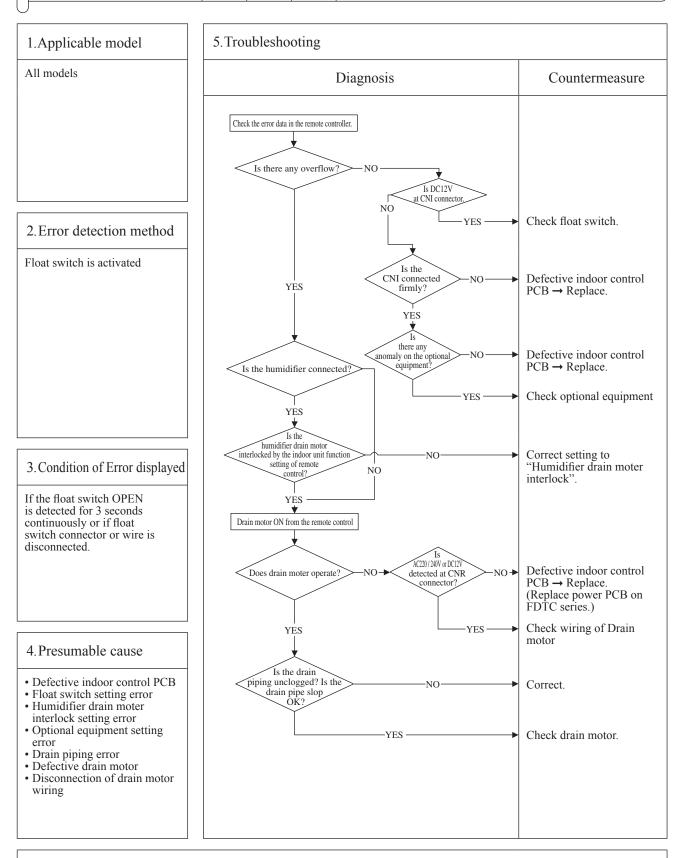


Note: When this error occurred at power ON, disconnection of wire or connector of the float switch is suspected. Check and correct it (or replace it, if necessary).


_					Q
ſ	Error code	LED	Green	Red	Content Excessive number of connected
	Remote control: E10	Indoor	Keeps flashing	Stays OFF	
		Outdoor	_	Stays OFF	by controlling with one remoto control
L	<u>, </u>				

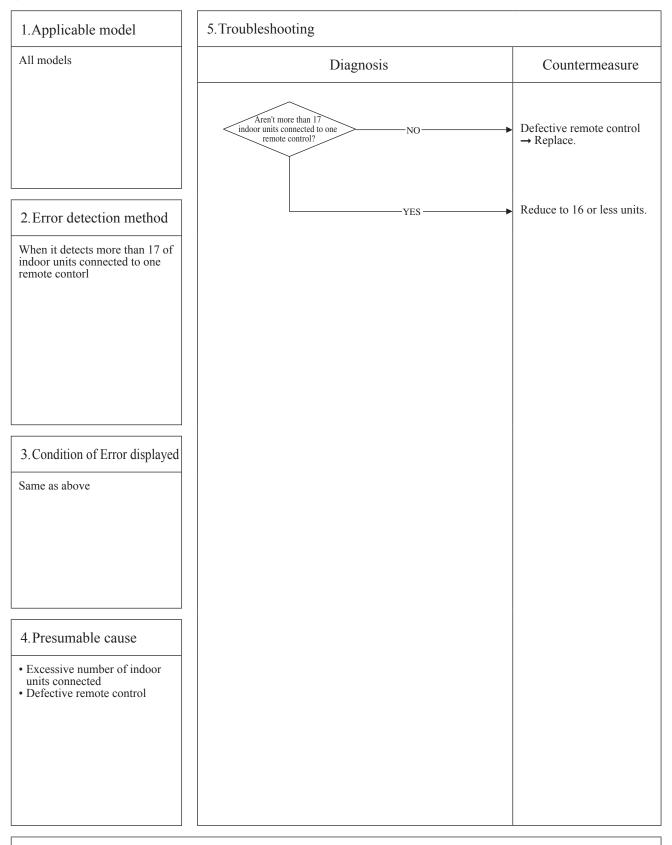




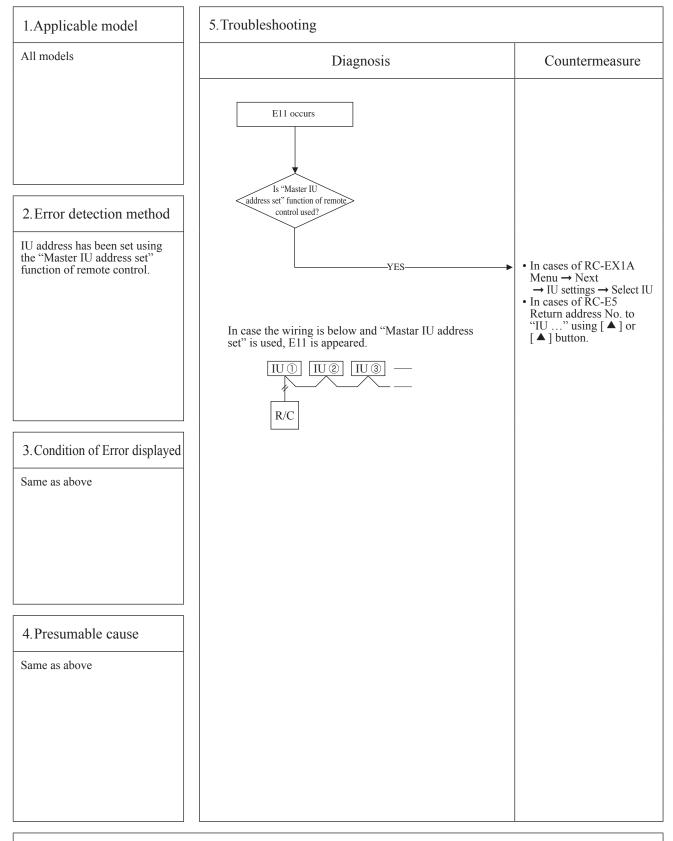



'14 • PAC-T-205

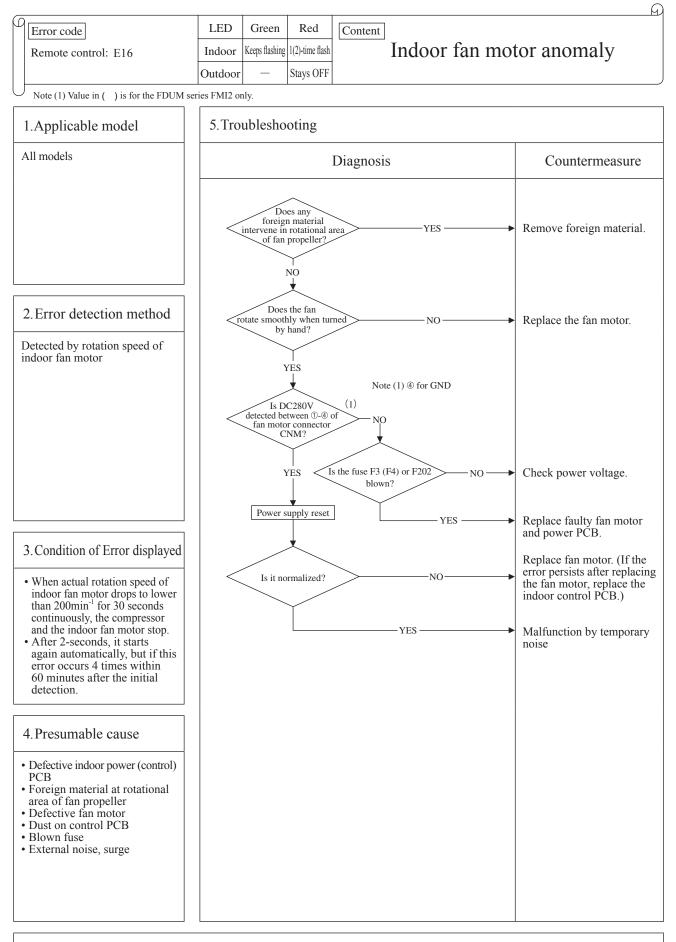


_						Ð
ſ	Error code	LED	Green	Red	Content	
	Remote control: E18	Indoor	Keeps flashing	1-time flash	Address setting error of	
		Outdoor	—	Stays Off	master and slave indoor units	
L)					

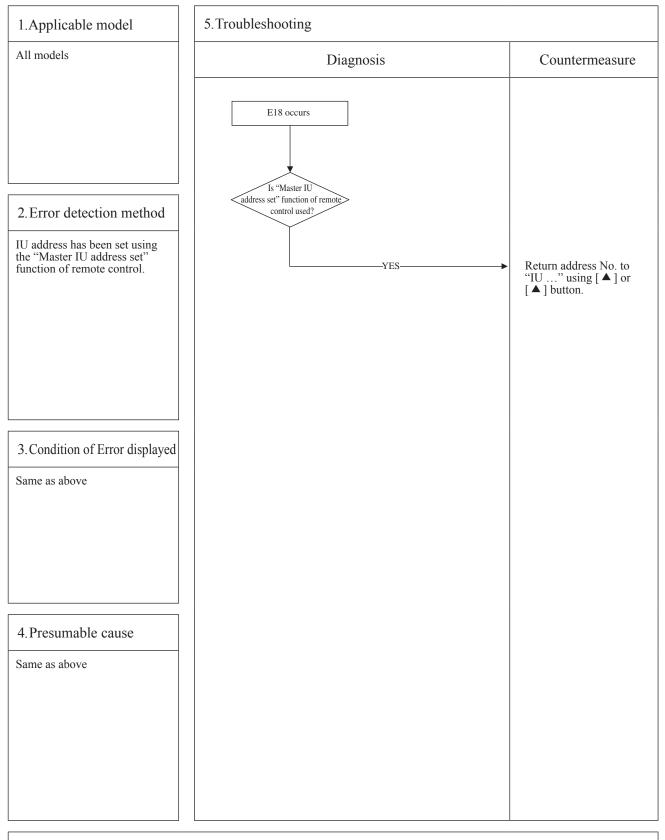




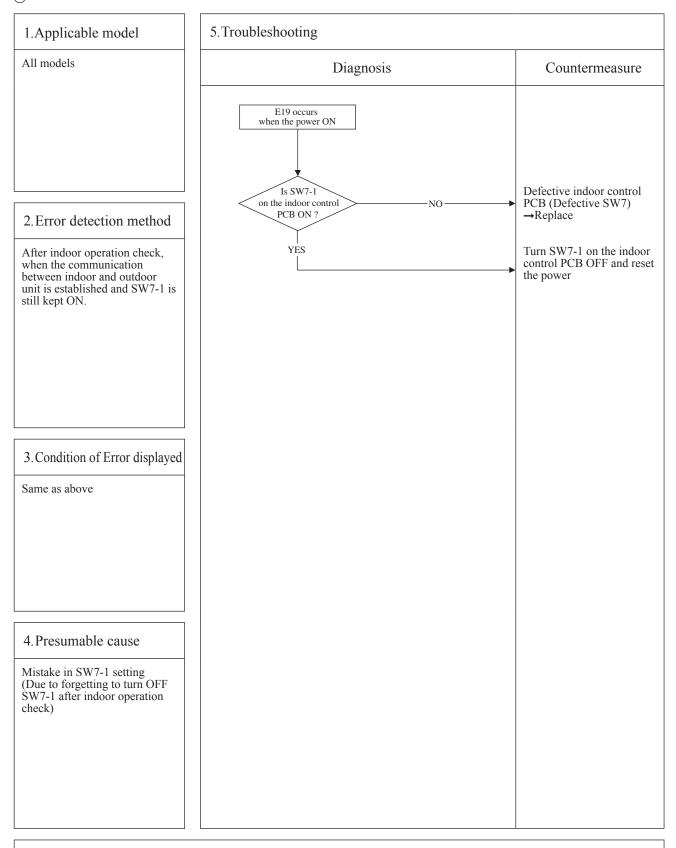


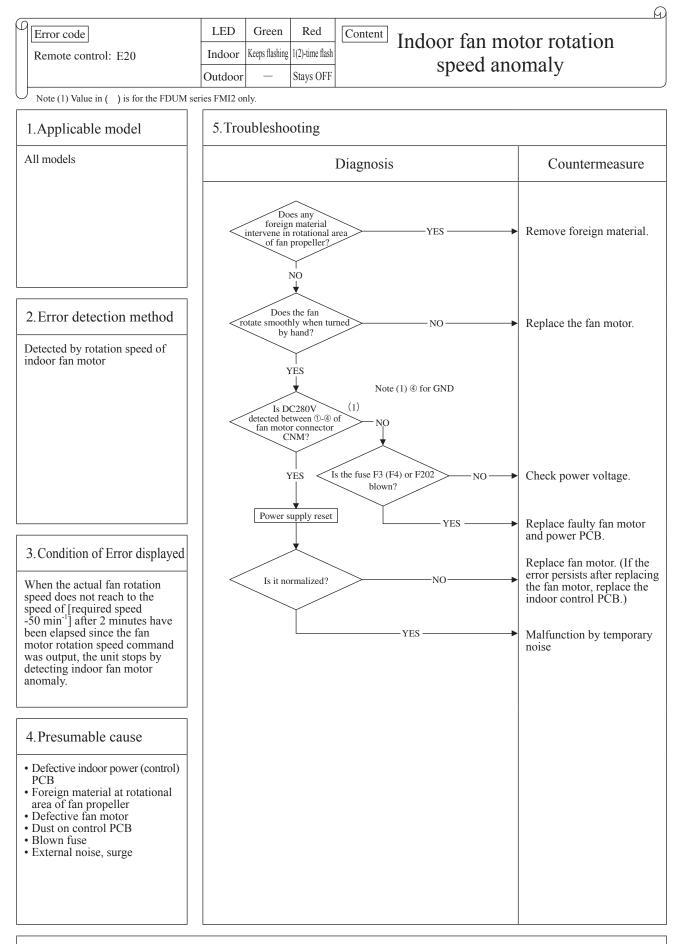


							9
F	Error code	LED	Green	Red	Content	Defective penal switch	
	Remote control: E21	Indoor	Keeps flashing	1-time flash		Defective panel switch	
		Outdoor	_	Stays OFF		operation (FDT)	J

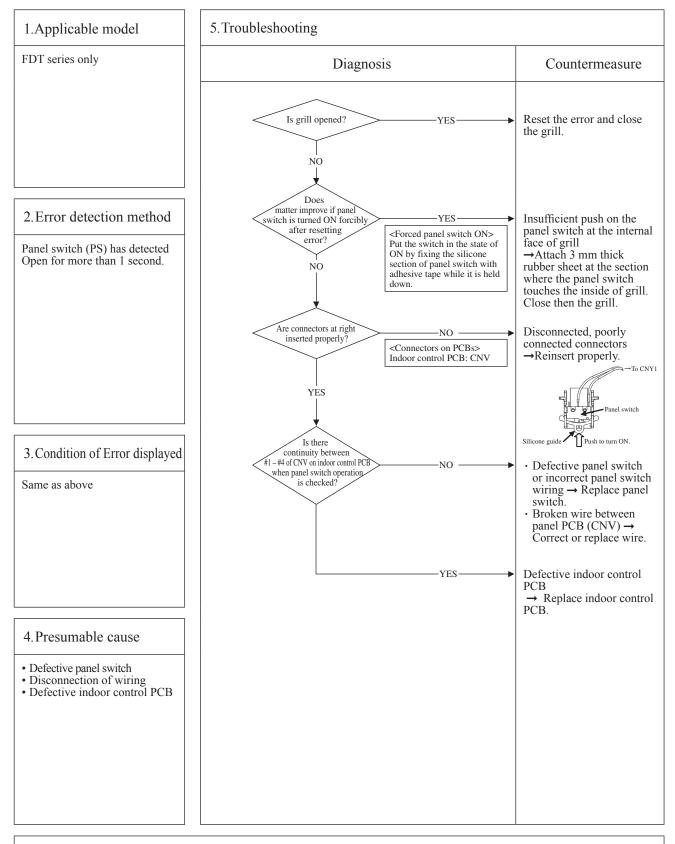



_					<u> </u>
β	Error code	LED	Green	Red	Content
	Remote control: E28	Indoor	Keeps flashing	Stays OFF	Remote control
		Outdoor	—	Stays OFF	temperature thermistor anomaly
L					

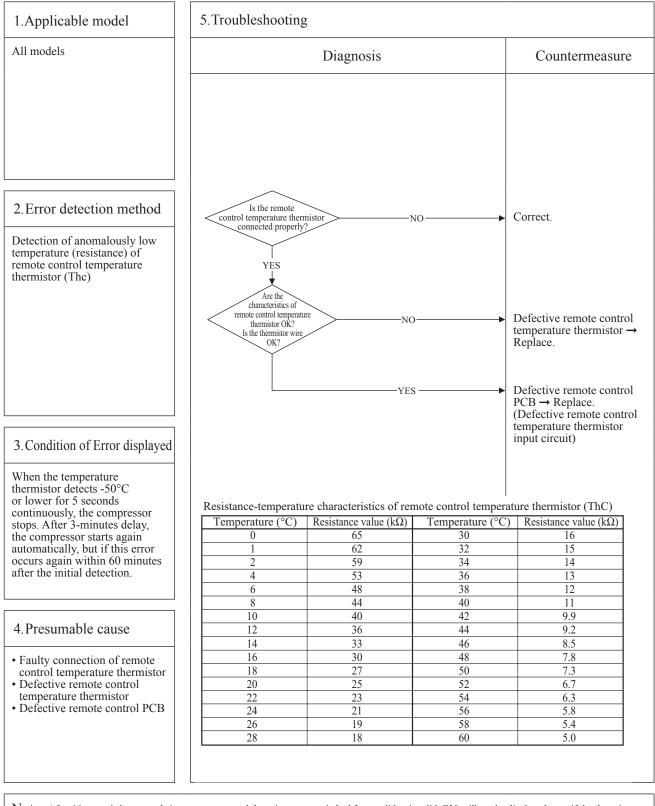



Note: After 10 seconds has passed since remote control thermistor was switched from valid to invalid, E28 will not be displayed even if the thermistor harness is disconnected. At same time the thermistor, which is effective, is switched from remote control thermistor to indoor return air temperature thermistor. Even though the remote control thermistor is set to be Effective, the return air temperature displayed on remote control for checking still shows the value detected by indoor return air temperature thermistor, not by remote control temperature thermistor.




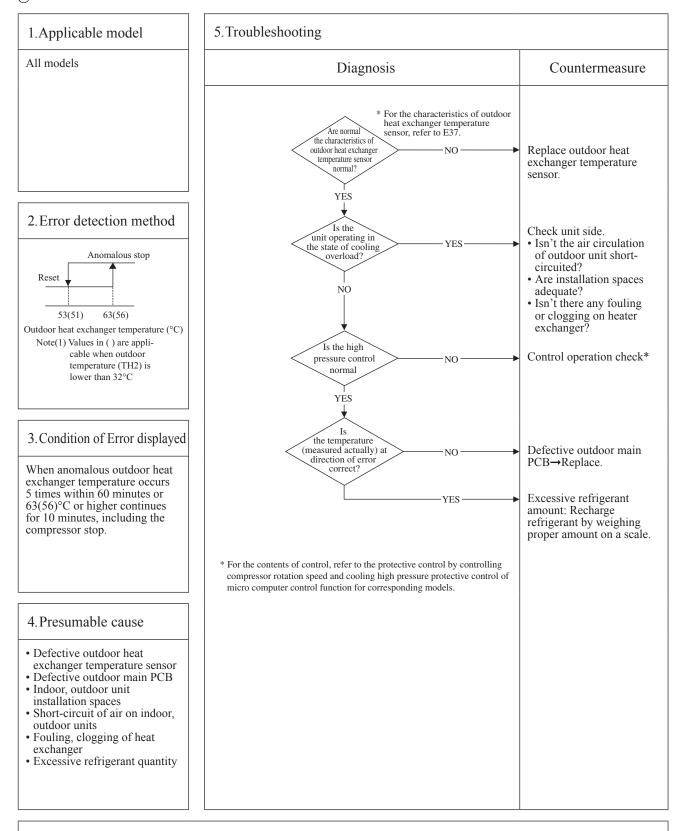




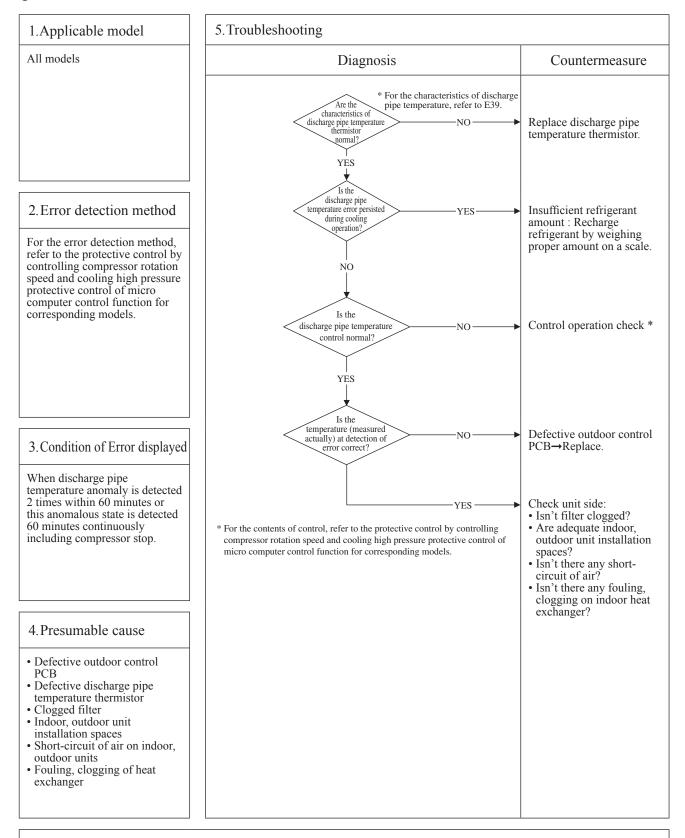

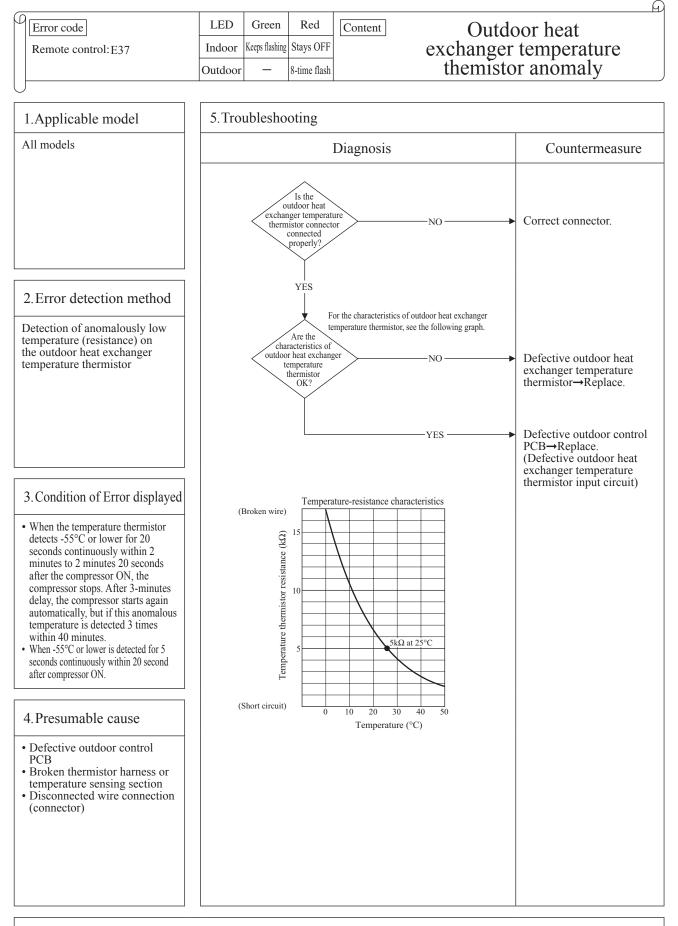


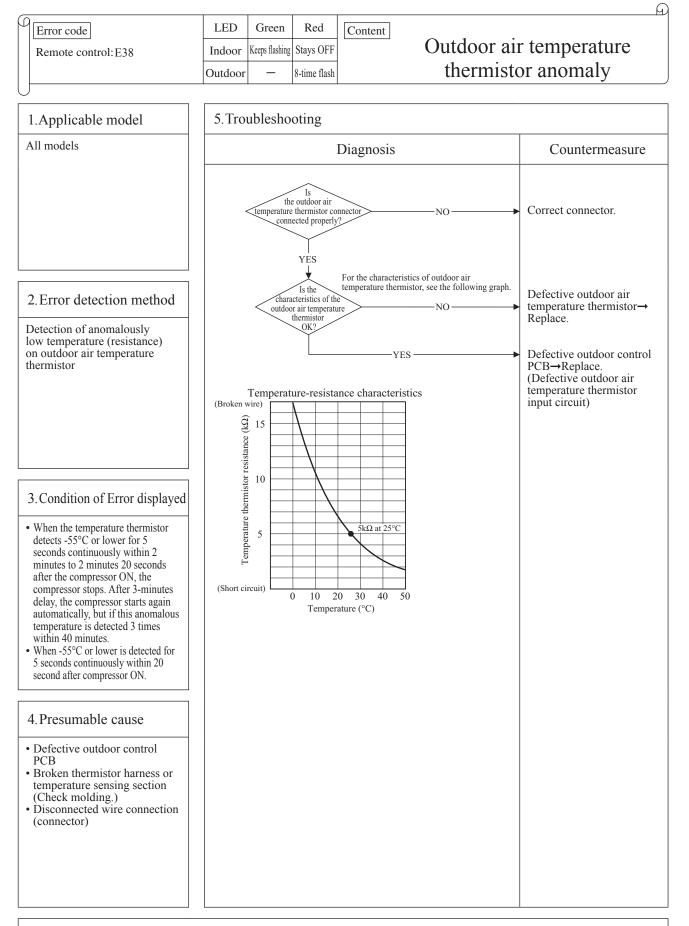


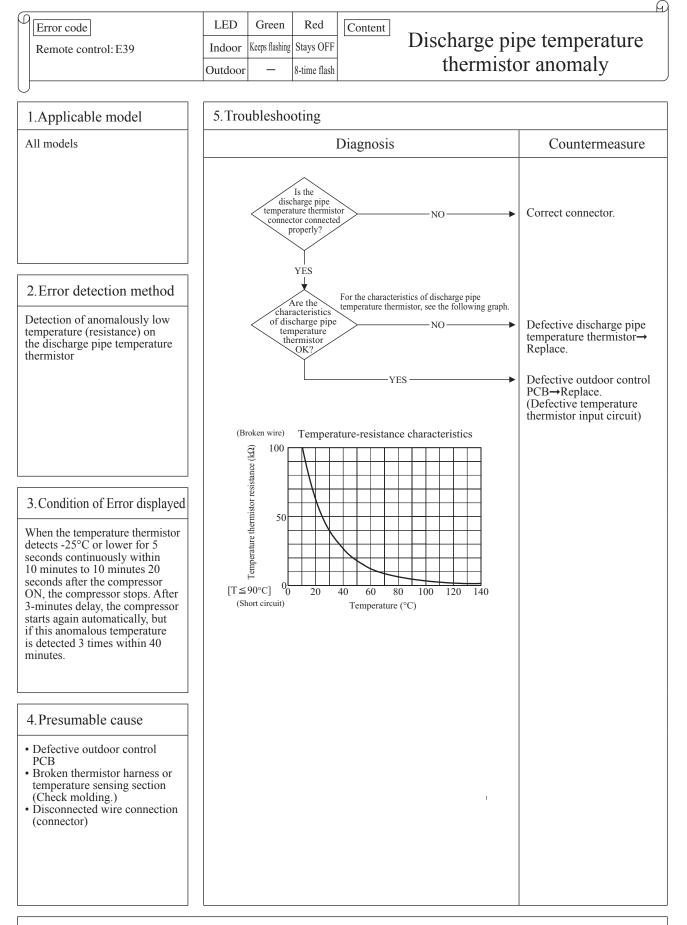


 Θ


F	9	Error code	LED	Green	Red	Content
		Remote control: E40	Indoor	Keeps flashing	Stays OFF	Service valve (gas side) closing operation
			Outdoor	_	1-time flash	

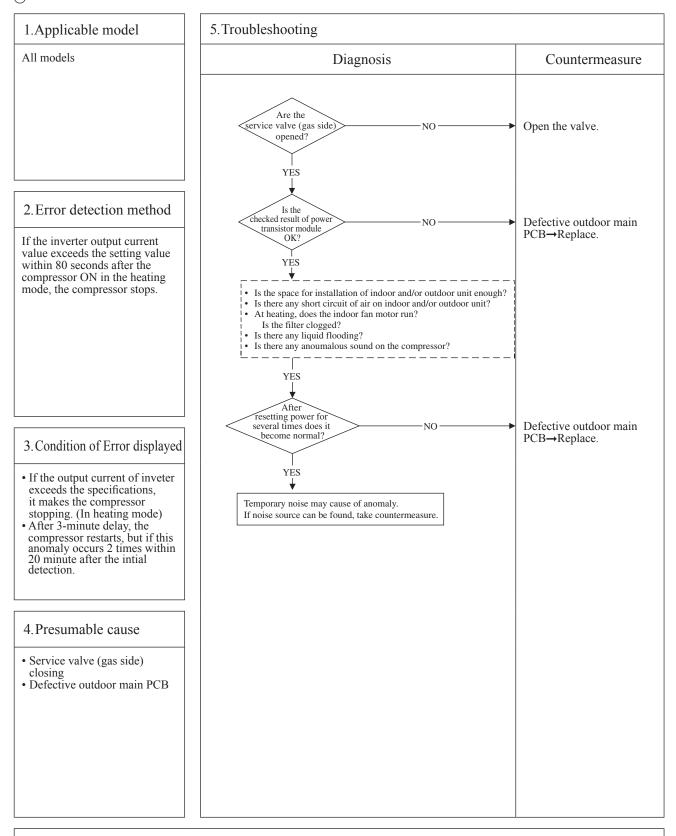


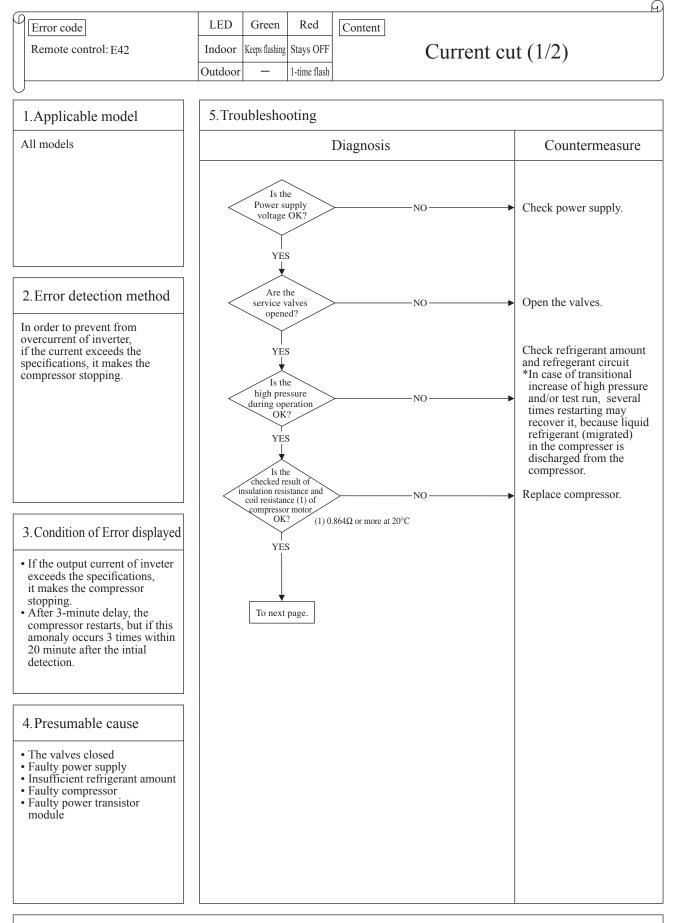


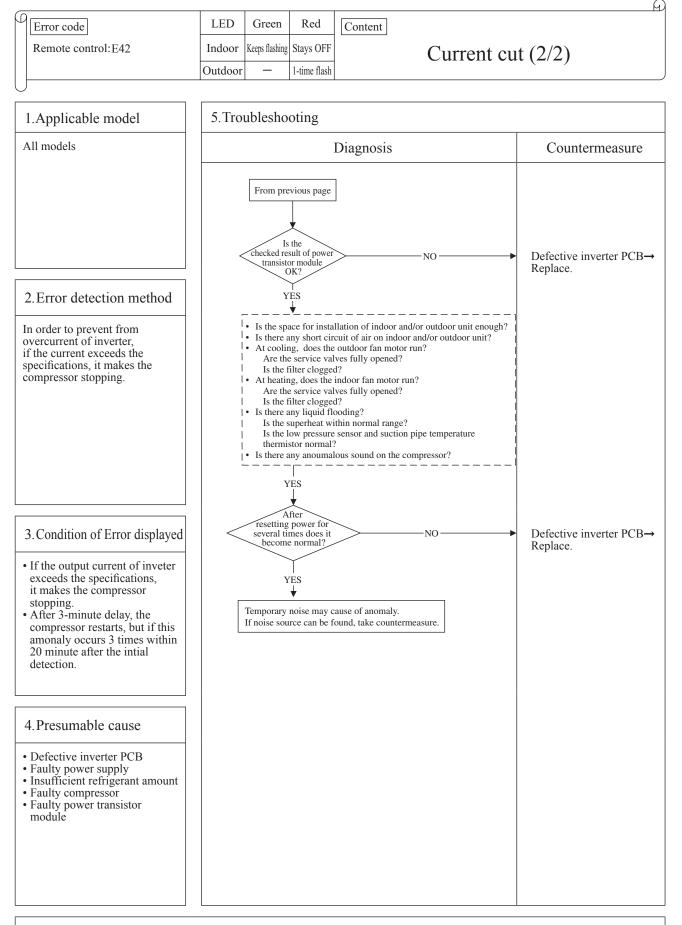



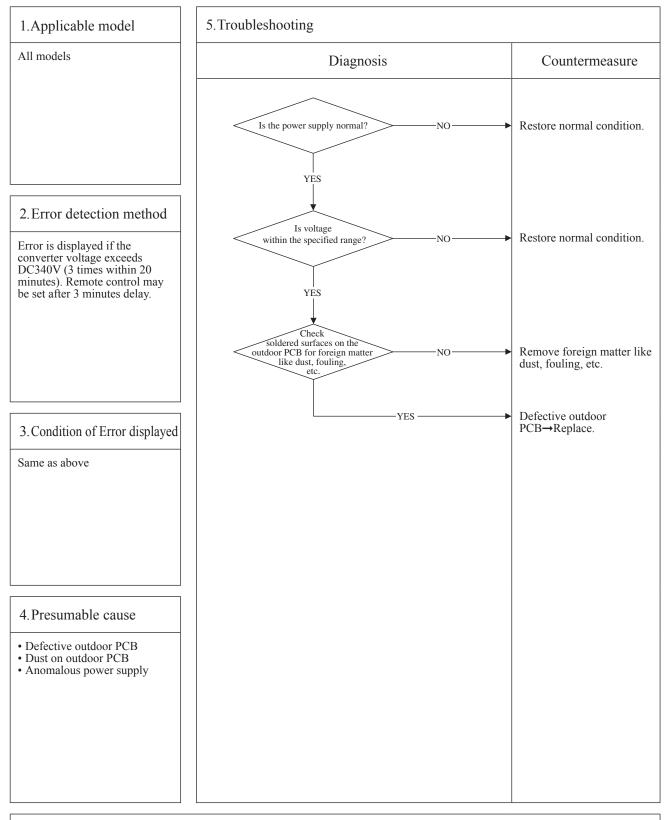




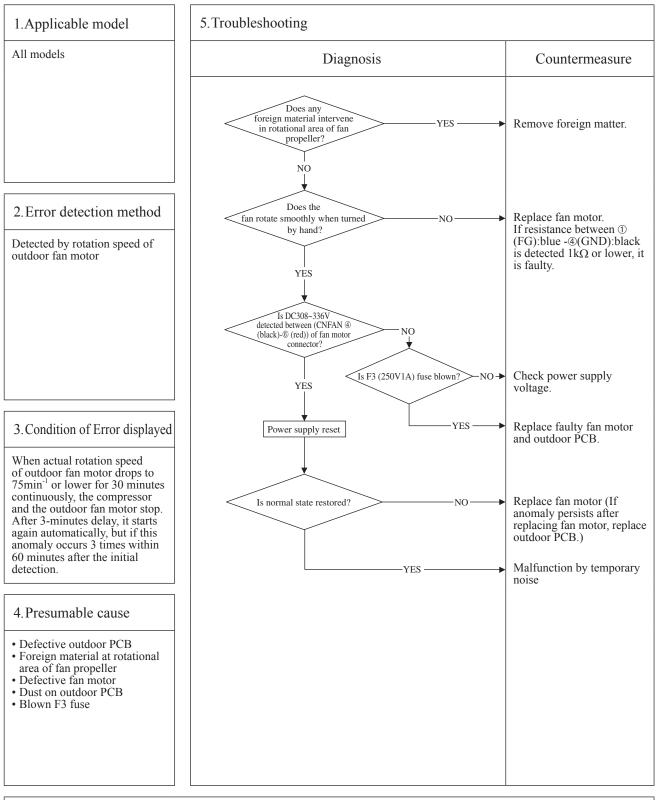


Note: When E48 error occurs, in almost cases F3 fuse (1A) on the outdoor PCB is blown. There are a lot of cases that fuse is blown and E48 occurs due to defective fan motor. And even though only the outdoor PCB (or fuse) is replaced,, another trouble could occur. Therefore when fuse is blown, check whether the fan motor is OK or not. After confirming the fan motor normal, check by power ON. (Don't power ON without confirming the fan motor normal.)




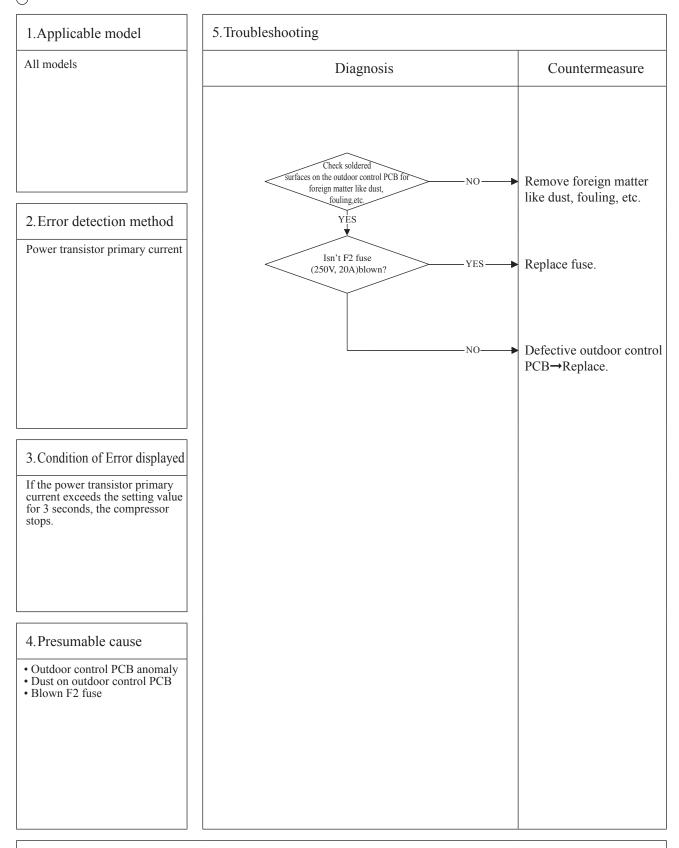





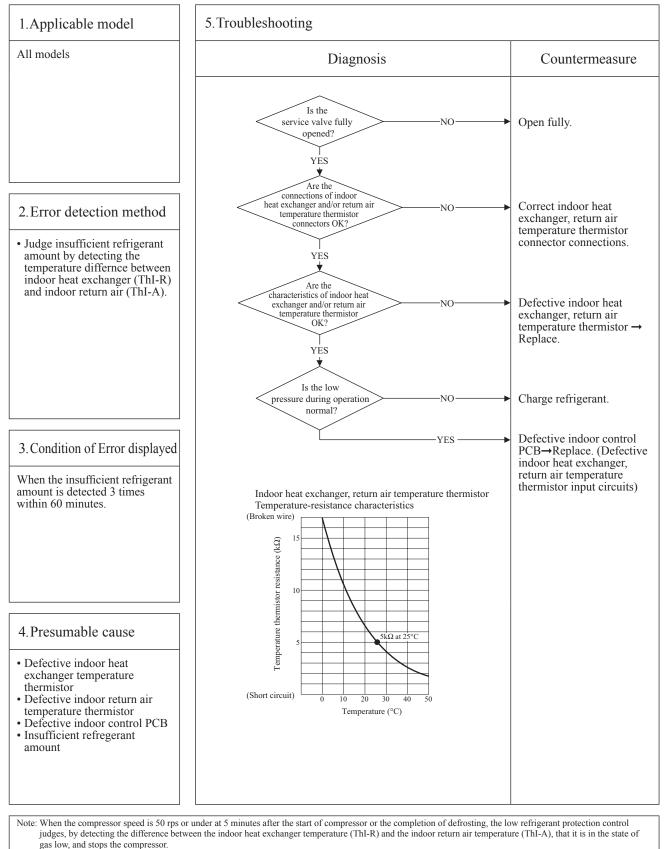


 $\widetilde{Cooling}$: Indoor return air temperature (ThI-A) – Indoor heat exchanger temperature (ThI-R) ≥ 4 deg Heating: Indoor heat exchanger temperature (ThI-R) – Indoor return air temperature (ThI-A) ≤ 6 deg



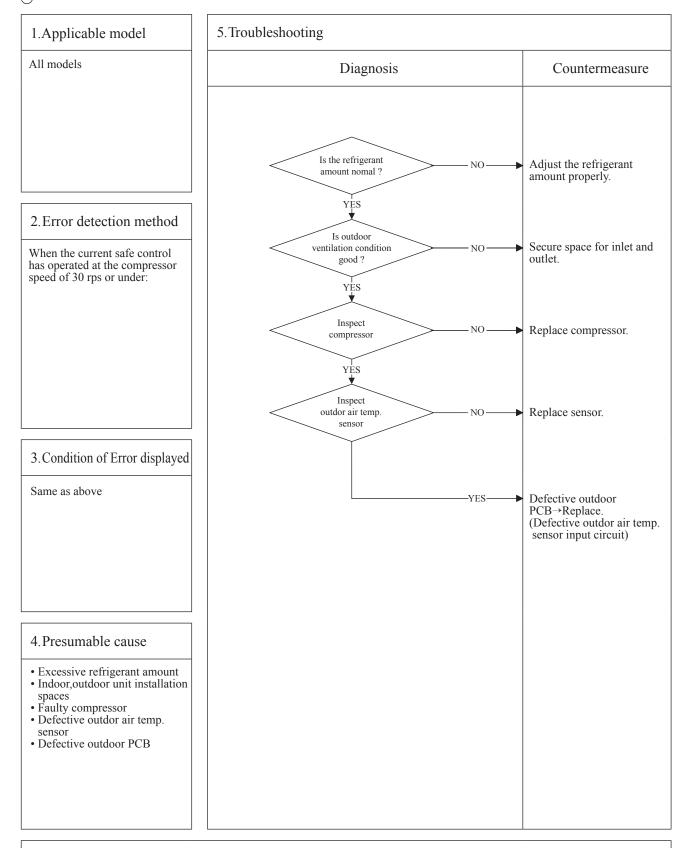





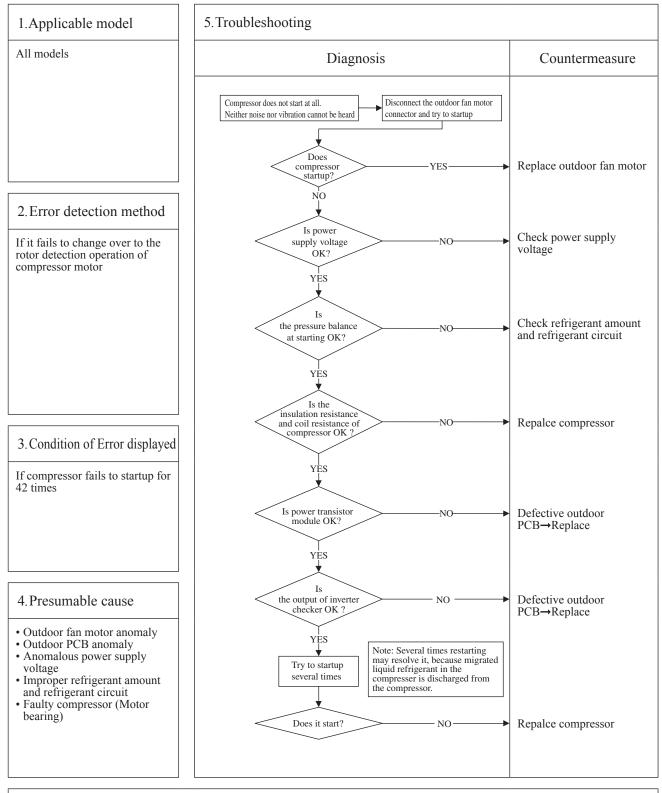

- Note: Insulation resistance
 - The unit is left for long period without power supply or soon after installation, migrated liquid refrigerant may dissolve in the refrigerant oil in the compressor. In such case insulation resistance decreases up to several $M\Omega$ or lower. If the electric leakage breaker is activated due to low insulation resistance, check followings.

 - © Check whehter the insulation resistance can recover or not, ater 6 hours has passed since power ON. (By energize the crankcase heater, migrated liquid refrigerant in the refrigerant oil in compressor can be evaporated)
 © Check whether the electric leakage breake conforms to high-hermonic specifications (As units has inverter, in order to prevent from improper operation, be sure to use high-hermonic one.)




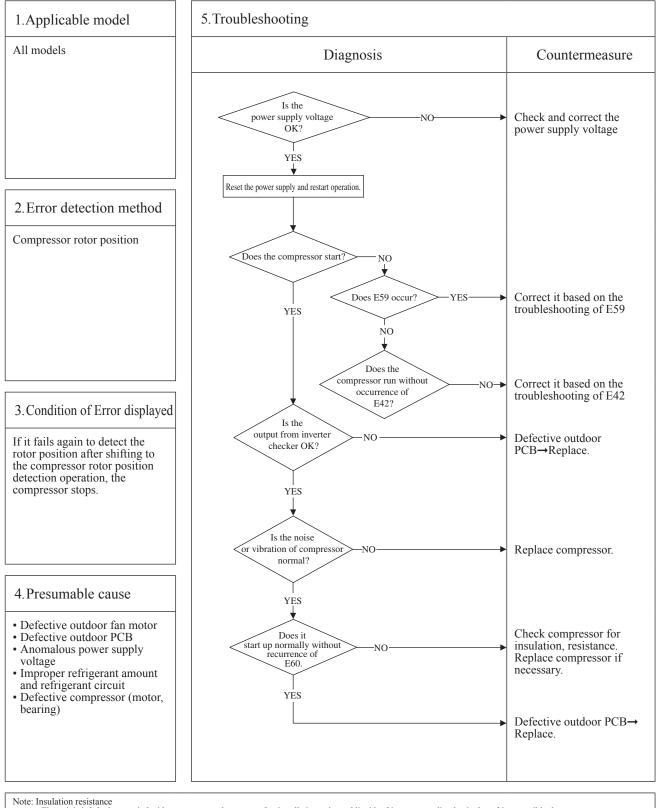



- Note: Insulation resistance
 The unit is left for long period without power supply or soon after installation, migrated liquid refrigerant may dissolve in the refrigerant oil in the compressor. In such case insulation resistance decreases upto several MΩ or lower. If the electric leakage breaker is activated due to low insulation resistance, check followings.
 ① Check whether the insulation resistance can recover or not, ater 6 hours has passed since power ON. (By energize the crankcase heater, migrated liquid refrigerant in the refrigerant oil in compressor can be evaporated)
 ② Check whether the electric leakage breake conforms to high-hermonic specifications (As units has inverter, in order to prevent from improper operation, be sure to use high-hermonic one.)

13. OPTION PARTS 13.1 Wireless kit

(1) FDT seies (RCN-T-36W-E)

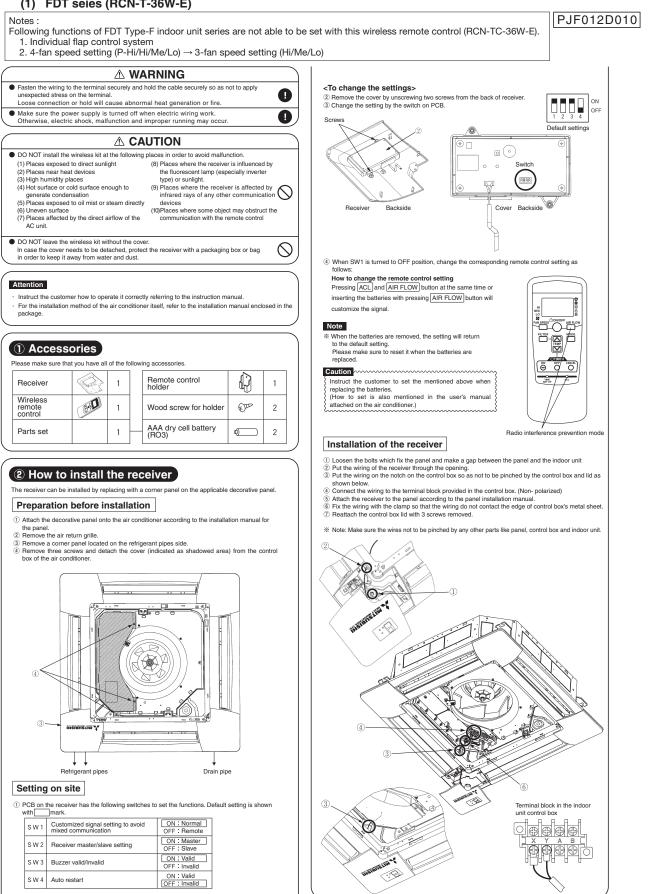

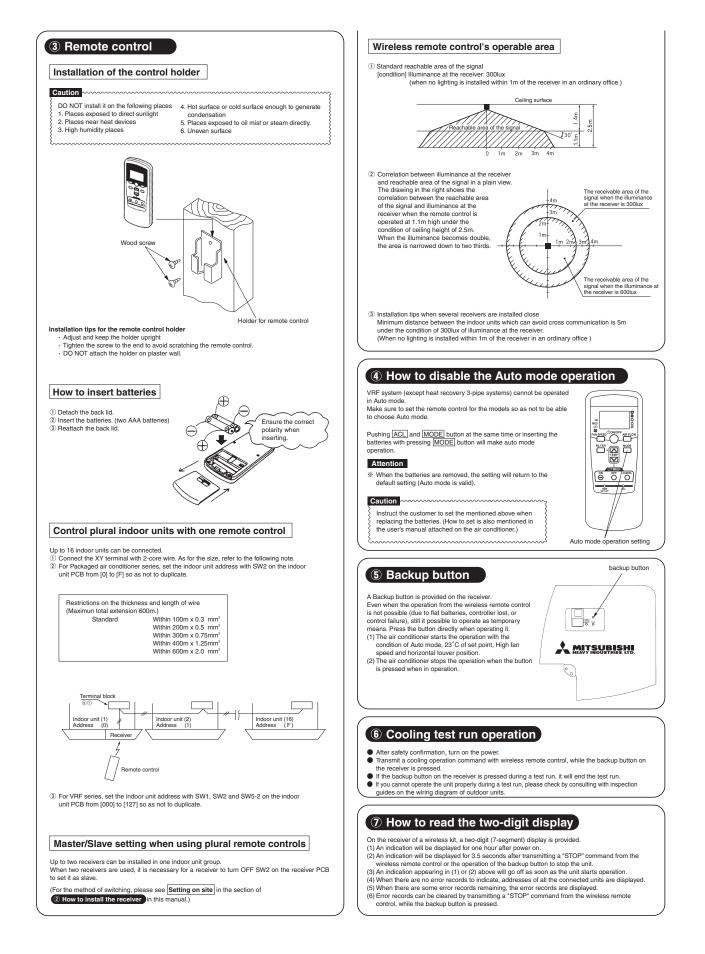

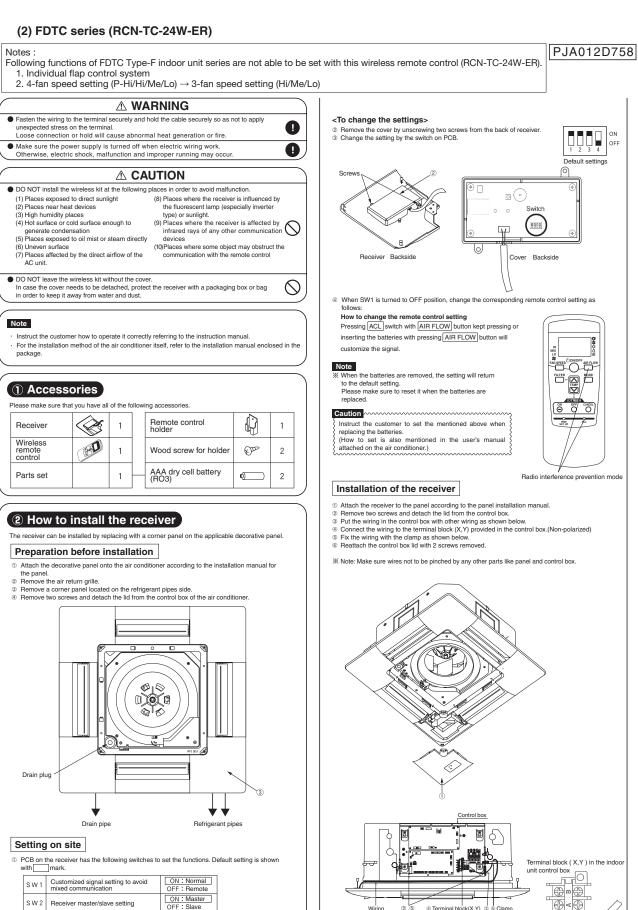


④ Terminal block(X,Y)

 \oplus Ð

6 0

Wiring

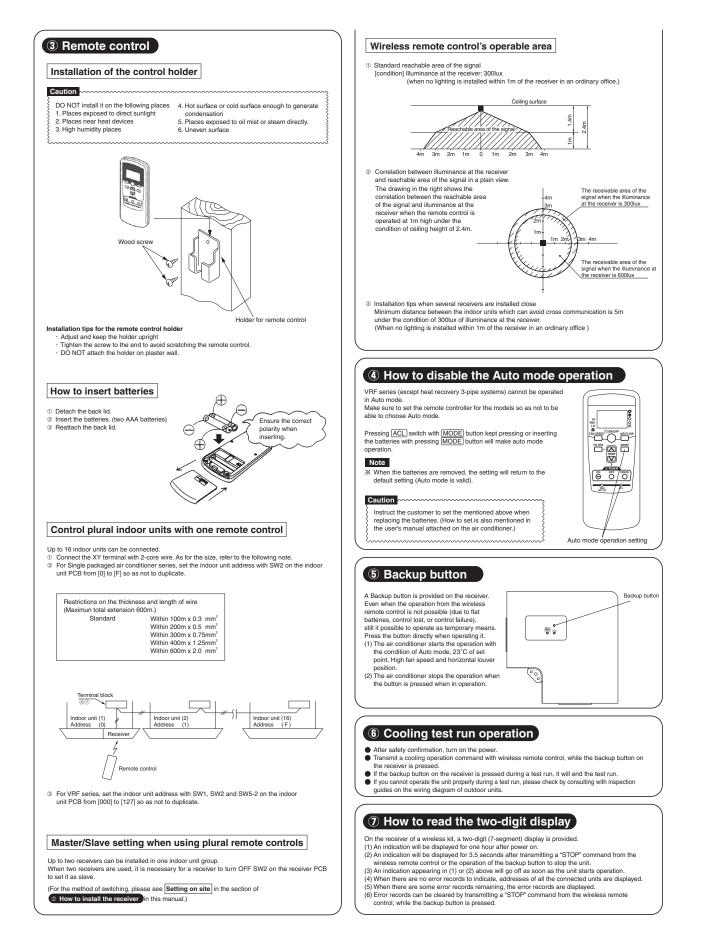


	unctions of F trol (RCN-KI		por unit series are not able	to be set w	rith this wireless	3 How	v to install the recei	ver
1. 4-fan s	peed setting	(PHi/Hi	i/Me/Lo) →3-fan speed se	tting (Hi/Me	e/Lo)		ng two methods can be used to	
							ethod according to the installati on position>	on position.
ad this manual toge air conditioner.	ther with the	installa	tion manual attached to	PJZ01	2D060 <u>A</u>	(A) Direct i	nstallation onto the ceiling with tion with accessory's bracket	wood screws.
		<u> </u>	/ARNING			(1) Drill	ing of the ceiling (ceilin	a oponing)
apply unexpected s Loose connection of	tress on the t r hold will cau	erminal. use abno	and hold the cable securely		° O	Drill the	e receiver installation holes with th an be connected.	• • •/
			when electric wiring work. d improper running may occ	ur.			irect installation onto the ceiling ood screws.	g with 88mm(H)×
		<u>∧</u> C	AUTION			(B) Ir	stallation with enclosed bracke	t. 108mm(H):
generate conder (5)Places exposed to (6)Uneven surface (7)Places affected by AC unit. DO NOT leave the In case the cover n bag in order to keep Attention	aces old surface er sation oil mist or stear the direct airflo wireless kit w eeds to be de o it away from	m directly ow of the rithout the etached, n water a	(10)Places where some ob communication with the e cover. protect the receiver with a pa nd dust.	er is affecte er communic ject may ob remote con ackaging bo	d by Struct the trol	Cautio Do not o power so If it is co be dama	connect the wiring to the burce of the terminal block. nnected, printed board will	Indoor
	ireless remot	e control	rectly referring to the instruct is attached to a indoor unit to this kit.			Remov	re the screw on the side of the n nstall the receiver with one of th	
 Accessor 	ies Ple	ase mak	ke sure that you have all of	the followin	g accessories.	. ,	ect installation onto the	
1 Receiver	Ō	1	Remote control holder	1			s installation method when the h in installing directly with wood	
@ Wiring (3m)	69	1	② Screw for holder	a 2		501g	Wall opening Lower case	
③ Parts set (A)		1	AAA dry cell battery (R03)	Q 2			Hole	
 Parts set (B) 	-	1	Screw for receiver	F ¹⁹⁷ 2				Wiring
Parts set (C)	-	1	@ Fixing band	1 (Tan	_			
6 Wireless remo	te 🖉	1	③ Clamp	1 5	-			
	Î	1	Screw for clamp	5			Wiring	
 Control User's manual 			Receiver installation bracket	1				
			 Screw for the bracket Installation fitting 	€ 2 2 2	-		/	6R
	remote	cont	② Screw for the bracket		-		Connector the wiring from the back	Lower case Hole

(1) When installed on ceiling


1 Standard reachable area of the signal

condition Illuminance at the receiver : 300lux (when no lighting is installed within 1m of the receiver in an ordinary of ce.)

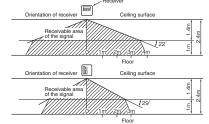

(2) Correlation between illuminance at the receiver and reachable area of the signal in a plain view


condition Correlation between the reachable area of the signal and illuminance at Consistent of the receiver when the remote control is operated at 1.1m high under the condition of ceiling height of 2.5m. When the illuminance becomes double, the area is narrowed down to two third.

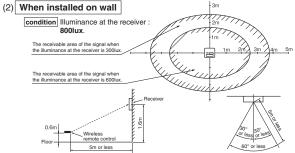

er onto a ceiling or a wall.

ions at the ceiling position where


(A) Direct installation onto the ceiling with wood screws.	88mm(H)×101mm(W)	т	
(B) Installation with enclosed bracket.	108mm(H)×108mm(W)	+	
-			. w



it into the upper case and lower methods (A) or (B) shown below.

crews

and there is no problem for

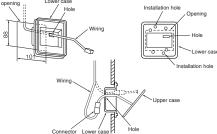


of the lower case.

- Fit the lower case into the ceiling opening. Make sure that the clearance between the convex part of the back of the lower case and the ceiling opening must be as equal as possible on both sides.
- 3Using the two installation holes shown above, fix the lower case onto the ceiling with the enclosed wood screws. (The other four holes are not used.)
- (Connect the wing with the wing of form the upper case by the connector.
 (S) Take out the connector to the backside from the hole of the lower case putting
- through the wiring at ①. (6) Fit the upper case and the lower case, and tighten the screws.

(B) Installation with enclosed bracket

Use this method when installaing onto a gypsum board (7 to 18mm), etc.

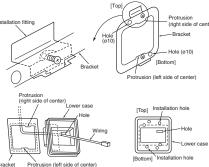

O Catch the two protrusion of the enclosed bracket onto the tting as shown above, and temporarily fix with the screws. (The bracket has an up/down and front/back orientation. Con rm the top/bottom protrusion positions and the positional relation of the ø 10 holes on the bracket and the installation hole on the lower case with the above drawing.)

②Insert the end of the installation tting into the back of the ceiling from the opening, and tighten the screws to fix the bracket onto the ceiling.

 ③Pass the wiring from the rear side through the hole on the lower case.
 ④Fit the lower case onto the bracket, and fix the lower case to the bracket using the two installation holes shown above. (The other four holes are not used.) (5)Follow step (1) to (6) for (A) to complete the installation.

④ Remote control

Installation of the control holder

Caution

- DO NOT install it on the follow ng places
- 1) Places exposed to direct sunlight 2) Places near heat devices



- Places near near devices
 Plah humidity places
 Hot surface or cold surface enough to generate condensation
 Places exposed to oil mist or steam directly
 Uneven surface

Installation tips for the remote control holder

- · Adjust and keep the holder upright.
- Tighten the screw to the end to avoid scratching
- the remote control. • DO NOT attach the holder to plaster wall.

How to insert batteries

1 Detach the back lid

2 Insert the batteries. (two AAA batteries)

Reattach the back lid.

(5) Cooling test run operation


•After safety con rmation, turn on the power.

•Transmit a cooling operation command with wireless remote control, while the backup button on the receiver is pressed.

Wood screw

If the backup button on the receiver is pressed during a test run, it will end the test run.

If you cannot operate the unit properly during a test run, please check by consulting with inspection guides on the wiring diagram of outdoor units.

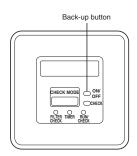

6 Setting of wireless remote control and receiver

(A) Methods of avoiding the malfunction due to the mixed communication Do both procedures ① and ②


This setting is to avoid the mixed communication with other household electric appliances or the mixed communication when two receivers are located closely ①Setting change of the wireless remote control

Pressing <u>ACL</u> and <u>AIRFLOW</u> button at the same time or inserting the batteries with pressing <u>AIRFLOW</u> button will customize the signal.

Note *When the batteries are removed, the setting will return to the default setting. Make sure to reset it when the batteries are replaced.

2 Setting the PCB of the receiver Turn SW1-1 off

+ •Wireless remote control ↑ ●PCB of the receiver

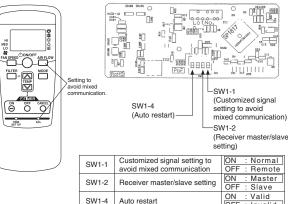

ON : Valid OFF : Invalid : Default setting

OFF

: Normal : Remote


: Master : Slave

53 53

²0:___:

10

(B) Control plural indoor units with one remote control

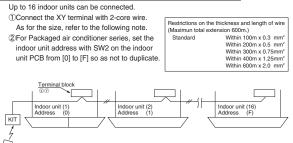

③For VRF series, set the indoor unit address with SW1, SW2 and SW5-2 on the indoor unit PCB from [000] to [127] so as not to duplicate

(C) Master/Slave setting when using plural remote control

Up to two receivers can be installed in one indoor unit group.

Indoor unit	
	Remote control line (Non-polarized)
RCN-KIT SW1[Master]	RCN-KIT SW1[Slave]

Holder for remote control

Switch	Setting	Function
SW1-2	ON	Master
5001-2	OFF	Slave

(D) Change setting of auto mode operation

Auto mode operation is prohibited to be selected for KX models (except for KXR models).

models). Therefore be sure to change setting of remote control to disable the auto mode operation for these models according to the following procedure. While pressing the <u>MODE</u> button, press the <u>ACL</u> switch, or while pressing the <u>MODE</u> button, insert the batteries to the remote control. Then the auto mode can be involved.

can be invalid. Attention

When the batteries are removed, it is returned to initial setting (Auto mode becomes valid). Accordingly when replacing the batteries, be sure to perform the above operation

once again.

(E) Change setting of fan speed

While pressing the [FAN SPEED] button, press the [ACL] switch, or while pressing the [FAN SPEED] button, insert the batteries to the remote control. Then the fan speed can be changed from 2-speed setting to 3-speed setting. When changing fan speed setting of remote control, be sure to perform the same fan speed setting as that of the indoor unit model to be used.


Attention

When the batteries are removed, it is returned to initial setting (Fan speed setting is 2-speed).

Accordingly when replacing the batteries, be sure to perform the above operation once agair

13.2 Simple wired remote control (RCH-E3)

Notes: Following functions of FDU indoor unit series are not able to be set with this simple wired remote control (RCH-E3). 1. 4-fan speed setting (PHi/Hi/Me/Lo) →3-fan speed setting (Hi/Me/Lo)

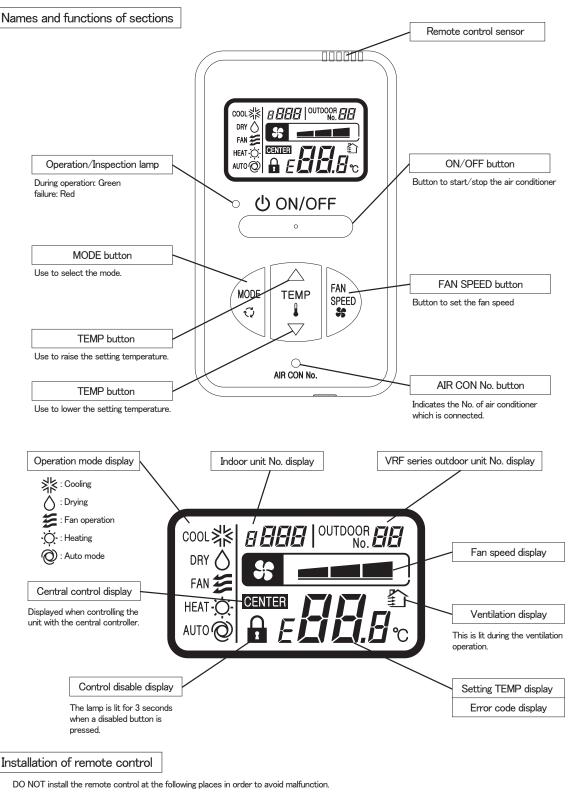


 (1) Places exposed to direct sunlight
 (4) Hot surface or cold surface enough to generate condensation

 (2) Places near heat devices
 (5) Places exposed to oil mist or steam directly

 (3) High humidity places
 (6) Uneven surface



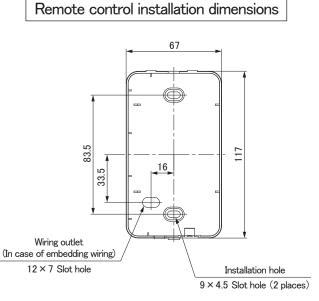

Note: Installation screw for remote control M4 Screw (2 pieces)

心 ON/OFF

70

TEMP SPEE

0


, Node ∵Ç




0.3mm² × 2 cores.

LCD



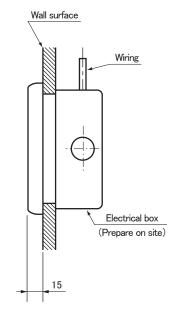

The remote control wiring can be extracted from the upper center. After the thin part in the upper side of the remote control upper case is scraped with a nipper or knife, remove burr with a file.

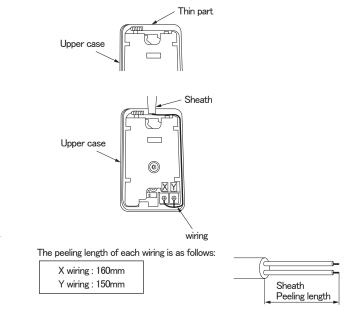

Wiring specifications

(1) Wiring of remote control should use $0.3mm^2 \times 2$ core wires or cables. (on-site configuration) (2) Maximum prolongation of remote control wiring is 600m.

X, Y Terminal block

Attach M3 screw

with washer

20

If the prolongation is over 100m, change to the size below.

But, the wiring in the remote control case should be 0.3mm² (recommended) to 0.5mm².

Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire


connecting section. Be careful about contact failure.

Length	Wiring thickness
100 to 200m	0.5mm ² × 2 cores
Under 300m	0.75mm ² × 2 cores
Under 400m	1.25mm ² × 2 cores
Under 600m	2.0mm ² × 2 cores

Adapted to **RoHS** directive

Unit:mm



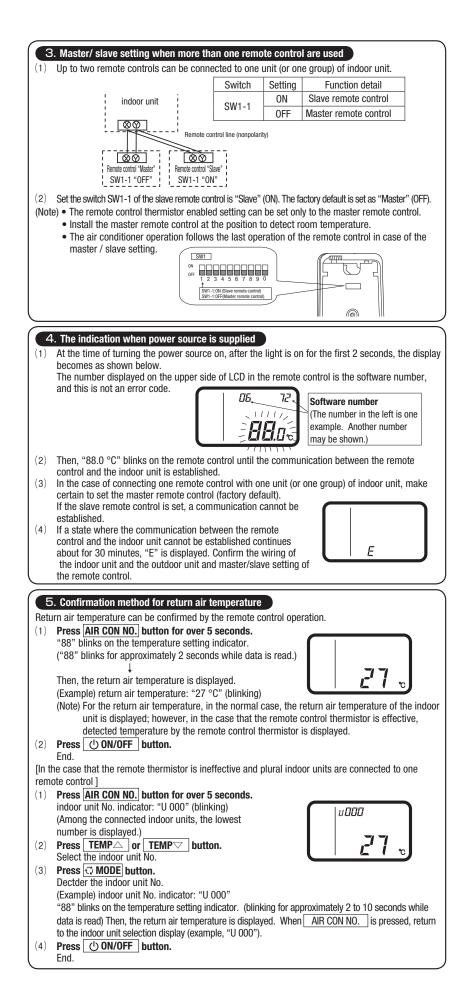

6. Function setting

Each function of the remote control and the indoor unit is automatically set to the initial setting, which is the standard use, on the occasion of connecting the remote control with the indoor unit. In the case of the standard use, the setting change is unnecessary. However, if you whould like to change the initial setting " () ", change the setting for only the item of the function number. Record the setting contents and stored them.

(1) Function setting item by switch on PCB

(1) Function	n setting ite	em by switch on PCB						
Switch No.	Setting	Setting detail	Initial setting	Switch No.	Setting	Setting detail	Initial setting	OFF 1 2 3 4 5 6 7 8 9 0
SW1-1	ON	Slave remote control		SW1-5	ON	"TEMP" button prohibited		311 1 2 3 4 5 6 7 8 9 0
SWI-1	0FF	Master remote control	0	SW1-5	OFF	"TEMP" button enabled	0	
SW1-2	ON	Remote control thermistor enabled		SW1-6	ON	"FAN SPEED" button prohibited	% Note 1	
5WI-2	0FF	Remote control thermistor disabled	0	3001-0	OFF	"FAN SPEED" button enabled	* Note 1	
SW1-3	ON	"MODE" button prohibited		SW1-7	ON	Auto restart function enabled		· As for the slave remote control, function setting is impossible other
5001-5	0FF	"MODE" button enabled	0	SWI-7	OFF	Auto restart function disabled	0	than SW1-1.
SW1-4	ON	"ON/OFF" button prohibited		SW1-8, 9, 0	ON ON	Noturad		 In the indoor unit with only one fan speed, "FAN SPEED" button cannot
3₩1-4	OFF	"ON/OFF" button enabled	0	3001-0, 9, 0	OFF Not used			be enabled.

$(2) \quad \mbox{Function setting item by button operation} \\$

Classification	Function No.	Function	Setting No.	Setting	Initial setting	Remarks
			01	Fan speed: three steps	% Note 1	The fan speed is three steps, 🗱 📲 🖬 - 🗱 🖬 - 🗱 🖬 .
	01	Indoor unit fan speed	02	Fan speed: two steps (Hi-Lo)	% Note 1	The fan speed is two steps, 3 f a a f a .
	01	induor unit ian speed	03	Fan speed: two steps (Hi-Me)		The fan speed is two steps, \$\$ = = = .
			04	Fan: one step	% Note 1	The fan speed is fixed to one step.
			01	Remote control thermistor: no offset	0	
			02	Remote control thermistor: +3.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at +3.0°C.
		Remote control	03	Remote control thermistor: +2.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at +2.0°C.
	03	thermistor at the time	04	Remote control thermistor: +1.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at +1.0°C.
		of cooling	05	Remote control thermistor: -1.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at -1.0°C.
			06	Remote control thermistor: -2.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at -2.0°C.
Remote			07	Remote control thermistor: -3.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offsett temperature at -3.0°C.
control			01	Remote control thermistor: no offset	0	
function			02	Remote control thermistor: +3.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at +3.0°C.
		Remote control	03	Remote control thermistor: +2.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at +2.0°C.
	04	thermistor at the time	04	Remote control thermistor: +1.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at +1.0°C.
		of heating	05	Remote control thermistor: -1.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at -1.0°C.
			06	Remote control thermistor: -2.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at -2.0°C.
			07	Remote control thermistor: -3.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at -3.0°C.
			01	No ventilator connection	0	
	05	Ventilation setting	02	Ventilator links air-conditioner		In case of Single split series, by connecting ventilation device to CNT of the indoor printed circuit board (in case of VRF series, connecting it to CND of the indoor printed circuit board), the operation of ventilation device is linked with the operation of indoor unit.
		"Auto" operation setting	01	"Auto" operation enabled	% Note 1	
	06		02	"Auto" operation disabled	% Note 1	"Auto" operation disabled
	07	Operation permission/	01	Disabled	0	
	07	prohibition	02	Enabled		Operation permission/prohibition controller is enabled.
			01	Level input	0	
	08	External input	02	Pulse input		
		Fan speed setting	01	Standard	Note2	
	09		02	High speed 1	Note2	
			03	High speed 2	Note2	
		Fan remaining operation at the time of cooling	01	No remaining operation	0	After cooling stopped, no fan remaining operation
			02	0.5 hours		After cooling stopped, fan remaining operation for 0.5 hours
	10		03	1 hour		After cooling stopped, fan remaining operation for 1 hour
			04	6 hours		After cooling stopped, fan remaining operation for 6 hours
			01	No remaining operation	0	After heating stopped or after heating thermostat OFF, no fan remaining operation
		Fan remaining	02	0.5 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 0.5 hours
	11	operation at the time	03	2 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 2 hours
Indoor unit		of heating	04	6 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 6 hours
			01	No offset	0	
function		Setting temperature	02	Setting temperature offset + 3.0 °C		The setting temperature at the time of heating is offset by $+3.0$ °C.
	12	offset at the time of	03	Setting temperature offset + 2.0 °C		The setting temperature at the time of heating is offset by +2.0 °C.
		heating	04	Setting temperature offset + 1.0 °C		The setting temperature at the time of heating is offset by $+1.0$ °C.
			01	Low fan speed	% Note 1	At the time of heating thermostat OFF, operate with low fan speed.
			02	Setting fan speed		At the time of heating thermostat OFF, operate with the setting fan speed.
	13	Heating fan controller	03	Intermittent operation	% Note 1	At the time of heatingr thermostat OFF, intermittently operate.
			04	Fan off		At the time of heating thermostat OFF, a fan will be stopped. When the remote control thermistor is enabled, automatically set to "Fan off". Do not set at the time of the indoor unit thermistor.
			01	No offset	0	
			02	Return air temperature offset +2.0 °C		Offset the return air temperature of the indoor unit by +2.0 °C.
			03	Return air temperature offset +1.5 °C	1	Offset the return air temperature of the indoor unit by $+1.5$ °C.
	14	Return air temperature	04	Return air temperature offset +1.0 °C	1	Offset the return air temperature of the indoor unit by +1.0 °C.
		offset	05	Return air temperature offset -1.0 °C	1	Offset the return air temperature of the indoor unit by -1.0 °C.
			06	Return air temperature offset -1.5 °C	1	Offset the return air temperature of the indoor unit by -1.5 °C.
				1	1	

Note 1: The symbol " 💥 " in the initial setting varies depending upon the indoor unit and the outdoor unit to be connected, and this is automatically determined as follows:


Swith No. Function No.	Function	Setting	Product model
	"FAN SPEED"	"FAN SPEED" button prohibited	Product model whose indoor fan speed is only one step
SW1-6	button	"FAN SPEED" button enabled	Product model whose indoor fan speed is two steps or three
	Dutton	TAN SPEED DULLOIT EIIADIEU	steps
		Fan speed: three steps	Product model whose indoor unit fan speed is three steps
Remote control function 01	Indoor unit fan	Fan speed: two steps (Hi-Lo)	Product model whose indoor unit fan speed is two steps
Remote control function of	speed	Fan speed: two steps (Hi-Me)	
		Fan: one step	Product model whose indoor unit fan speed is only one step
Remote control function 06	"Auto" operation	"Auto" operation enabled	Product model where "Auto" mode is selectable
Remote control function of	setting	"Auto" operation disabled	Product model without "Auto" mode
Indoor unit function 13	Heating fan	Low fan speed	Product model except FDUS
Indoor unit function 13	control	Intermittent operation	FDUS

Note 2: Fan speed of "High speed" setting

Fan speed setting	Indoor unit fan speed setting		
I all speed setting	8 a m M - 8 a m - 8 a	\$t = # # - \$t =	\$t = # # - \$t = #
Standard	Hi — Mid — Lo	Hi — Lo	Hi — Mid
High speed 1 · 2	UHi — Hi — Mid	UHi — Mid	UHi — Hi
Initial setting of some indoor unit is "High speed".			

High spe

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit. But only master indoor unit is received the setting change of indoor unit function "07 Operation permission/ prohibition" and "08 External input".

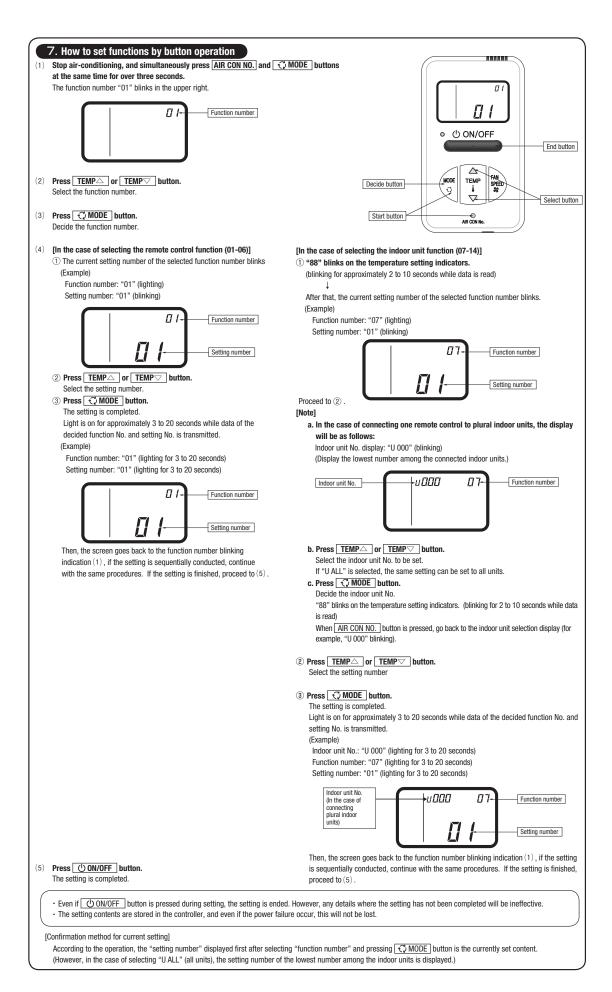

13.3 OA spacer (FDTC series)

This manual describes the installation methods for OA spacer (TC-OAS-E) and the duct joint (TC-OAD-E). This OA spacer is designed for assembling on the indoor unit (FDTC Series), not for be using independently.



Application model	FDTCA151R, 201R, FDTCA22~56KXE4R, FDTC22~56KXE6	
	FDTC22~56KXE6A, FDTC22~56KXE6B, FDTC22~56KXE6D	
	FDTC40V, 50V, FDTC40~60VB, FDTC25~60VD (F)	

 \bigcirc Prepare the duct (size: ø75) and the booster fan at site.


OFor the installation of indoor unit, refer to the installation manual attached to the indoor unit.

SAFETY PRECAUTIONS

• Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.

<u> </u> MARNING	
Installation should be performed by the specialist. If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.	0
Install the system correctly according to these installation manuals. Improper installation may cause explosion, injury, water leakage, electric shock, and fire.	
Use the genuine accessories and the specified parts for installation. If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.	
• Turn off the power source during servicing or inspection work. If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.	
Shut off the power before electrical wiring work. It could cause electric shock, unit failure and improper running.	
Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled. It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire.	\bigcirc

① Before installation

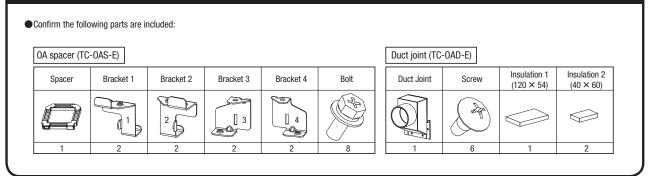

530 sion bolts pitch)

190

185

Control

326 349.

8

Ø75

2.6 2.5

3.0

(Suspe

Ĥ

0A spacer (TC-0AS-E) Hanger plate for suspension bolt

530 Ision bolts pitch)

Suspe

9

Duct ioint

(TC-OAD-E)

223

2 Prior study before installation (Usage limitation)

(1) Temperature conditions for OA spacer

·Adjust the temperature conditions of mixed air with outdoor air and indoor air within the usage range of suction air temperature for the air conditioner.

· The usage temperature conditions of intake outdoor air and indoor air around the ducts are shown in the following table.

· If the temperature conditions of intake outdoor air do not meet, process the outdoor air before intaking.

Operation mode	Usage temperature conditions		
Operation mode	Intake outdoor air	Indoor air around the ducts	
In heating	5°C DB or higher	18.5°C WB or lower and 60% RH or lower	
In cooling	29°C DB or lower and 80% RH or lower	20°C DB or higher	

(2) Intake outdoor air volume

 Intake outdoor air volume is 2.6 m³/min at the maximum (when two sets of duct joints are used). Up to two sets of duct joint can be installed on OA spacer.


- In case one set of duct joint is installed: 1.3 m3/min max.
- In case two sets of duct joint is installed: 2.6 m3/min max.

(3) Selection of booster fan

· Select the booster fan based on the duct resistance plus the pressure loss at the duct joint. (See the figure)


(4) Other conditions

- Determine the capacity of air conditioner based on the calculation of air conditioning load including the heat load of intake outdoor air.
- · Install the filter for the intake outdoor air and the reverse flow prevention dumper during the duct work at site.
- · Insulate the duct and duct joint in order to prevent dewing.
- · Interlock the operation of booster fan with ON/OFF operation of the indoor unit. (See Section 7.)

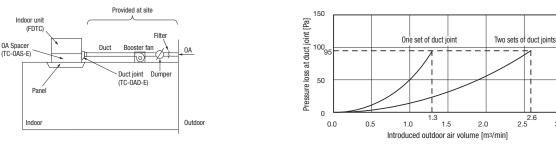


③ Installation of duct joint (TC-OAD-E) onto OA spacer

·There are two places where the duct joint can be installed.

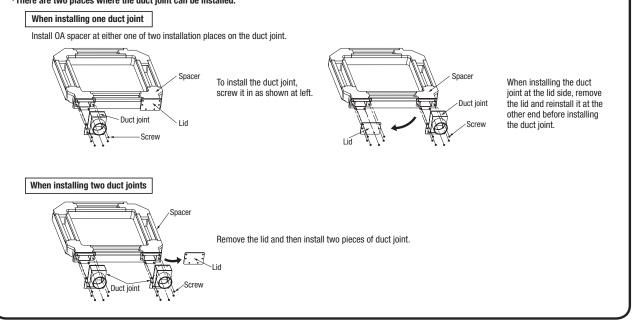

(4) Installation of OA spacer on the indoor unit


OA spacer can be installed regardless whether the indoor unit has already been hanged or not. (It is recommended to install before hanging the unit for convenience of installation.)

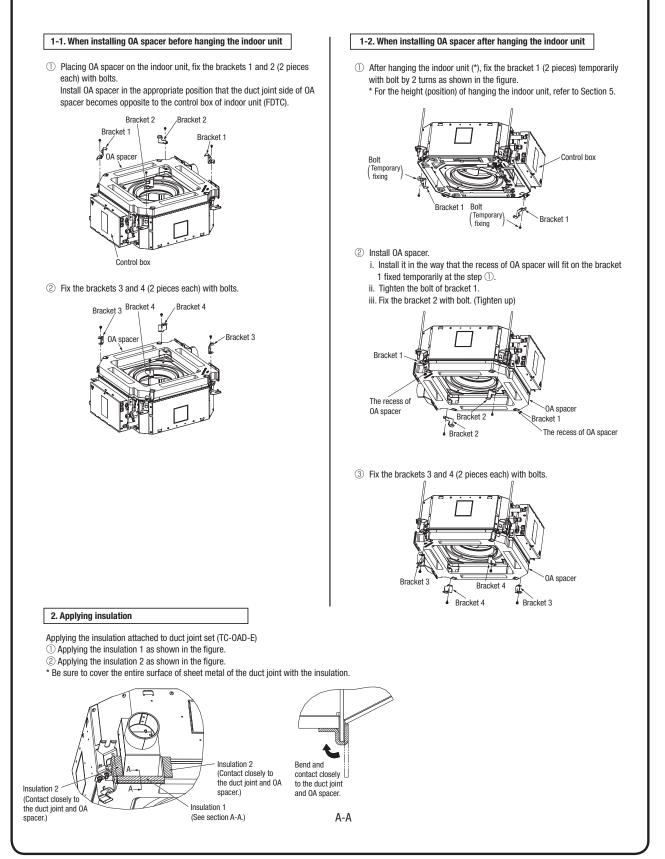


(5) Installation of indoor unit

Work procedure

- 1. This units is designed for 2 x 2 grid ceiling.
- If necessary, please detach the T bar temporarily before you install it.
- If it is installed on a ceiling other than 2 x 2 grid ceiling, provide an inspection port on the control box side.
- 2. Arrange the suspension bolt at the right position (530mm530mm).
- 3. Make sure to use four suspension bolts and fix them so as to be able to hold 500N load.
- 4. Ensure that the lower end of the suspension bolt should be 97mm above the ceiling plane. Temporarily put the four lower nuts 140mm above the ceiling plane and the upper nuts on distant place from the lower nuts in order not to obstruct hanging the indoor unit or adjust the indoor unit position, and then hang the indoor unit.
 5. Adjust the indoor unit position after hanging it by inserting the level gauge (Packed together with the indoor unit.) attached on the package into the air supply port and checking if the gap between the ceiling plane and the indoor unit is appropriate. (*) In order to adjust the indoor unit position, adjust the lower nuts while the upper nuts are put on distant place. Conrm there is no backlash between the hanger plate for suspension bolt and the lower nut and washer.
 * Use the level gauge only when OA spacer has been installed before hanging (④ 1-1 only).

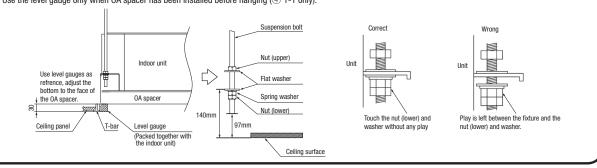

⁽⁶⁾ Installation of panel

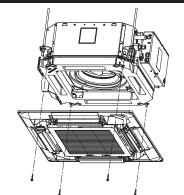


Tighten the panels to the brackets 3 and 4 with bolts. For further details, refer to the installation manual of panel.

(Caution) Connect the connector of lover motor within the control box.

${oldsymbol { { } { O } } }$ Interlocking with the indoor unit fan

© Connect the Single split series and the VRF series to CNT on the indoor PCB and to CND on the indoor PCB respectively. If a ventilation device is connected been geared with the motion of indoor device (ON: DC12V output, OFF: OV output), the ventilation device is operated/stopped.

Set it at "VENT LINK" by selecting "No. 11 VENT LINK SET" from the Functional setting by Remote Controller. For details, refer to the "ELECTRIC WIRNG WORK

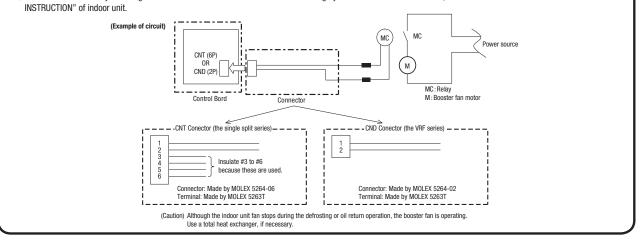


13.4 Duct joint (FDTC series)

PJZ012D073


This product is used by assembling on the spacer (TC-OAS-E)
 (1) Before installation

• Confirm the following parts are included:

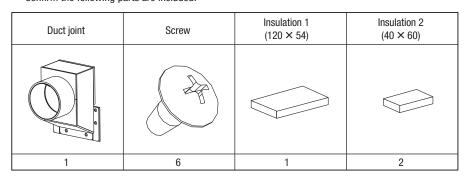

(2) Regarding the use of this product

- Fix the product on the spacer (TC-0AS-E) as shown below.
- For the installation method, refer to the installation manual of the spacer.

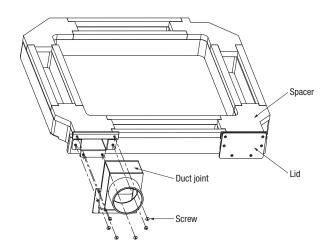


13.5 Filter kit (FDUM series)

This manual contains installation points and operating instructions for the filter kit manufactured by MHI. Carry out the work following the instructions below.

This manual also contains information on the usage after installation,

so keep this manual properly with USER'S MANUAL provided with the indoor unit.



- $\cdot\,$ After unpacking, carry out this work on the ground.
- Do not carry out the work during operation, or there is a danger of being entangled in the rotating parts and getting injured.
- Clean the air filter regularly.
- Be sure to entrust qualified serviceman to performance on the air filter.
- · Be sure to cut off the power and stop the unit before performing maintenance.

(1) Table of filter kit parts No. and corresponding object models

	Small model	Medium model	Large model
Single type	40, 50	60, 71	100 - 140
Multi type	22 - 56	71, 90	112 - 160
Filter Kit	UM-FL1EF	UM-FL2EF	UM-FL3EF


(2) Parts list of filter kit

Filte	r	Rail	[Insulation
	1	i tali	~	moulation
1pc	;	2pcs		2pcs
Bracket	Parts set (screw)			
	00 00 00 00 00	} ♀ } ♥		କ୍ ତ୍ ତ୍ କ୍ କ୍
	small and model	: 5pcs.] ¦	larg	e model : 7pcs.
1pc		1pc		

PJZ012D076A


(3) Installation Points

1) Stick the insulation on both inner sides of the duct, leaving no space up and down.

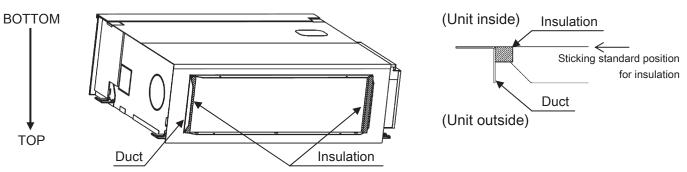


(*) After unpacking, bottom side of the unit is located at the upper side.


2) Install the rail on both inner sides of the duct with the screw.

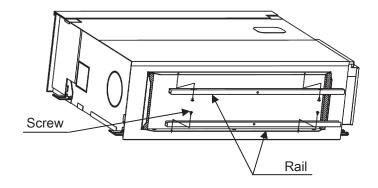


3) Install the air filter on the rails.

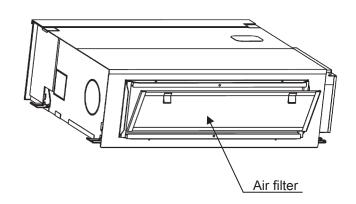

4) Install the bracket on the rail with the screw.

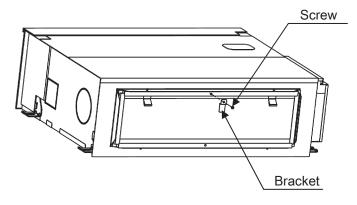

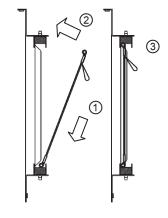

Installation procesure

(**) When the unit is installed, bottom side of the unit is located at the lower side.

HYPER INVERTER PACKAGED AIR-CONDITIONERS

MITSUBISHI HEAVY INDUSTRIES, LTD.

Air-Conditioning & Refrigeration Systems 16-5, Konan 2-chome, Minato-ku, Tokyo, 108-8215 Japan http://www.mhi.co.jp

Because of our policy of continuous improvement, we reserve the right to make changes in all specifications without notice. © Copyright MITSUBISHI HEAVY INDUSTRIES, LTD.